

CLEAN

456789
321010
GAIN

BRIGHT
•

456789
321010
VOLUME

456789
321010
BASS

456789
321010
MID

456789
321010
TREBLE

RHYTHM

456789
321010
GAIN

BRIGHT
•

456789
321010
VOLUME

456789
321010
BASS

456789
321010
MID

456789
321010
TREBLE

INPUT

×

LEAD

456789
321010
GAIN

BRIGHT
•

456789
321010
BASS

456789
321010
MID

456789
321010
TREBLE

456789
321010
VOLUME

456789
321010
PRESENCE

CHANNEL
SELECT

•

•

•

POWER