

## DVD-9000/3800 Setup Tips

The following setup guidelines are required for the DVD-9000/3800 players to work to their fullest potential in the audio playback of not only DVD-Audio material but DVD-Video material as well.

Setup of the players is relatively straight forward, except for DVD-Audio playback, where you must setup the Bass Management and Pure Direct functions.

- Accessing the 'Setup' function of the player, toggle to the 'Audio Setup' screen (page 4 of 6). Toggle down to 'Audio Channel' and highlight 'Multi Channel', press 'Enter'.
- You will be shown a screen display labeled 'Speaker Setup', where you will configure the unit to your speakers. Select 'Large', 'Small' or 'None' depending on your particular speaker configuration. Selecting 'Small' engages the 80Hz crossover. Note that selecting 'Large' for the Front Channels will allow you to select 'Large' for the other speakers in your system. We recommend setting all speakers to 'Small' unless you are using speakers that have built-in subwoofers, and they are connected to your receiver/amplifier by only speaker wire.
- Also on this screen, you will also be able to defeat a special 'Filter' which is for discs from Chesky and others recorded in 6.0, not 5.1. Toggle on/off depending on the apparent lack of bass response when playing certain discs.
- You must then setup the 'Pure Direct Modes' on the 9000/3800. This is done by depressing the button on the remote labeled 'Pure Direct Memory'; you will see the on-screen display for this function. In 'PDM' you can determine which circuitry to leave 'On' or turn 'Off', like digital output, video output and the front display.
- With Mode 1, we recommend to leave 'On' the digital and video circuits, the display is your choice. The 'Pure Direct Mode 1' would be selected for DVD-Video/CD/CD-R/RW/MP-3 playback, by the knob on the front panel of the 9000/3800.
- With 'PD Mode 2', the only setting we suggest changing is the digital, change from 'On' to 'Off', the others are user preference. 'Pure Direct Mode 2' would be selected for DVD-Audio and/or DVD-Video 24/96 Music playback (Chesky or Classic DADs). Users would adjust the 'Pure Direct Mode' knob upon changing of the different disc format type.
- If you do not setup the 'Pure Direct Modes' and leave the selector in the 'Off' position, DVD-V/CD/CD-R/RW/MP-3 discs will play fine, however DVD-Audio discs (copy protected or not) may not play in Multi-Channel format.