

IR CODE (DVD-9000/3800)

Channel CH	Data													Key Name
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	
1	0	0	0	1	0	1	0	0	0	0	0	0	1	0
2	0	0	0	1	0	0	1	0	0	0	0	0	1	1
3	0	0	0	1	0	1	1	0	0	0	0	0	1	2
4	0	0	0	1	0	0	0	1	0	0	0	0	1	3
5	0	0	0	1	0	1	0	1	0	0	0	0	1	4
6	0	0	0	1	0	0	1	1	0	0	0	0	1	5
7	0	0	0	1	0	1	1	1	0	0	0	0	1	6
8	0	0	0	1	0	0	0	0	1	0	0	0	1	7
9	0	0	0	1	0	1	0	0	1	0	0	0	1	8
10	0	0	0	1	0	0	1	0	1	0	0	0	1	9
11	0	0	0	1	0	0	0	1	1	0	0	0	1	+10
12	0	0	0	1	0	1	0	1	1	0	0	0	1	SUBTITLE
13	0	0	0	1	0	0	1	1	1	0	0	0	1	AUDIO
14	0	0	0	1	0	1	1	1	1	0	0	0	1	ANGLE
15	0	0	0	1	0	0	0	0	0	1	0	0	1	OPEN/CLOSE
16	0	0	0	1	0	1	0	0	0	1	0	0	1	MENU
17	0	0	0	1	0	0	1	0	0	1	0	0	1	RETURN
18	0	0	0	1	0	0	0	1	0	1	0	0	1	REPEAT MODE
19	0	0	0	1	0	0	0	0	1	1	0	0	1	A.FWD(SKIP)
20	0	0	0	1	0	1	0	0	1	1	0	0	1	A.REV(SKIP)
21	0	0	0	1	0	0	1	0	1	1	0	0	1	M.FWD(SLOW/SEARCH)
22	0	0	0	1	0	1	1	0	1	1	0	0	1	M.REV(SLOW/SEARCH)
23	0	0	0	1	0	1	0	1	1	1	0	0	1	STILL/PAUSE
24	0	0	0	1	0	0	0	0	0	0	1	0	1	PLAY
25	0	0	0	1	0	1	0	0	0	0	1	0	1	STOP
26	0	0	0	1	0	0	1	0	0	0	1	0	1	PROGRAM/DIRECT
27	0	0	0	1	0	1	1	0	0	0	1	0	1	CLEAR
28	0	0	0	1	0	1	1	1	0	0	1	0	1	DISPLAY
29	0	0	0	1	0	0	1	0	1	0	1	0	1	RANDOM
30	0	0	0	1	0	0	0	1	1	0	1	0	1	↑
31	0	0	0	1	0	1	0	1	1	0	1	0	1	↓
32	0	0	0	1	0	0	1	1	1	0	1	0	1	→
33	0	0	0	1	0	1	1	1	1	0	1	0	1	←
34	0	0	0	1	0	1	0	0	0	1	1	0	1	POWER ON
35	0	0	0	1	0	0	1	1	0	1	1	0	1	V.S.S.
36	0	0	0	1	0	1	1	1	0	1	1	0	1	NTSC/PAL
37	0	0	0	1	0	1	0	0	1	1	1	0	1	MARKER
38	0	0	0	1	0	0	1	0	1	1	1	0	1	A-B REPEAT
39	0	0	0	1	0	1	1	0	1	1	1	0	1	ENTER
40	0	0	0	1	0	0	0	1	1	1	1	0	1	SET UP

IR CODE (DVD-9000/3800)

Channel CH	Data													Key Name
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	
41	0	0	0	1	0	1	0	1	1	1	1	0	1	TOP MENU
42	0	0	0	1	0	0	1	1	1	1	1	0	1	CALL
43	0	0	1	0	0	0	1	1	1	1	0	0	1	SEARCH MODE
44	0	0	1	0	0	1	1	1	1	1	0	0	1	ZOOM
45	0	0	1	0	0	0	0	0	0	0	1	0	1	PICTURE ADJUST
46	0	0	1	0	0	1	0	0	0	0	1	0	1	DIMMER
47	0	0	1	0	0	0	1	0	0	0	1	0	1	AUDIO MODE PRESET
48	0	1	1	0	0	1	0	1	1	1	1	1	1	PAGE (-)
49	0	1	1	0	0	0	1	1	1	1	1	1	1	PAGE (+)
50	0	1	1	0	0	0	0	0	0	0	0	1	1	POWER OFF