

**AUTOFOCUS MODE**

*(LEFT button + command dial)*

- AF OS: One-Shot
- AF AI: AI-Focus
- AF OF: manual \*
- AF SE: AI-Servo \*

**FEC (Flash Exposure Comp)**

*(JUMP button + command dial)*

**SET Button (CFn1)**

- Quality (resolution)
- Parameter
- Menu
- Image Replay

**ISO 3200 Speed**

- displays as "H"

**CUSTOM FUNCTION MENU**

**CFn1: SET button**

**0: default, no function**

- 1: Change quality
- 2: Change parameters
- 3: Menu display
- 4: Image replay

**CFn2: Shutter Release**

**0: Possible w/o CF card**

- 1: Must have CF card

**CFn3: Av Flash Sync**

**0: Auto**

- 1: 1/200 sec (fixed)

**CFn4: Shutter/AE Lock buttons**

\* doesn't work (**default = 0**)

**CFn5: AF Assist Beam**

\* doesn't work (**default = 0**)

**CFn6: Exposure Increments**

**0:  $\frac{1}{2}$ -stop**

- 1:  $\frac{1}{3}$ -stop

**CFn7: AF Point**

\* doesn't work (**default = 0**)

**CFn8: RAW + JPEG size**

**0: RAW + small, normal**

**1: RAW + small, fine**

**2: RAW + medium, normal**

**3: RAW + medium, fine**

**4: RAW + large, normal**

**5: RAW + large, fine**

**CFn9: Bracket sequence**

\* doesn't work (**default = 0**)

**CFn10: Superimposed display**

\* doesn't work (**default = 0**)

**CFn11: Menu button display**

\* doesn't work (**default = 0**)

**CFn12: Mirror Lockup**

**0: disable**

**1: enable**

**CFn13: Assist Button Function**

\* doesn't work (**default = 0**)

**CFn14: Fill Flash Auto Red.**

\* doesn't work (**default = 0**)

**CFn15: Shutter Curtain Sync**

\* doesn't work (**default = 0**)

**CFn16: Safety Shift (Tv, Av)**

\* doesn't work (**default = 0**)

**CFn17: Mirror Lockup Pause**

**0: 1.5 sec**

**1: 3.0 sec**

**2: 4.5 sec**

**3: 6.0 sec**

**4: 7.5 sec**

**5: 10 sec**

*Default values shown in bold.*

*Reset to default values prior to*

*flashing back to Canon*

*firmware.*