

Choose the Alert Type	1 Select the Alert Type menu (Menu 5.3). 2 Select an option: • Light Only • Melody • Vibration • Vibra+Melody 3 Press the Select soft key.	Search for a Number in Phone Book	1 Press the Name soft key. 2 Select the Search option. 3 Enter the first few letters of the name. 4 To scroll through the names, press the Up or Down key. 5 Press the View soft key. 6 To scroll through the numbers, press the Up or Down key. 7 Press the  key to dial.
Store Numbers in Phone Book	1 Enter the number and press the Save soft key. 2 Select a number category. 3 Press the Select soft key. 4 Select a memory. 5 Press the Select soft key. 6 Enter the name. 7 Press the OK soft key. 8 If necessary, change the location number. 9 Press the OK soft key. 10 Press the  key to return to Idle mode.	Take a Photo	• With the folder open 1 Press and hold the Up or Camera key. 2 Press the Up or Camera key. 3 Press the Save soft key. • With the folder closed 1 Press and hold the Camera key. 2 Press the Camera key.

SGH-E715 GPRS Telephone Quick Reference Card

Access the Menu Functions	1 Press the Menu soft key. 2 Scroll using the Up and Down keys through the list of the menus until you reach the menu you want. 3 Press the Select soft key. 4 Scroll using the Up and Down keys through the list of the options until the one you want is selected. 5 Press the Select soft key.
Each of the two soft keys ( and ) perform the function indicated by the text above it, on the bottom line of the display.	

Switch On/Off	Press and hold the  key.
Make a Call	1 Enter the number. 2 Press the  key.
End a Call	Briefly press the  key.
View Missed Calls Immediately After Missing Them	1 Open the phone and press the View soft key. 2 Scroll using the Up and Down keys through the missed calls. 3 To return the call, press the  key.
Answer a Call	Open the phone or Press the  key.
Adjust the Volume	Press the  or  key on the left side of the phone.