



Home Station ADSL Freedom in a box

Installation guide









This guide describes the process of setting up your Internet connection. You will enjoy your connection in a easy, simple and quick way. Please follow the guides' instructions carefully step by step.

Moreover the Help CD includes a video file in digital format with a animated graphic help of the installation and configuration of your Internet connection: (Menu_CD.exe).

Package contents

The numbers below from (1) to (8) are used along this guide as a reference.

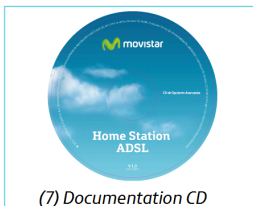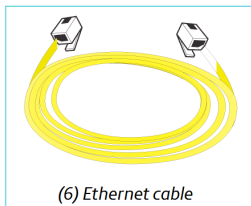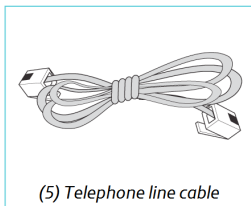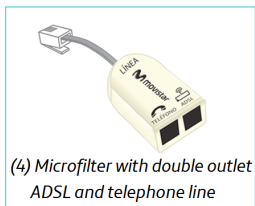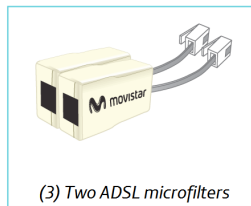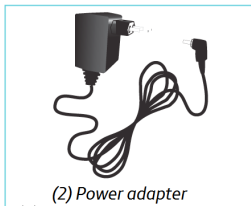


Warning: after after completely unpacking the equipment, fold back the antenna and then gently rotate them vertically (1), taking care not to break them.

Installing your ADSL...

1. Equipment Installation


Step 1. Locate the telephone socket where later will be placed "Home Station ADSL". Try to find one near the place where you use Internet.

Step 2. In the telephone wall socket, plug directly the "microfilter with double output" (4). If you had a phone, plug into the socket of the microfilter that has the telephone label: ☎

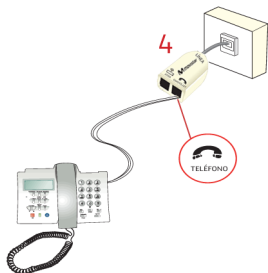

Step 3. Plug there the grey telephone cable (5) included inside the box to the free socket of microfilter with ADSL label: ☎

Step 4. Finally connect the grey cable to the "Home Station" (1) into the back grey socket labeled as "ADSL".

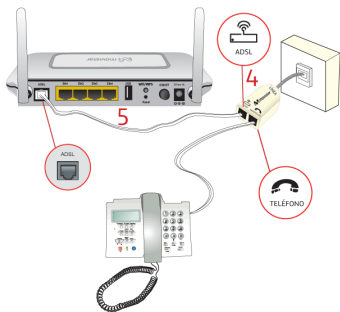


2. Telephone plug connection

On all other sockets where you have telephony terminal (phone, fax, etc), it is important to connect one "microfilter" too (3), as in the picture bellow.



3. Power adapter connection

Plug the power adapter (2) into the mains supply and into the **12V-1A** connector of the Home Station ADSL.

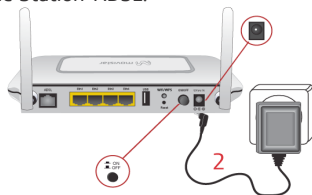


Place your machine on a smooth level surface (not on canvas), clear and open, avoiding closed cabinets. Make sure it is away from heat sources or radiators, or in direct sunlight.



Warning: Remove protective plastic covering the equipment.

 4. Switch on the router



Power on the router "Home Station ADSL" by pressing the switch in the back side to the **ON** position. Wait a few minutes until the LEDs stay green as in the table below:

Light	Expected Status	Description
Power	Static green	Equipment started correctly. If it's red, wait until router startup process is finished.
Ethernet	Off	Cable network on stand-by (Ethernet). If green color, there is at least one equipment connected by cable.
Wifi	Static green	Status of the wireless connection (Wifi). For advanced users there is a black Wifi button on the back.
WPS	Static green	Easy mode for wireless connection with computer (WPS). If green blonk, can connect PC withput introducing password. If solid red, took 2 minutes withpout tryes.
3G	Off	USB port status. If green, has been detected external disk, printer or 3G device.
ADSL	Static green	Connection established with the Local Exchange. It blinks while up to 4 minutes trying to connect to Local Exchange.
Internet	Static green	There is available one IP address to surf Internet. When blinking in red/green, wait until the firmware upgrade finishes.

Movistar can make a remote update of your equipment to offer you a better service, specially in the initial installation. During this update process the Internet indicator (first one of the right) will blink in green and red about 6 minutes. Please wait until it finished and do not switch off.



The routers provided by **Movistar** are optimized so they can establish the connection with Internet without any need for installations or configurations.

When the Internet LED is solid green means that the router was able to connect to the Internet properly. Continue to next page to connect your computers.



Warning: don't turn off your router "Home Station ADSL" while upgrading in progress because it can result in damaged equipment.

Connect to your ADSL...

You can connect your computer to the router using an Ethernet cable if they are sufficiently close to each other (option B) or by means of a wireless network (option A). Furthermore, you can simultaneously have some connected by cable and others through wireless.

5. Connection using wireless network.


Step 1. Check that your computer has one “wireless adapter” (WiFi). Usually laptops and smartphones already include one, while desk computers often require an external USB dongle for WiFi connection (as in the right picture).



Step 2. Check the “WiFi” LED light in the “Home saturation” (1) that must be static green color, as in the table of the previous page (otherwise read the FAQ).



Paso 3. Write down the information of your wireless network, shown on the label placed in the bottom of the router (the name is printed as “identificador SSID” and the key is “clave”). The right picture shows burry data, because each router has its own name and password.

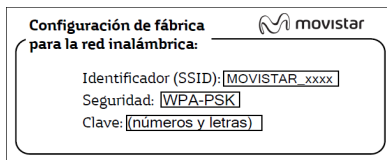


Warning: write it down carefully – there are numbers and letters.

Step 4. Be sure that Home Station antenna are placed parallel and vertical as described in page 3

Step 5. There are different scenarios for configuring the computers into your wireless network, described in the following pages:

- Using WPS button,
- Windows XP,
- Windows Vista
- Windows 7
- Windows 8

Connecting using WPS button


To use this method, the adapter you have in your computer must support WPS. It usually has a button labeled "WPS" (see manufacturer's manual). You must find "WPS" button like: 



Otherwise, if you do not find the button, continue to the following sections "Connecting using Windows wireless client".

On your computer you should press the "WPS" of your wireless client for several seconds (see the manufacturer's manual).

In the "Home Station" (1), click the "WiFi / WPS" button on the back for **five** seconds. The light "WPS" blinks.

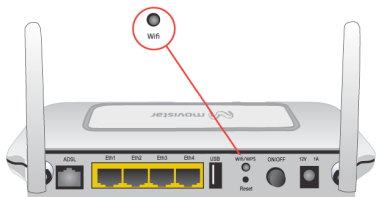

After a few seconds the association will end successfully without input manually the password.


Conversely, if the light "WPS" of the router continues to flash (up to two minutes), means that the process was not successful. You can start again from the beginning.




Warning: The Wifi LED should be always in green color.

Connecting with wireless client Windows XP


In Windows XP, please click with the right mouse button on the icon of "wireless network connection", as in the image below. In the menu select "View Available Wireless Networks".

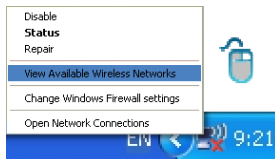

A list of nearby networks will pop up. Please find your network in the list, you wrote down its name in the "Step 3" on the previous page (the "SSID" on the back label of the router).

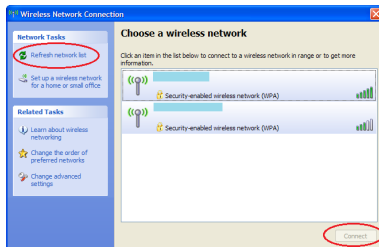


Finally enter the key, write it carefully as it appears on the label.

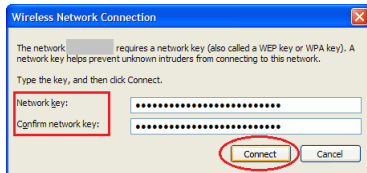


Connecting with wireless client Windows Vista

 In Windows Vista, please click on the icon "internet access", and select "connect or disconnect", as shown in the picture.




Then search your network from the list, you wrote down its name in "Step 3" on the previous page. Select it and press "connect".

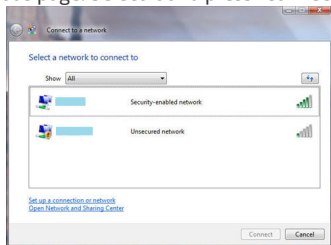

Connecting with wireless client Windows 7

In Windows 7, please click with the left mouse button on the icon of "internet access", as shown in the next picture.

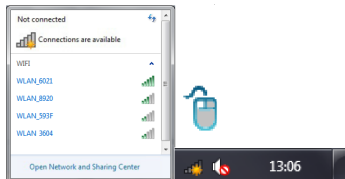


The list of nearby networks will pop up. Please find your network in the list, you wrote down its name in the "Step 3" on page 6 (the "SSID" on the back label of the router).

Then select your network with the mouse. Just below you will see a "connect" button, click it and continue to the next step.

Final step: enter the password or click the button on the router (common for Vista and 7)

When you have a message asking for the password to connect, you will see also the option of using the "router button", as shown in the image below. Then press the black button for 5 seconds "WiFi / WPS" on the back of the router. The light of "WPS" flashes for a few seconds.

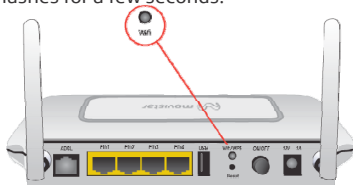


Alternative: if you cannot connect using WPS button, enter the key carefully and click OK, use the same key you wrote down in step 3 on page 6.

Attention: If the "Wifi" LED in the router has been switched off, press for 1 second the black button on the back labeled as "Wifi / WPS" to activate it again.




Connecting using Windows 8


Drag the mouse (or finger) to the upper right corner of the screen. In the gray bar select "settings".

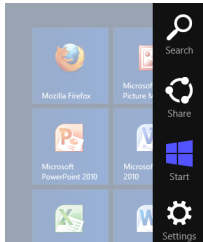

In the configuration below, select the available wireless network, like in the picture.

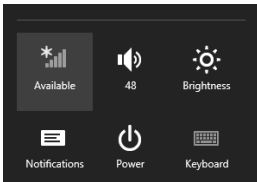


Find your network in the list and click "connect", you wrote down the name of the network in the "Step 3" on page 6.

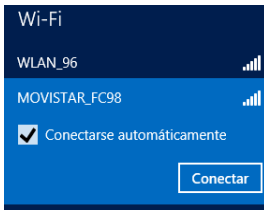

Finally at Home Station (1), press the "Wifi / WPS" black button for 5 seconds. Check "final step" on the previous page.

6. Ethernet cable connection

Connect the yellow wire (6) to the computer Ethernet card and then to one of the router's yellow connectors labeled Eth 1-4.

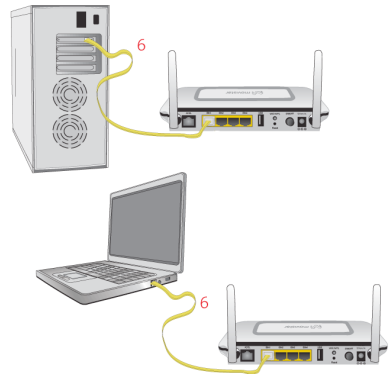

Finally turn on your computer. The light "Ethernet" will turn to green after a few seconds. This indicator flashes when there is activity.



Congratulations, now you can access Internet using your ADSL !

Open your browser, go to the web address www.movistar.es and start surfing the network. If you still have problem to access, please see refer to the Solutions to Frequent Problems in this guide.

Activate your free e-mail accounts and your website with the Internet access service contracted.

Once you have accessed www.movistar.es, you can activate your mail account. After typing in the initial user ("identificador") and password ("contraseña") provided in the letter with the service data or the one obtained calling 900 50 20 10 from the telephone line where you have installed the ADSL service, you will access a website where you can publish your personal web pages.

Protect your PC

Once you are connected to the ADSL service we strongly recommend you to protect your PC against Internet viruses or attacks. If you wish to do so, you can contract these services (Antivirus PC, Anti-trojan PC, Security pack PC, etc.) at www.movistar.es, calling 1004 or through your usual channel.

Help CD and documentation

The CD is not required to install your ADSL.

In the CD you will find additional material to solve your needs about your connection to Internet ADSL

Help for connection:

Graphic help will guide you throughout the whole installation process for connecting to Internet and advanced configuration of ADSL service.


Additionally you will find a test that will help you to find out why you can not connect to Internet from your PC.

Additional Configuration:

The equipment supplied by Movistar doesn't require any additional configuration but, if you wish to, you can change advanced parameters when you are connected to the "Home Station". Please refer to the next page of this guide.

Documentation and manuals:

It includes more detailed information about additional tools and aspects related to your connection to Internet

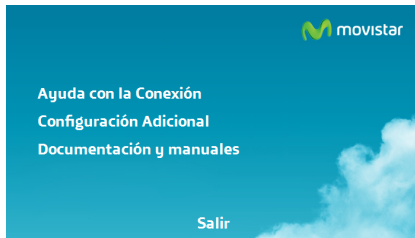

Advanced configuration options

You can configure advance options like change router password, open ports, etc. There are several possibilities for setting the advanced configuration options of the equipment:

- By using the remote configuration web portal of Movistar⁽¹⁾ accessible via the address www.movistar.es/configuramirouter
- By accessing the web portal of the router, in the address <http://192.168.1.1>



More information about the remote configuration web portal and the router's web portal is found in the manuals included in the Help CD.

Solution of common problems (FAQ)

Problem	Reason	Solution
The connection drops when the phone is off hook.	There is no microfilter between the phone and the phone socket	Check that there is a microfilter installed between each telephony device (phones, faxes...) and services using the telephone line (alarms, etc.) and the phone socket (see step 1 of section "Start using your ADSL..." of this guide).
The Ethernet LED does not light up	The Ethernet cable is not properly connected (this a problem only if you have decide to connect by cable and not by wireless).	Check that the Ethernet cable is connected correctly to the Ethernet yellow connector of the router and Ethernet card connector of your computer (see section "Start using your ADSL..."), or replace the cable by a new one if necessary. Also make sure that Windows driver is enabled
The ADSL LED blinks slowly in green	The telephone line cable is not correctly installed.	Check that telephone line cable is correctly connected to the ADSL connector and to the outlet of the dual outlet microfilter labeled as "ADSL" (see step "2 connection to telephone line" of this guide).
Telephone calls are interrupted or too much noise is heard	There is no a microfilter between the phone and the phone socket	Check that there is a microfilter installed between each telephony device (phones, faxes...) and services using the telephone line (alarms, etc.) and the phone socket (see step 1 of section "Start using your ADSL..." of this guide).
	You have installed simultaneously more than 3 microfilters. This affects the quality of telephone service	Disconnect some of telephony devices (phones, faxes...) or services using the telephone line(alarms, etc.)
I cannot access Internet Internet LED is red color.	The firewall in your equipment is preventing the connection	Check that you have a firewall installed, antivirus or security suite, preventing connections to internet. Configure your firewall to enable web browsing, following the instructions from the manufacturer.
	You have contracted static IP addressing instead of dynamic	Review the documentation included in the box for specific instructions on this case. Also read section 5 "Advanced configuration" in the user's guide included in the documentation CD.
	The TCP/IP protocol is not correctly installed for the network driver used	You must make sure that TCP/IP is correctly installed for the network driver to which the router is connected. Consult the Guide of Ethernet card and TCP/IP included in the documentation CD.
	Sometimes the computer does not receive correctly the IP address, the Gateway or the DNS server data through DHCP because the computer and router are not turned ON simultaneously.	It is recommended to restart both devices router and computer, first the router and then the computer.

Solution of common problems (FAQ)

Problem	Reason	Solution
I do not have any icon of wireless client in Windows.	Your wireless client is not correctly installed or configured	Make sure that you have a wireless client correctly installed and enabled (either USB or integrated). More information in the manual of the device
In the client management wireless application does not show among the available networks the one corresponding to my router (the one in the label).	The wireless network is disabled in the router.	Check that the wireless network of your router is enabled: the WiFi LED must be lit in green color. If not, press for 1 second the black button "WiFi/WPS" located in rear part of the router.
I cannot connect with the wireless network of the router.	You are not indicating correctly the network identifier (SSID) when connecting to it.	Check that you are using the same network identifier (SSID) throughout the network. Remember that you have to distinguish case sensitive.
	You have not configured correctly the encryption used in the wireless network when connecting to it	Check that you are using the same type of encryption and the same key in all network elements. Remember that in case of using WEP encryption, you will have to select and configure the key number 1 in the configuration of wireless clients
	The TCP/IP properties of your wireless client are not configured to receive IP via DHCP.	Make sure that the TCP/IP properties of the network driver for your wireless client are configured to receive the IP dynamically (via DHCP). Refer to the assistance given in your operating system
.The connection with the wireless network is cut off frequently. The quality of the connection is not good.	Interference is being caused by other existing wireless networks.	Put the router away from sources of interference. If there is interference in that channel, select a different one. If there are other networks wireless operating in the same area, we recommend setting networks with 5 channels of separation, or choosing the least impact causing (least saturated channel, i.e., the channel where there fewer wireless networks) See the manual "Recommendations wireless network" included in the advanced options CD
	The wireless network signal is weak because the router is located in a place that is not very accessible or very far	Place the wireless router in a clear site. Remember it is advised that there must not by many obstacles between the router and the computers. Avoid wood or concrete walls. If there are still coverage problems, move the antenna position (but always keep them parallel).
My USB device is not working	Configuration problem or device not compatible.	Check that you have installed Windows XP with Sp2 or upper version. Go to the following address http://192.168.1.1:8000/ Make sure the printing option is enabled in the section: Advanced -> Network Tools -> Printer Check that share file option is enabled in the section: Advanced-> SAMBA.

See the user manual in Help CD for further details. If you cannot solve the problem, in the below section you will find information about customer care service

Customer Care

The customer care service is available via telephone as well as via Internet.

All the information about ADSL can be found in the "Internet" section at movistar.es:

www.movistar.es/adsl

Movistar technical customer care centers.

Home users: **1004**

Enterprise and professionals: **900 10 10 10**

(*) Additionally, to address any Warranty/Maintenance question you may contact the phone numbers mention above.

Additional information

Telefónica de España, S.A.U. informs

We thank you the trust to have acquired a Movistar product and we inform you that for any clarification, query or complaint, you can call for free:

- **Personal care line (1004)**
- **Care center for professionals and business (900 10 10 10)**
- **Business care center (900 12 09 00)**

Where you will be attended by our consultants or, if you prefer, visit Movistar web page:

www.movistar.es

For information about the after sales service, please see the equipment warranty card.

Finally, for written complaints regarding this sale, please contact with Telefónica de España S.A.U, Gran Vía 28, 28013 Madrid.

Environmental recycling

Do not dispose of this Home Station ADSL with your normal household waste. Ask your local authorities about the opportunities that are available for disposing of it correctly so that no damage is caused to the environment. Always comply with the applicable legal standards currently in force.

All offenders will be penalized or otherwise punished by Law.

Cardboard boxes, the plastic part of the packaging and the parts that constitute the device can be recycled in compliance with the standards currently in force in Spain where recycling is concerned.



The cross symbol on the container that is printed on the device, means that when the equipment has reached the end of its useful service life it must be taken to a special collection centre and that it must be processed separately from household waste.

DECLARATION OF CONFORMITY CE

Declarer:

Company Name
Address

ZTE Zhongxing Corporation SLU
Jose Bardasano Baos, 9, 4ºC
28016- Madrid (España).
91 384 7697
91384 6487
B85227544

Phone
Fax
CIF

Declare under its own responsibility that the product

Product
Brand Name
Model
Manufacturing Country
Manufacturer

Home Station ADSL ZTE
Telefónica
H108N
China
ZTE Corporation

Is conformity with the technical specifications that are applicable on the day of the date by R & TTE Directive 1999/5/EC of the European Parliament and the Council of 9 March 1999, transposed into Spanish law by Royal Decree 1890/2000 Of 20 November 2000 and in particular with the harmonized standards:

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services, Part 1: Common technical requirements	EN 301 489-1 V1.8.1
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment; Part 17: Specific conditions for Broadband Data Transmission Systems	EN 301 489-17 V.3.2
Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive	AEN 300 328 V1.7.1
Electromagnetic compatibility and Radio spectrum Matters (ERM); Telecommunication network equipment; Electromagnetic Compatibility (EMC) requirements	EN 300 386 V1.4.1
Information technology equipment - Safety - Part 1: General requirements	EN 60951:2006A11,1,12
Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields	EN 62311:2008
Radio disturbance characteristics - Limits and methods of measurement Immunity characteristics - Limits and methods of measurement	EN 5502:2001 A1 EN 5502:1998 A1,2
Electromagnetic compatibility (EMC). Limits. Limitation of voltage changes voltage fluctuations and flicker in public low-voltage supply systems Electromagnetic compatibility (EMC) - Part 3-2: Limits - Limits for harmonic current emissions	EN 61000-3-3:2008 EN 6100-3-2:2006 A1,2

It is also conformity with the Energy Efficiency Directive 2009/125/EC and Regulation ErP 278/2009 on ecodesign requirements for energy-related products

It is also in accordance with Royal Decree RD-208/2005 (Directive 2002/95) on electrical and electronic equipment and residues

Madrid, 19 November 2012



Sign. Peng Aiwu
General Manager



This equipment is ready to connect to the analog network of Telefonica de España, S.A.U., with access to ADSL service and its use is authorized only in Spain.

Glossary

ADSL:

Asymmetric Digital Subscriber Line. It is a digital line for accessing Internet at high speed.

Antivirus:

An application that detects and removes any computer virus and other malicious programs.

Ethernet Cable:

CA cable that is used to transmit data at high speed in Local Area Networks (LAN).

WEP Key:

A key that is used to authenticate a user who connects to a wireless network that uses this type of encryption (WEP). It permits encrypting of sent data.

Wireless client:

A hardware or software element that is used to connect to a network of computers without any kind of cable being used for the purpose.

Firewall:

A hardware or software that is used in a computer network to control and manage the network traffic, either allowing it or rejecting it, according to the network policies defined by the organization that manages the network. It may block the establishment of the connection to the Internet.

DHCP (Dynamic Host Configuration Protocol):

A protocol that allows the hosts of a network to obtain the IP configuration settings automatically.

Fixed / Dynamic addressing:

It indicates how Movistar assigns the IP address to your line. If every time that your router starts a session it can be assigned a different IP address, this indicates that your service includes dynamic addressing, which is the default type of addressing. However, if you are always assigned the same IP address, then your IP addressing service is fixed or static.

DNS (Domain Name System):

Domain Name Server. The server translates a domain name (the name of a machine) into its corresponding IP address.

Encryption or cryptography:

The science that enables one to encode and decipher information using techniques that make it possible to exchange messages in a safe and secure way, because they can only be read by the persons to whom they are addressed.

Web Space:

It is a service that enables the user to offer his or her own web sites or documents so that they will be accessible on the Internet.

Glossary

Microfilter:

It is an element which filters the ADSL signal and separate it from the phone signal, so that it is possible to make phone calls and surf at the same time without interruptions or drops.

Web browser or web explorer:

It is an application that enables the user to access and view hypertext document, commonly in HTML format, that is available on the Internet.

PCMCIA:

It is a hardware element that is normally used in laptop computers to expand their capacities. The most common case is that of wireless network adapters, which are of this type.

Ports:

Physical or logical connections for sending or receiving data. It allows a program to communicate via the network.

Socket:

A plug that is usually installed on the wall that enables the telephone cable to be connected.

TCP/IP (Transmission Control Protocol/Internet Protocol):

It is a set of network protocols upon which the Internet is based and which allow data to be transmitted between computer networks.

SSID (Service Set Identifier):

A code included in all the packages of a wireless network so that they can be identified as being part of that network. An SSID thus enables one to make a distinction between the different wireless networks that exist.

Discover more:

1004 (from fix or mobile phone)

+34 699 991 004 (From abroad)

Movistar Shops

www.movistar.es

Version: 1.1

Equipment supplied by: C.I.F.: B-85227544
Nº Registry REI-RAEE: 003078