

504 King:

Starting from Broadview Stn. to Dundas West Stn.

- West on Erindale to Broadview
- South on Broadview to Queen St. NA 275
- West on Queen St. to King St. NA 1
- West on King St. to Roncesvalles
- North on Roncesvalles to Dundas St. West
- North on Dundas to Dundas West Station NA 377.

King cars use the station platform

Return from Dundas West to Broadview

- South on Dundas to Roncesvalles NA 65
- South on Roncesvalles to King St.
- East on King to Queen St.
- East on Queen St. Broadview NA 3
- North on Broadview to Broadview Station

KING SHORT TURNS:

Dundas Street is an eastbound only short turn;

- North on Broadview to Dundas NA 276
- West on Dundas to Parliament St. NA 370
- South on Parliament to King
- Westbound as instructed

Parliament Street is an eastbound only short turn;

- East on King to Parliament St. NA 173
- North on Parliament to Dundas manual switch
- East on Dundas to Broadview NA 277
- South on Broadview NA 275 west as instructed

Church St. is an East or Westbound short turn:

- **Eastbound:** East on King to Church St. NA 168
- North on Church St. to Richmond St. manual switch
- West on Richmond to Victoria St. manual switch
- North on Victoria St. to Queen St. manual switch
- East on Queen St. to Church NA 228
- South on Church St. to King St. manual switch
- West as instructed
- **Westbound:** West on King to Church manual switch (MUST BE RESET)
- North on Church St. to Richmond St. manual switch
- West on Richmond to Victoria St. manual switch
- North on Victoria St. to Queen St. manual switch
- East on Queen St. to Church NA 228
- South on Church St. to King St. manual switch
- East as instructed

Spadina Ave. is an East or Westbound short turn:

- **Eastbound:** East on King to Spadina NA 328
- South on Spadina to Queens Quay NA 371
- East on Queens Quay to Spadina Loop NA 325
- North into Loop –layover for time NA 323
- North on Spadina to King NA 341
- **Westbound:** West on King to Spadina manual switch (MUST BE RESET)
- South on Spadina to Queens Quay NA 371
- East on Queens Quay to Spadina Loop NA 325
- North into Loop –layover for time NA 323
- North on Spadina to King manual switch to go east as instructed (MUST BE RESET)

Bathurst Street is an East or Westbound short turn:

- **Eastbound:** East on King to Bathurst NA 311
- South on Bathurst to Fleet St. NA 374
- West on Fleet to Fleet Loop NA 197
- Layover in Loop for time
- East on Fleet St. to Bathurst NA 375
- North on Bathurst to King, NA 312 to go west
- **Westbound:** West on King to Bathurst NA 241
- South on Bathurst to Fleet St. NA 374
- West on Fleet to Fleet Loop NA 197
- Layover in Loop for time
- East on Fleet St. to Bathurst NA 375
- North on Bathurst to King, NA 298 to go east

Dufferin Street is an East or Westbound short turn:

- **Eastbound:** East on King to Dufferin NA 319
- South on Dufferin to Springhurst Ave.
- West on Springhurst to Rouille St.
- South on Rouille to Loop Layover in Loop for time
- North on Dufferin to King, manual switches to go west
- **Westbound:** West on King to Dufferin NA 207
- South on Dufferin to Springhurst Ave.
- West on Springhurst to Rouille St.
- South on Rouille to Loop Layover in Loop for time
- North on Dufferin to King, manual switches to go east

Roncesvalles Yard is a westbound short turn:

- North on Roncesvalles to North Gate NA 187
- West into Yard, proceed around to NA 329, continue straight onto outside track.
- Continue around yard to NA 310 don't NA

- Continue to NA 318
- East to Roncesvalles NA 289
- South Roncesvalles as instructed

Note: These short turns are the common ones, Supervisors may use other turns at times.

Operator's restrooms are located at:


Broadview Station	Dundas West Station
Spadina Loop	Dufferin Loop
Roncesvalles Yard	



Enlargement of Dundas West Station:

504 King Routing

505 Dundas Routing

306 Carlton Nightcar Routing

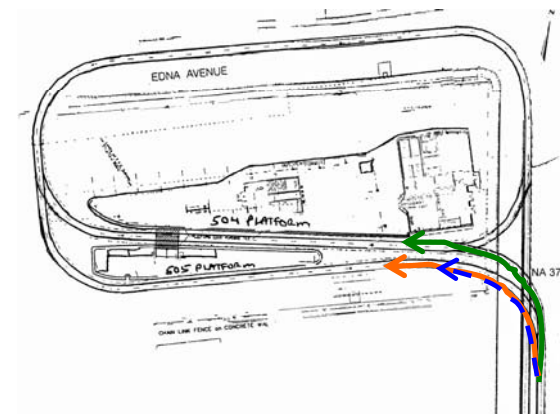

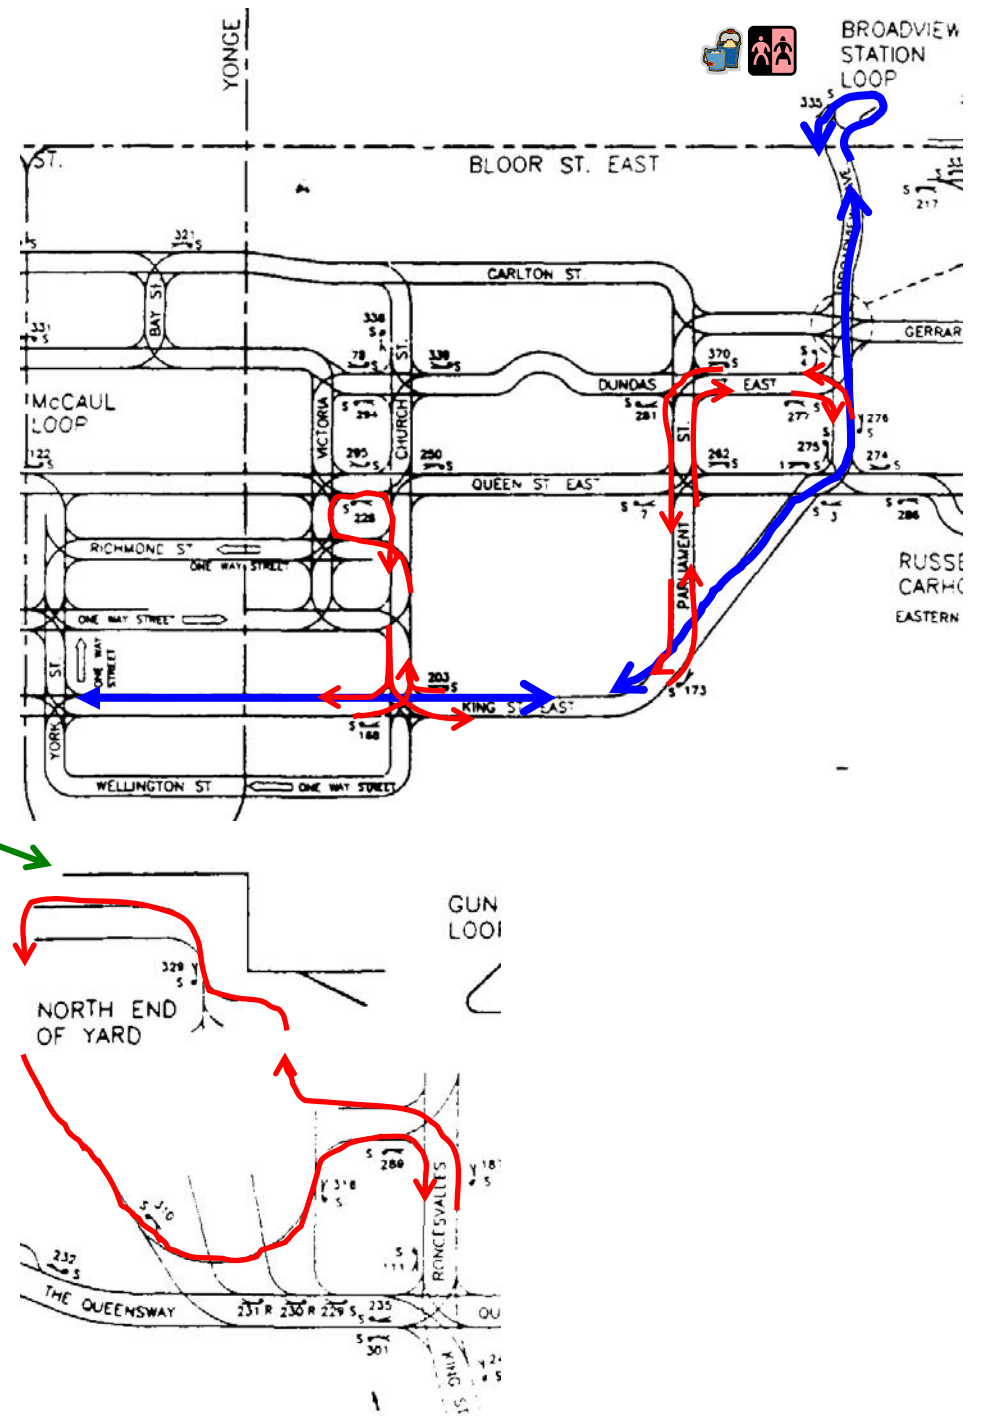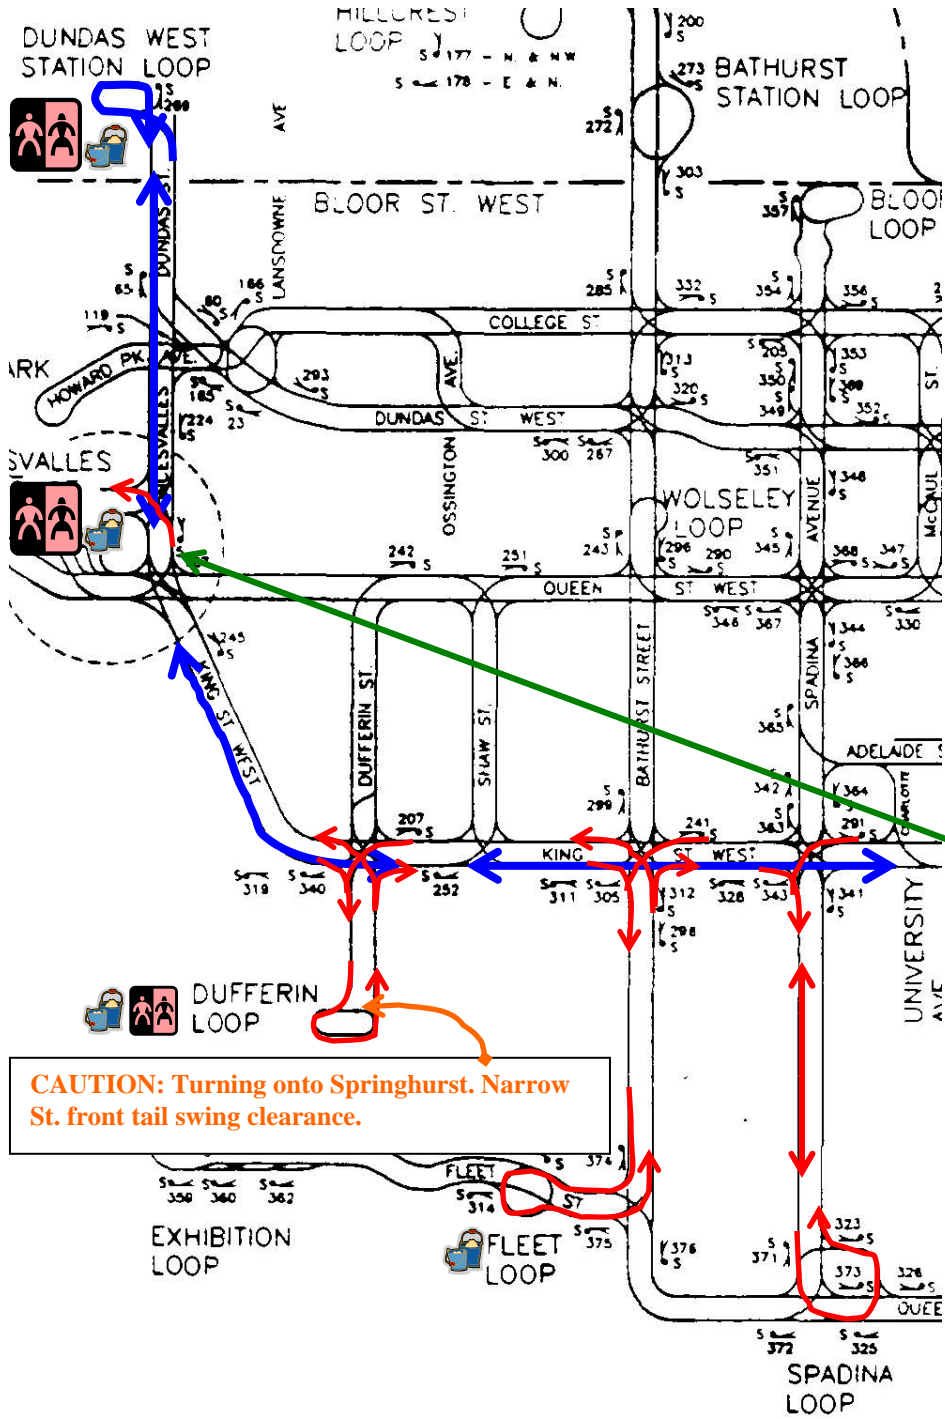

CAUTION: Turning onto Springhurst. Narrow St. front tail swing clearance.