

Pic programmer component setup TOP VIEW  
elcap polarity is in copper layout on bottom side.  
RED lines are wire bridges

