

RF Toolbox

Version 4.0.0

July 17, 2014

RF Toolbox is a program that allows you to quickly design antennas, as well as perform many useful RF, electronics, and electrical calculations.

It is not an antenna analysis package (like MININEC) in that it doesn't determine how an antenna design performs. Instead, you select the type of antenna and the desired characteristics, and RF Toolbox gives you the suggested design for the described antenna.

Why? Well, it's a lot faster for one (I'd say by a factor of several hundred times). That's the big benefit.

You can design several types of antennas. These types include:

- Dipole
- Fat Dipole
- Yagi
- Long Yagi
- J-Pole
- Super J-Pole
- Log Periodic
- Cubic Quad
- Vertical (over a ground plane)
- Helical

You can also perform the following additional calculations:

- LC calculations - by entering two of the following: L, C, frequency, the third is calculated.
- Coil design - by entering three of the following: L, diameter, length, number of turns, the fourth is calculated
- Transmission line loss - given the type of cable, length, and band, computes

the loss in dB, also computes the additional loss caused by SWR.

- L Network - L matching network
- Pi Network - Pi matching network
- Impedance - Calculate the impedance of a capacitor or inductor at a given frequency
- Wire inductance - Calculate the inductance of a straight piece of wire
- Wire resistance - Calculate the resistance of a length of wire, as well as the voltage drop
- Transmission Line Calculator - Handles many transmission line related calculations, including SWR and impedance transformations.
- db Calculator - Convert between dB and voltage/power ratios.
- Resistor Calculator - Calculate Required Series/Parallel Combinations
- Resistor Color Code Calculator - Determine the color code for a resistor
- Thermal Noise Calculator
- Pi Network Attenuator Calculator
- Tee Network Attenuator Calculator
- 555 Timer Oscillator Calculator
- RF Link Budget Calculator
- Skin Depth Calculator
- Gamma Match Calculator
- Zener Diode Calculator


Use:

Just select the desired antenna type from the Antennas menu, or calculation type from the Tool menu, and fill in the requested information.

That's it! It's really that simple.

The following pages show the design window for each of the calculators, and give a brief description of how to use them.

Dipole Antenna Calculator

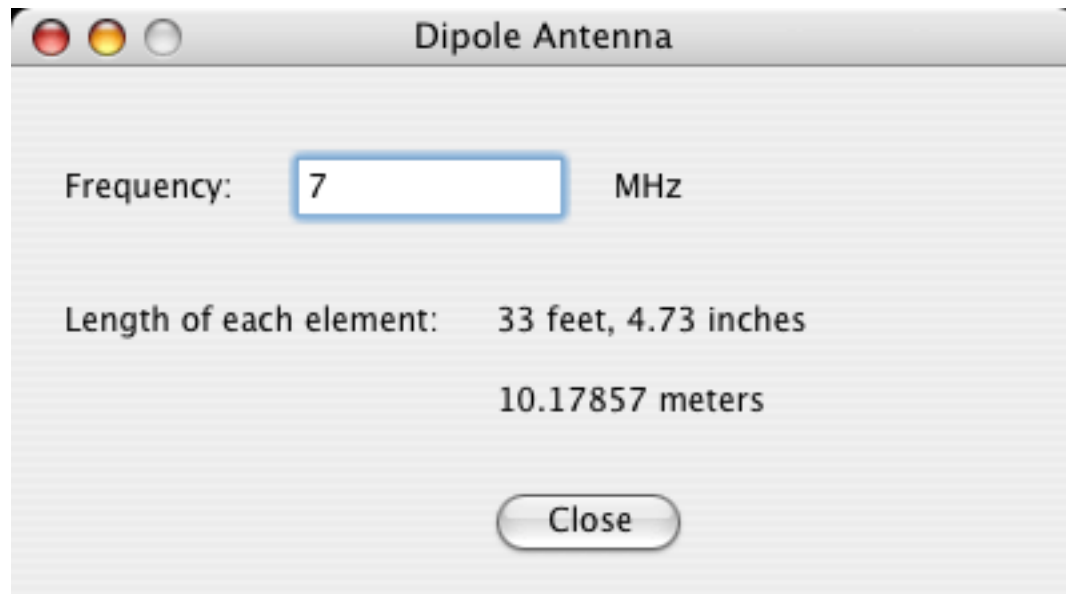


A screenshot of a software window titled "Dipole Antenna". The window has a standard macOS-style title bar with three colored buttons (red, yellow, grey) on the left. Inside the window, there is a label "Frequency:" followed by a text input field containing the number "7", and then the unit "MHz". Below this, the text "Length of each element:" is followed by two lines of output: "33 feet, 4.73 inches" and "10.17857 meters". At the bottom center of the window is a rounded rectangular button labeled "Close".

Input	Output
Frequency: 7 MHz	Length of each element: 33 feet, 4.73 inches 10.17857 meters

Enter in the desired resonant frequency in MHz, and the length of each element (side) is computed and displayed.

Fat Dipole Antenna Calculator

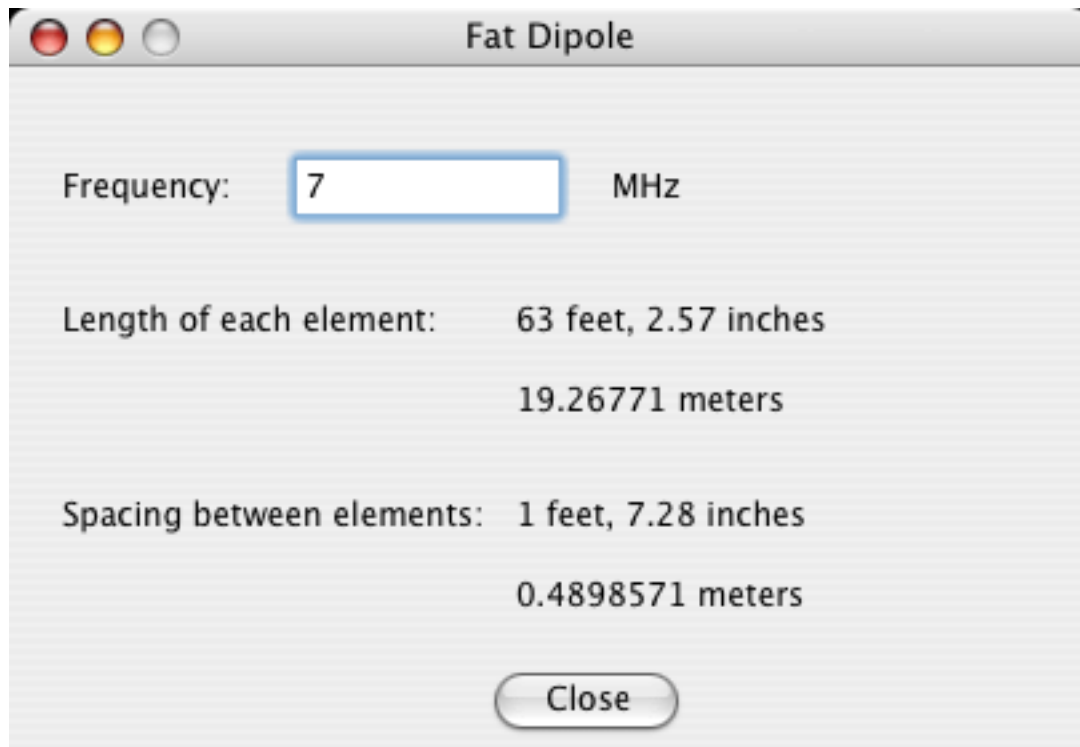

A screenshot of a software window titled "Fat Dipole". The window has a standard macOS-style title bar with red, yellow, and green window control buttons. Inside the window, there is a text input field for "Frequency:" containing the number "7", followed by the unit "MHz". Below this, the calculated "Length of each element:" is displayed as "63 feet, 2.57 inches" and "19.26771 meters". Similarly, the "Spacing between elements:" is displayed as "1 feet, 7.28 inches" and "0.4898571 meters". At the bottom center of the window is a "Close" button.

Input	Output
Frequency: 7 MHz	Length of each element: 63 feet, 2.57 inches 19.26771 meters
	Spacing between elements: 1 feet, 7.28 inches 0.4898571 meters

Enter in the desired resonant frequency in MHz, and the length of each element (side) is computed and displayed, as well as the necessary spacing between each element.


J Pole Antenna Calculator

The image shows a software window titled "J Pole Antenna". It features a text input field for "Frequency:" with the value "146" and the unit "MHz". Below this, a diagram of a J-pole antenna is shown. The antenna consists of a vertical mast, a horizontal base, and a shorter vertical whip. Dimensions are labeled in meters and feet/inches: the mast is 1.397 meters (4 feet, 7.03 inches), the whip is 0.465 meters (1 foot, 6.34 inches), the feed point offset is 0.07 meters (0 feet, 2.78 inches), and the spacing between the mast and whip is 0.089 meters (0 feet, 3.52 inches). A "Close" button is at the bottom.

Component	Dimension (meters)	Dimension (feet, inches)
Mast	1.397	4 feet, 7.03 inches
Whip	0.465	1 foot, 6.34 inches
Feed	0.07	0 feet, 2.78 inches
Spacing	0.089	0 feet, 3.52 inches


Enter in the desired operating frequency in MHz. The dimensions for the antenna elements are calculated and displayed.

Super J Pole Antenna Calculator

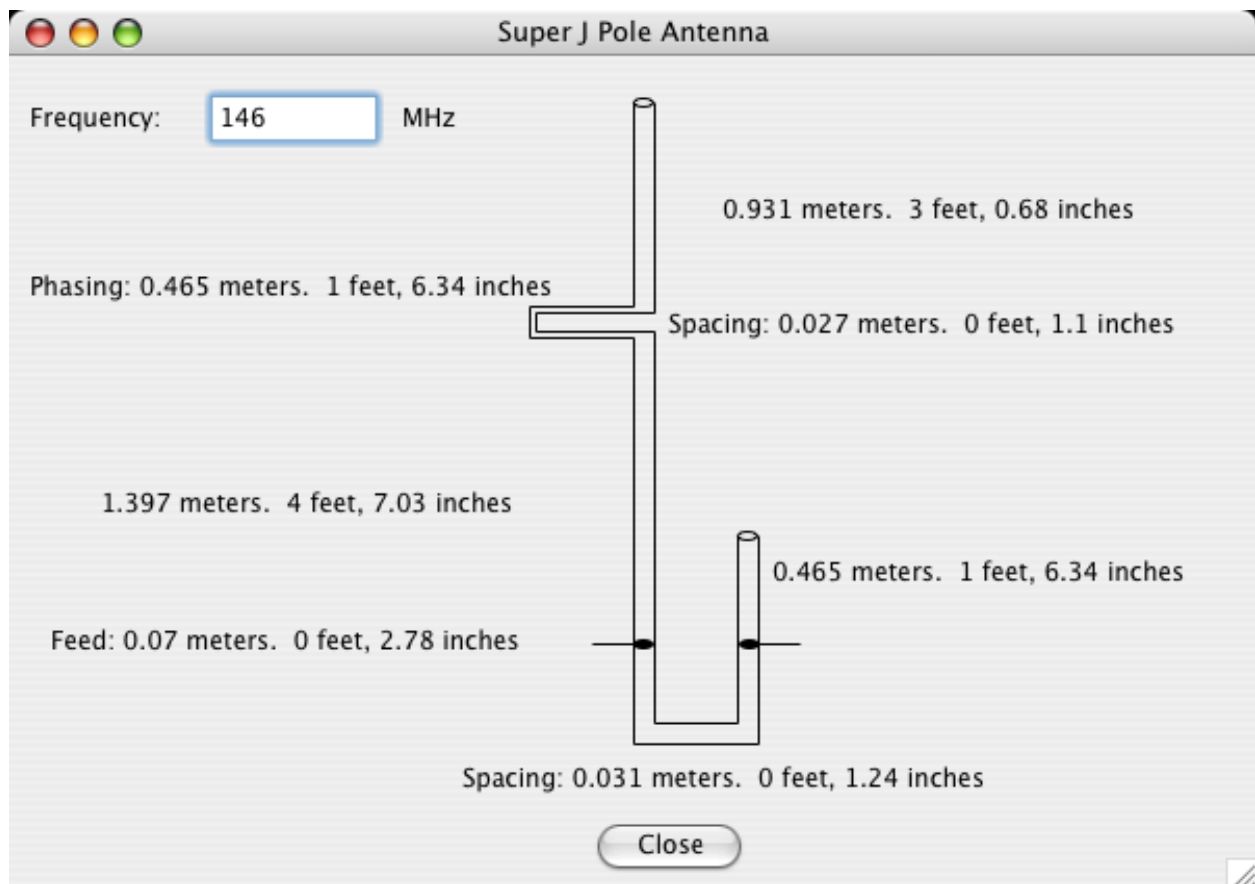

Enter in the desired operating frequency in MHz. The dimensions for the antenna elements are calculated and displayed.


Vertical (Ground Plane) Antenna Calculator

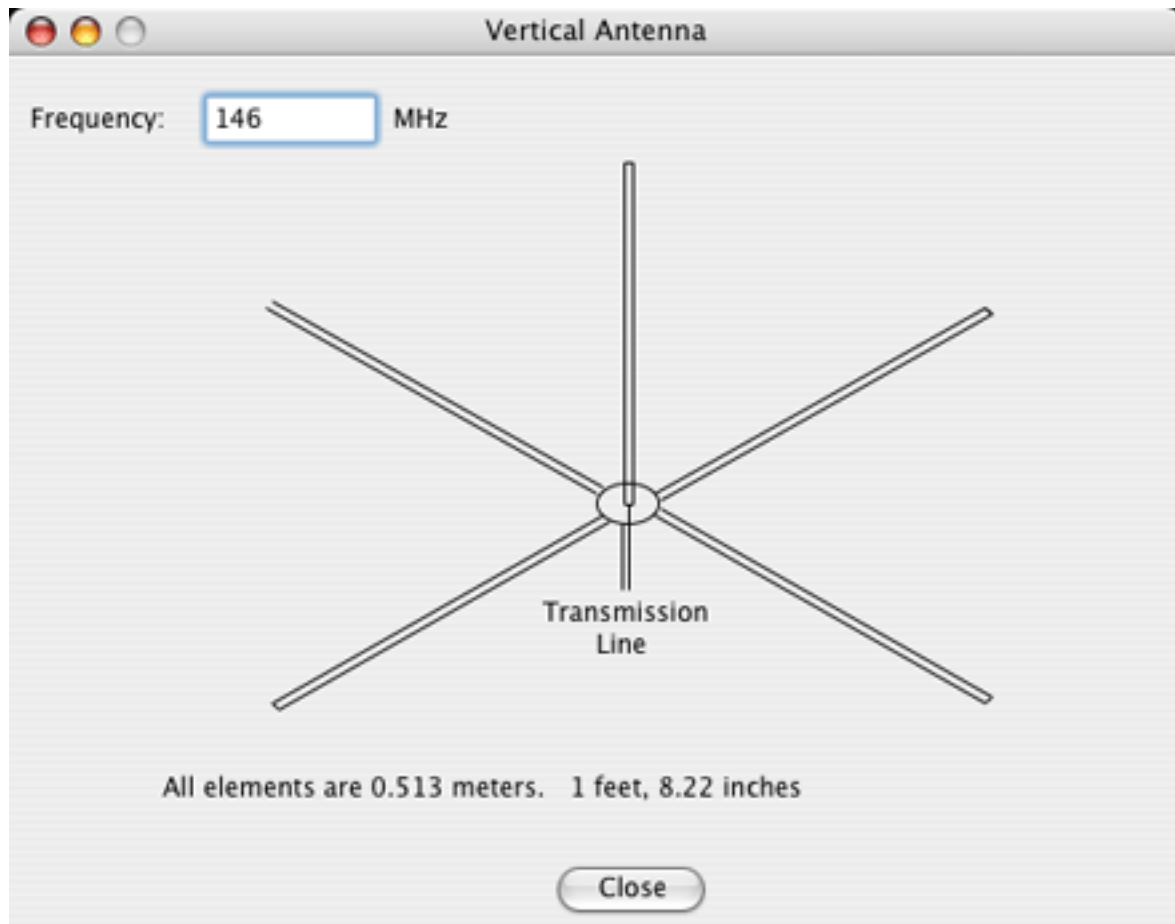

Enter in the desired operating frequency in MHz. The dimensions for the antenna elements are calculated and displayed. You can also change the type of antenna from the popup menu:

- 1/8 wavelength
- 1/4 wavelength
- 3/8 wavelength
- 1/2 wavelength
- 5/8 wavelength
- 3/4 wavelength
- 7/8 wavelength
- Full wavelength

Cubic Quad Antenna Calculator

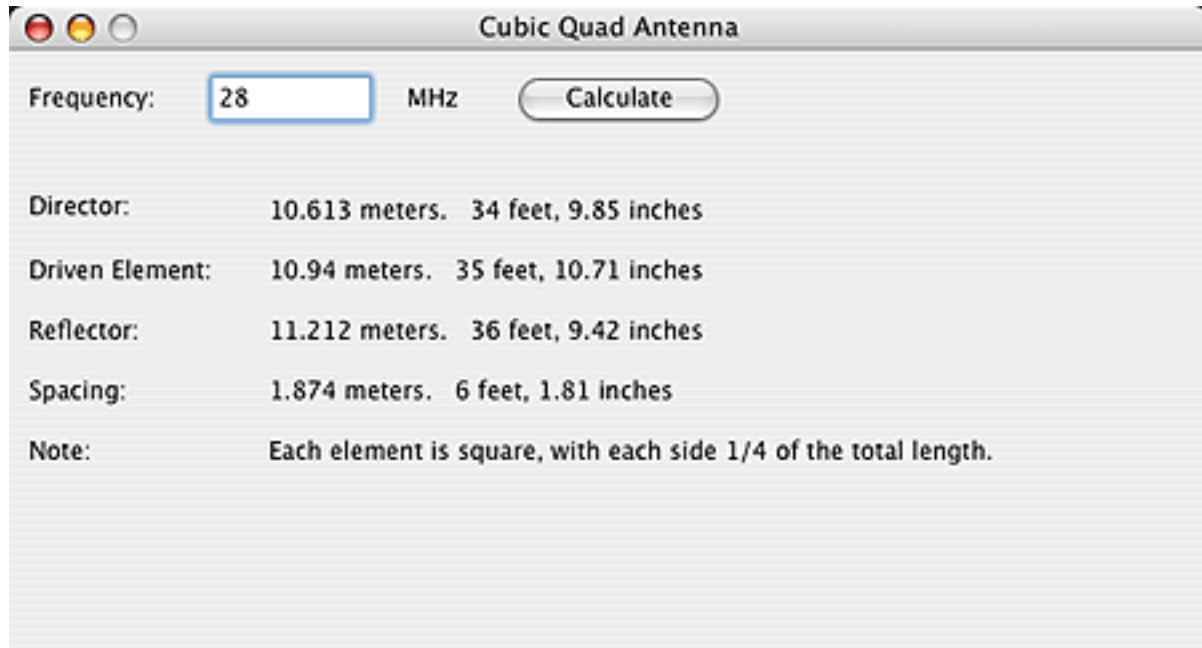

The image shows a screenshot of a software window titled "Cubic Quad Antenna". The window has a standard macOS-style title bar with red, yellow, and green window control buttons. Inside the window, there is a "Frequency:" label followed by a text input field containing the number "28". To the right of the input field is the unit "MHz". Further right is a button labeled "Calculate". Below these controls, the results of the calculation are displayed in a list-like format:

- Director: 10.613 meters. 34 feet, 9.85 inches
- Driven Element: 10.94 meters. 35 feet, 10.71 inches
- Reflector: 11.212 meters. 36 feet, 9.42 inches
- Spacing: 1.874 meters. 6 feet, 1.81 inches
- Note: Each element is square, with each side 1/4 of the total length.

Enter in the desired operating frequency in MHz. The dimensions and spacings for the antenna elements are calculated and displayed.

Yagi Antenna Calculator

The screenshot shows a window titled "Yagi Antenna" with a light gray background. At the top, there are two input fields: "Frequency:" with a text box containing "146" and "MHz" next to it, and "Elements:" with a spinner box set to "6". To the right of these is a "Calculate" button. Below the input fields, the calculated dimensions and spacings for the antenna elements are listed. Each element is represented by a black horizontal bar. The elements are: four Directors, one Driven Element, and one Reflector. Each Director has a length of 0.92 meters (3 feet, 0.23 inches) and a spacing of 0.306 meters (1 foot, 0.08 inches). The Driven Element has a length of 0.986 meters (3 feet, 2.84 inches) and a spacing of 0.306 meters (1 foot, 0.08 inches). The Reflector has a length of 1.017 meters (3 feet, 4.06 inches).

Element Type	Length (meters)	Length (feet, inches)	Spacing (meters)	Spacing (feet, inches)
Director	0.92	3 feet, 0.23 inches	0.306	1 foot, 0.08 inches
Director	0.92	3 feet, 0.23 inches	0.306	1 foot, 0.08 inches
Director	0.92	3 feet, 0.23 inches	0.306	1 foot, 0.08 inches
Director	0.92	3 feet, 0.23 inches	0.306	1 foot, 0.08 inches
Driven Element	0.986	3 feet, 2.84 inches	0.306	1 foot, 0.08 inches
Reflector	1.017	3 feet, 4.06 inches		


Enter in the desired operating frequency in MHz. The dimensions and spacings for the antenna elements are calculated and displayed.

Log Periodic Antenna Calculator

Length	Diameter	Spacing
16 feet, 4.85 inches	0.34 inches	4 feet, 11.05 inches
14 feet, 5.22 inches	0.3 inches	4 feet, 3.96 inches
12 feet, 8.44 inches	0.26 inches	3 feet, 9.73 inches
11 feet, 2.14 inches	0.23 inches	3 feet, 4.24 inches
9 feet, 10.05 inches	0.2 inches	2 feet, 11.41 inches
8 feet, 7.88 inches	0.18 inches	2 feet, 7.16 inches
7 feet, 7.41 inches	0.16 inches	2 feet, 3.42 inches
6 feet, 8.44 inches	0.14 inches	2 feet, 0.13 inches
5 feet, 10.79 inches	0.12 inches	

Enter in the frequency range as well as the sigma and tau design parameters (look at the Gain Graph in the window for suggested values), and the design resistance, as well as the diameter of the feeder and shortest elements. Click on the calculate button, and the lengths, diameters, and spacings for each element will be computed and displayed.

Helical Antenna Calculator

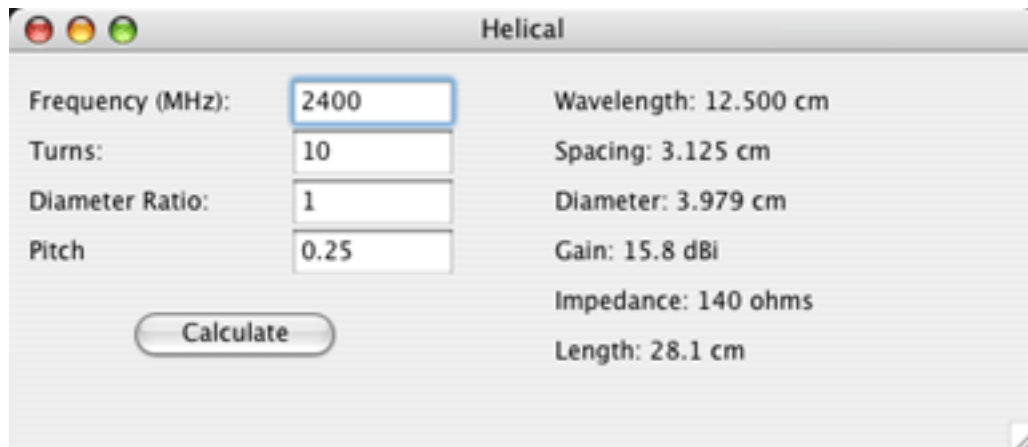

A screenshot of a software window titled "Helical". The window contains input fields for "Frequency (MHz)", "Turns", "Diameter Ratio", and "Pitch". The "Frequency (MHz)" field is highlighted with a blue border and contains the value "2400". The "Turns" field contains "10", "Diameter Ratio" contains "1", and "Pitch" contains "0.25". Below these fields is a "Calculate" button. To the right of the input fields, the calculated parameters are displayed: "Wavelength: 12.500 cm", "Spacing: 3.125 cm", "Diameter: 3.979 cm", "Gain: 15.8 dBi", "Impedance: 140 ohms", and "Length: 28.1 cm".

Input	Value	Output	Value
Frequency (MHz)	2400	Wavelength	12.500 cm
Turns	10	Spacing	3.125 cm
Diameter Ratio	1	Diameter	3.979 cm
Pitch	0.25	Gain	15.8 dBi
		Impedance	140 ohms
		Length	28.1 cm

Enter in the desired frequency in MHz, and the number of turns. You can leave the diameter ratio and pitch at the default values, or edit them. Click the calculate button, and the antenna parameters are computed.

Transmission Line Calculator

The screenshot shows a 'Transmission Line Calculator' window with the following settings and results:

- Cable:** Belden 9258 (RG-8X)
- Ohms:** 50
- VF:** 0.78
- Freq:** 7 MHz
- Band:** 40m
- Matched Loss:** 0.752 dB/100 ft
- Length:** 50 ft
- Attenuation:** 0.376 dB
- Electrical Length:** A progress bar labeled 'Modulo 1/2 Wavelength' shows 0.4602 wavelengths and 165.68°.
- Load Resistance:** 73
- Impedance:** 0

	Input	Load
R	68.274 ohms	73.000 ohms
X	12.681 ohms	0.000 ohms
Z	69.442 ohms	73.000 ohms


SWR: 1.46 **Attenuation due to SWR:** 0.024 dB **Total Loss:** 0.4 dB

Input Watts: 100 **Cable Loss:** 8.29W **SWR Loss:** 0.51W **Power Out:** 91.2W

Close

This calculator may be used to compute the losses caused by the transmission line (coax or open wire), as well as the SWR from a mismatched load, and the power loss. Select the cable type from the popup menu, as well as the length and operating frequency. Enter in the impedance of the load (antenna). The SWR is calculated, as well as the losses in the cable, both matched and due to the SWR. You can also enter in the transmitter power, and the lost and output power are calculated and displayed.

db Calculator

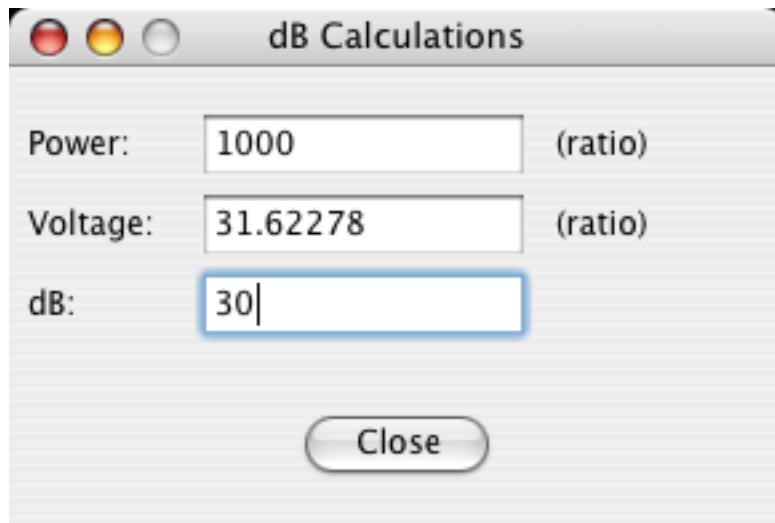


A screenshot of a macOS-style window titled "dB Calculations". The window has a title bar with three colored buttons (red, yellow, grey) on the left. Inside the window, there are three input fields arranged vertically. The first field is labeled "Power:" and contains the value "1000", with the text "(ratio)" to its right. The second field is labeled "Voltage:" and contains the value "31.62278", with the text "(ratio)" to its right. The third field is labeled "dB:" and contains the value "30", which is currently selected with a blue highlight. Below these fields is a single button labeled "Close".

Power:	1000	(ratio)
Voltage:	31.62278	(ratio)
dB:	30	

Close

This calculator is used to convert between dB (decibels) and both power and voltage ratios. Type a number into any of the fields, and the values for the other two fields will be automatically computed.

Wire Gauge and Voltage Drop Calculator

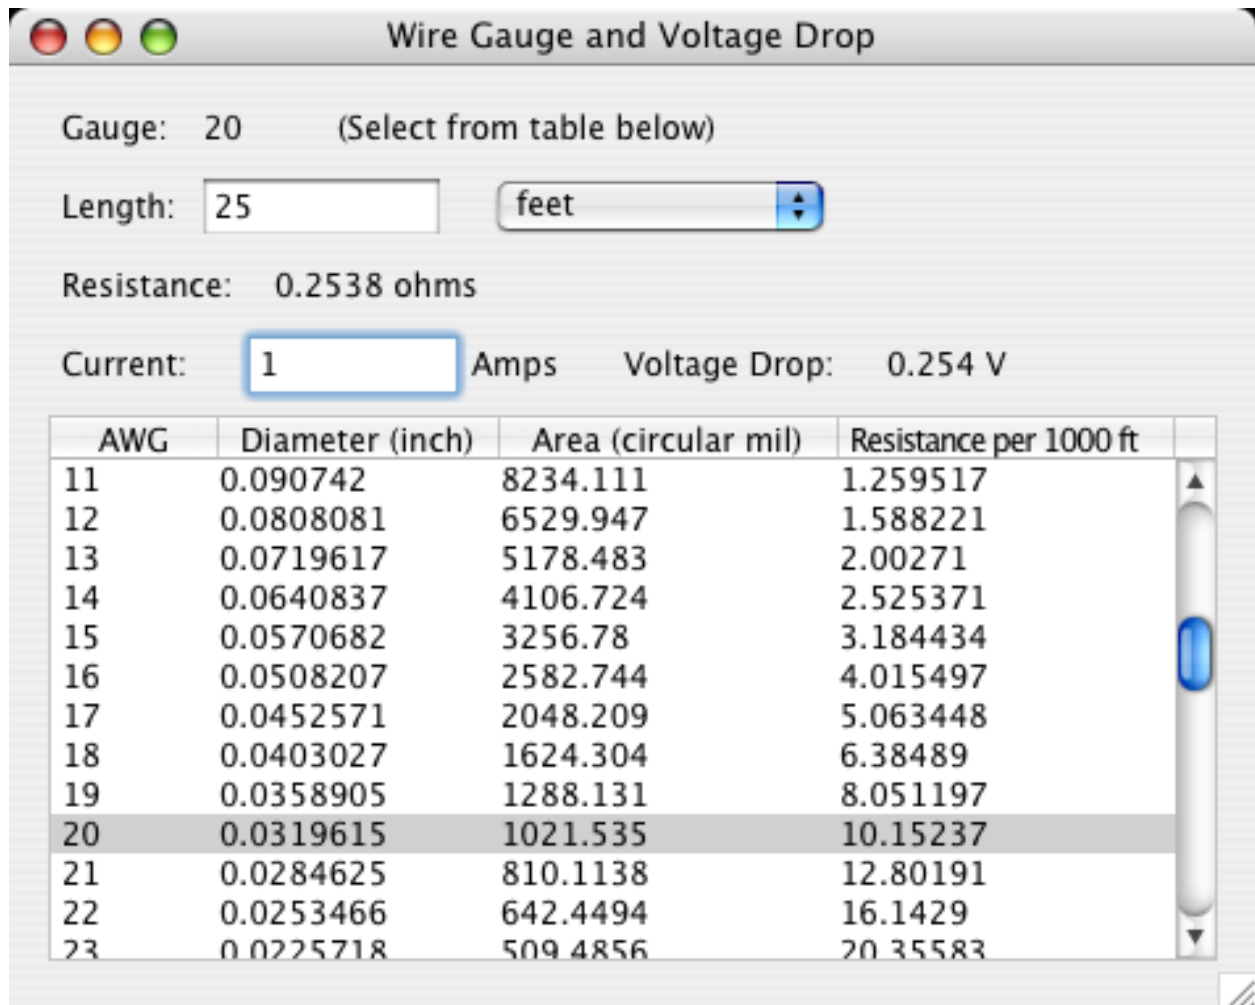

The image shows a software window titled "Wire Gauge and Voltage Drop". It contains several input fields and a table. The "Gauge" field is set to 20, with a note "(Select from table below)". The "Length" field is set to 25, and the unit is "feet". The "Resistance" field displays 0.2538 ohms. The "Current" field is set to 1, with the unit "Amps". The "Voltage Drop" field displays 0.254 V. At the bottom, there is a table with 4 columns: AWG, Diameter (inch), Area (circular mil), and Resistance per 1000 ft. The table lists values for AWG 11 through 23. The row for AWG 20 is highlighted.

Gauge: 20 (Select from table below)

Length: 25 feet

Resistance: 0.2538 ohms

Current: 1 Amps Voltage Drop: 0.254 V

AWG	Diameter (inch)	Area (circular mil)	Resistance per 1000 ft
11	0.090742	8234.111	1.259517
12	0.0808081	6529.947	1.588221
13	0.0719617	5178.483	2.00271
14	0.0640837	4106.724	2.525371
15	0.0570682	3256.78	3.184434
16	0.0508207	2582.744	4.015497
17	0.0452571	2048.209	5.063448
18	0.0403027	1624.304	6.38489
19	0.0358905	1288.131	8.051197
20	0.0319615	1021.535	10.15237
21	0.0284625	810.1138	12.80191
22	0.0253466	642.4494	16.1429
23	0.0225718	509.4856	20.35583

Select a wire gauge from the list at the bottom of the window (which also contains useful information about each gauge). Enter in the length of the wire, and the resistance will be displayed. Enter in the current, and the voltage drop will be displayed.

Impedance Calculator

Frequency: 14 MHz


Inductance: 45 uH Calc Z Z: 3958.403 ohms

Capacitance: 20 pF Calc Z Z: 568.411 ohms

Close

Enter in a frequency in MHz, and either an inductance in uH or a capacitance in pF (or both), click on the Calc Z button, and the impedance in ohms will be calculated.

Wire Inductance Calculator

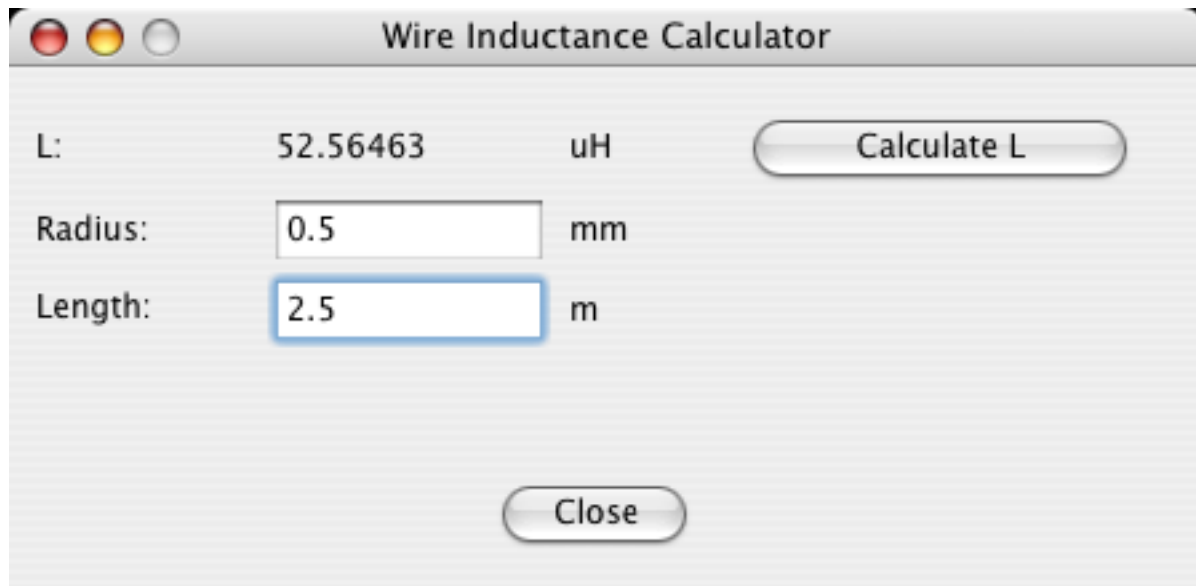


A screenshot of a 'Wire Inductance Calculator' window. The window has a title bar with three colored buttons (red, yellow, grey) and the text 'Wire Inductance Calculator'. Inside the window, there are three input fields: 'L:' with the value '52.56463' and unit 'uH', 'Radius:' with a text box containing '0.5' and unit 'mm', and 'Length:' with a text box containing '2.5' and unit 'm'. The 'Length:' text box is highlighted with a blue border. To the right of the 'L:' field is a button labeled 'Calculate L'. At the bottom center is a button labeled 'Close'.

L:	52.56463	uH	Calculate L
Radius:	<input type="text" value="0.5"/>	mm	
Length:	<input type="text" value="2.5"/>	m	

Close

Enter in a the radius (in millimeters) and length (in meters) of a piece of straight wire, click the Calculate L button, and the inductance (in uH) will be computed and displayed.

Pi Network Calculator

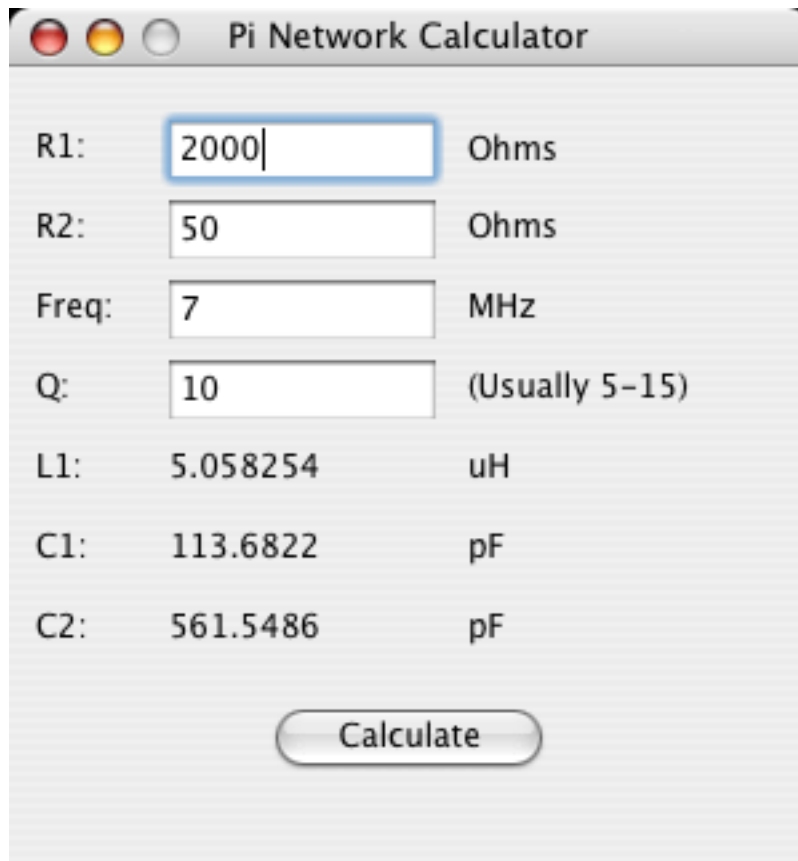


A screenshot of a software window titled "Pi Network Calculator". The window has a standard macOS-style title bar with red, yellow, and green window control buttons. Inside the window, there are input fields for R1, R2, Freq, and Q, and output fields for L1, C1, and C2. The R1 input field is highlighted with a blue border and contains the value "2000". The R2 input field contains "50". The Freq input field contains "7". The Q input field contains "10". The output fields show calculated values: L1 is "5.058254" uH, C1 is "113.6822" pF, and C2 is "561.5486" pF. A "Calculate" button is located at the bottom of the window.

R1:	<input type="text" value="2000"/>	Ohms
R2:	<input type="text" value="50"/>	Ohms
Freq:	<input type="text" value="7"/>	MHz
Q:	<input type="text" value="10"/>	(Usually 5-15)
L1:	5.058254	uH
C1:	113.6822	pF
C2:	561.5486	pF

The inductor and two capacitor values for a Pi Network can be quickly and easily calculated. Enter in the input and output impedance, as well as the operating frequency and desired Q, and click the calculate button.

L Network Calculator

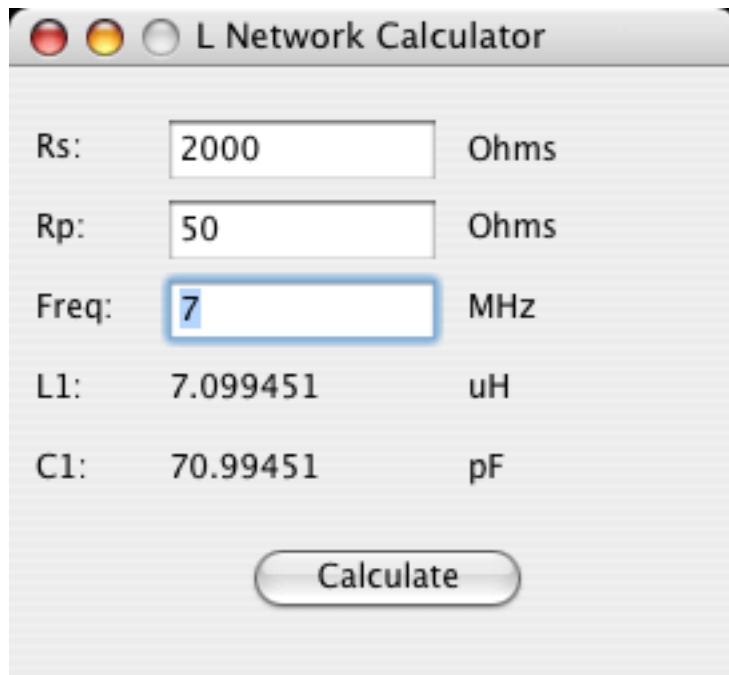


The screenshot shows a window titled "L Network Calculator" with a standard macOS-style title bar. Inside the window, there are five rows of input fields and labels. The first three rows are for user input: "Rs:" with a text box containing "2000" and the unit "Ohms"; "Rp:" with a text box containing "50" and the unit "Ohms"; and "Freq:" with a text box containing "7" and the unit "MHz". The last two rows show calculated values: "L1:" with the value "7.099451" and the unit "uH", and "C1:" with the value "70.99451" and the unit "pF". At the bottom center of the window is a button labeled "Calculate".

Rs:	2000	Ohms
Rp:	50	Ohms
Freq:	7	MHz
L1:	7.099451	uH
C1:	70.99451	pF

Calculate

The inductor and capacitor values for an L Network can be quickly and easily calculated. Enter in the input and output impedance, as well as the operating frequency and desired Q, and click the calculate button.

Coil Inductance Calculator

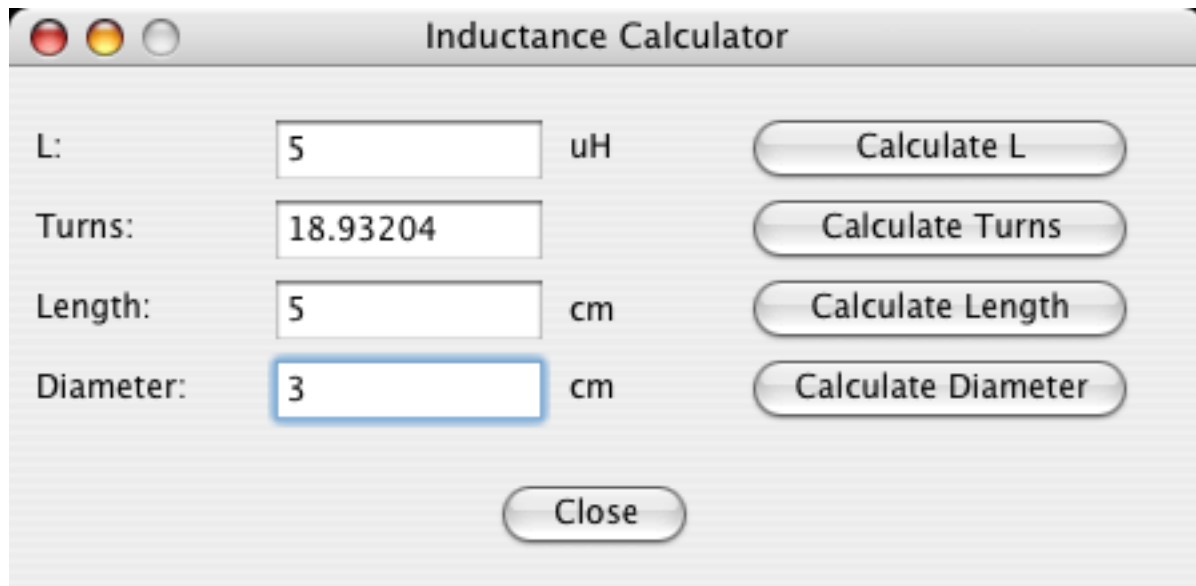


The image shows a graphical user interface for an "Inductance Calculator". The window has a title bar with standard macOS window controls (red, yellow, and grey buttons) and the title "Inductance Calculator". Inside the window, there are four rows of input fields and corresponding buttons:

Field	Value	Unit	Button
L:	5	uH	Calculate L
Turns:	18.93204		Calculate Turns
Length:	5	cm	Calculate Length
Diameter:	3	cm	Calculate Diameter

At the bottom center of the window is a "Close" button. The "Diameter" input field is currently selected with a blue border.

Enter in values for three of the four fields (inductance, turns, length, diameter), and click on the Calculate button for the fourth value, and it will be computed and displayed.

LC Circuit Calculator

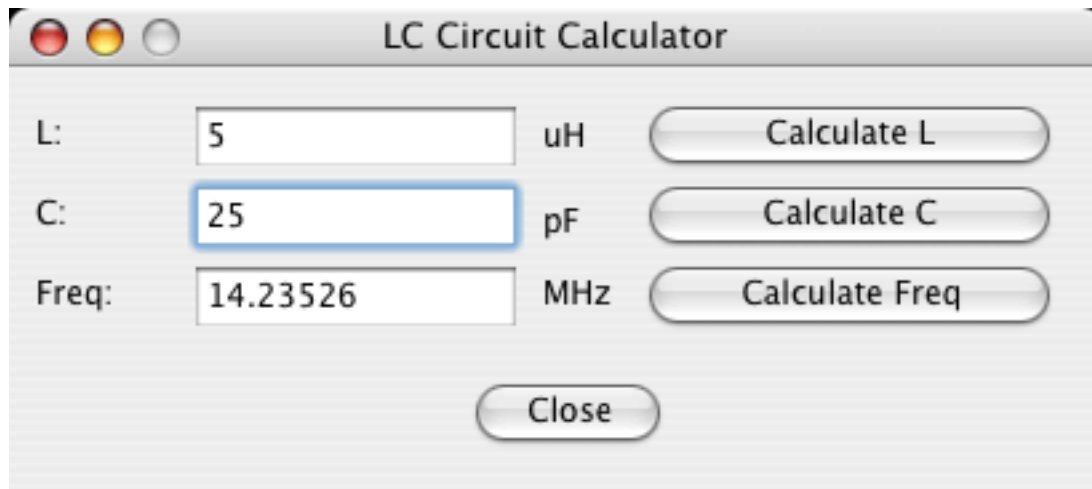


The image shows a screenshot of a software application titled "LC Circuit Calculator". The window has a standard macOS-style title bar with red, yellow, and green window control buttons. The interface is organized into three rows, each representing a different parameter of an LC circuit:

- Row 1:** The label "L:" is followed by a text input field containing the value "5". To the right of the field is the unit "uH". Further right is a button labeled "Calculate L".
- Row 2:** The label "C:" is followed by a text input field containing the value "25". To the right of the field is the unit "pF". Further right is a button labeled "Calculate C".
- Row 3:** The label "Freq:" is followed by a text input field containing the value "14.23526". To the right of the field is the unit "MHz". Further right is a button labeled "Calculate Freq".

At the bottom center of the window is a button labeled "Close".

This calculates resonant values for the LC circuit. Enter in two of the three values (inductance, capacitance, resonant frequency), click the appropriate calculate button, and the third value is computed and displayed.

Transmission Line Loss Calculator

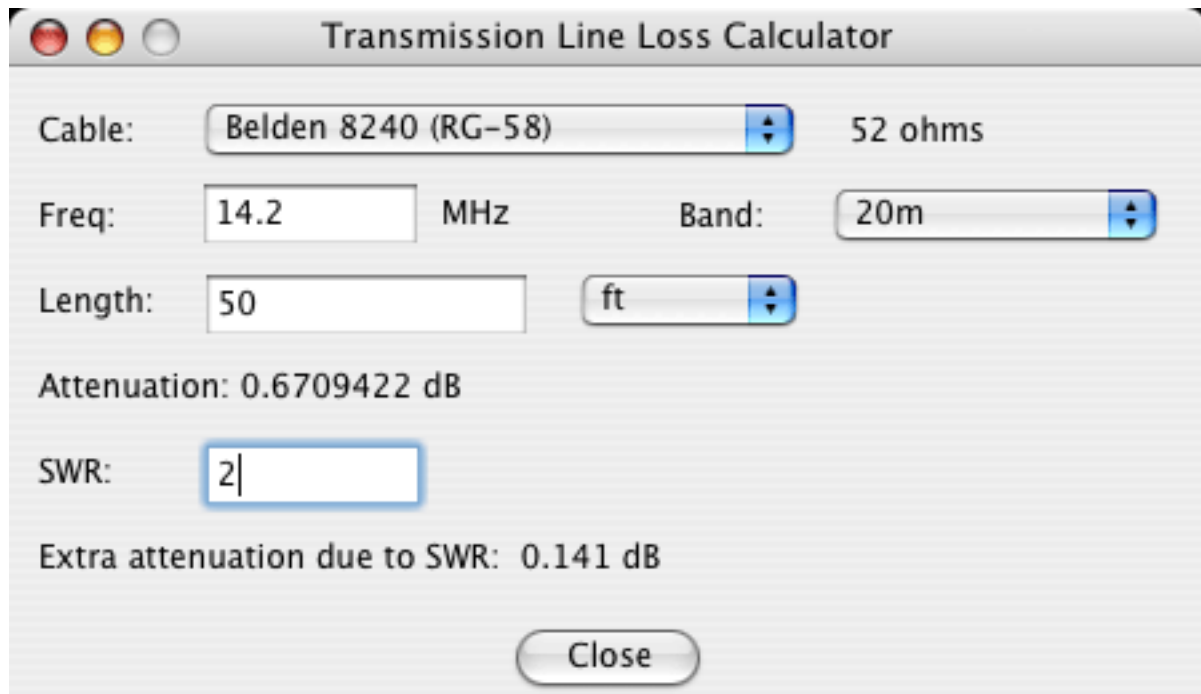

The screenshot shows a macOS-style application window titled "Transmission Line Loss Calculator". It features several input fields and dropdown menus for calculating transmission line loss. The "Cable" dropdown is set to "Belden 8240 (RG-58)" with a characteristic impedance of "52 ohms". The "Freq" field is "14.2" MHz, and the "Band" dropdown is set to "20m". The "Length" field is "50" ft. The calculated "Attenuation" is displayed as "0.6709422 dB". The "SWR" field contains the value "2", and the resulting "Extra attenuation due to SWR" is "0.141 dB". A "Close" button is located at the bottom center of the window.

Parameter	Value
Cable	Belden 8240 (RG-58)
Impedance	52 ohms
Freq	14.2 MHz
Band	20m
Length	50 ft
Attenuation	0.6709422 dB
SWR	2
Extra attenuation due to SWR	0.141 dB

Select the cable type from the popup menu, enter in the length and frequency (or select a band from the popup menu), and the cable attenuation in dB is computed. Enter in the Standing Wave Ratio (SWR) and the extra attenuation due to the SWR is also computed and displayed.

Transmission Line Calculator

The screenshot shows a 'Transmission Line Calculator' window with the following settings and results:

- Cable:** Belden 9913 (RG-8)
- Ohms:** 50
- VF:** 0.89
- Freq:** 7 MHz
- Band:** 160m
- Matched Loss:** 0.323 dB/100 ft
- Length:** 100 ft
- Attenuation:** 0.323 dB
- Electrical Length:** Modulo 1/2 Wavelength. A progress bar shows the length is approximately 0.8067 wavelengths, with a phase of 290.41°.
- Load Resistance:** 73
- Reactance:** 0
- Radio Buttons:** ☒ Load, ☐ Input

	Input	Load
R	37.509 ohms	73.000 ohms
X	8.775 ohms	0.000 ohms
Z	37.765 ohms	73.000 ohms
SWR	1.42	1.46

SWR: 1.46 **Attenuation due to SWR:** 0.021 dB **Total Loss:** 0.344 dB

Input Watts: 100 **Cable Loss:** 7.18W **SWR Loss:** 0.45W **Power Out:** 92.38W

This calculator allows you to compute several parameters for a transmission line installation. Select the cable type from the popup menu. The impedance and velocity factor are automatically set, you can change them if you wish. Then select the frequency, either directly in MHz, or by selecting the appropriate ham band. Enter the length of the cable run, and select the units of feet or meters. The attenuation and electrical length are computed. Enter the load resistance and reactance and check the Load radio button, or enter the values as seen at the input end of the cable and select the Input radio button. The Input and Load resistance, reactance, impedance, and SWR are calculated, as well as the extra loss due to SWR. Enter the input power in watts, and the loss in watts is also calculated.

Resistor Color Code Calculator

Resistor Calculator

4 Band Code


4.7K

ohms

10%

tolerance

470 2




Y	V	R	S
E	I	E	I
L	O	D	L
L	L		V
O	E		E
W	T		R

5 Band Code

47000

tolerance

2%



Y	V	B	R	R
E	I	L	E	E
L	O	A	D	D
L	L	C		
O	E	K		
W	T			

The resistor color code calculator allows you to determine the color code for both 4 and 5 band resistors. For 4 band resistors, select the resistance and tolerance from the popup menus. For 5 band resistors, type in the resistance in ohms, and select the tolerance from the popup menu.

The resistor color codes are displayed, along with the name of each color under the band, since some colors may be difficult to distinguish.

Resistor Calculator

The resistor calculator allows you to perform four calculations:

1. Display the values for a resistor series.
2. Find the nearest resistor to a specified value.
3. Find the nearest series combination of resistors to a specified value.
4. Find the nearest parallel combination of resistors to a specified value.

For each of these, you can select which resistor series to use:

E6, E12, E24, E48, E96, and S192

Select the series to use by clicking on the series, multiple series can be selected.

Butterworth and Chebyshev Low and High Pass Filter Design


This window allows you to design a filter. You have two sets of choices, either low or high pass, and either Butterworth or Chebyshev.

A low pass filter attenuates frequencies above the cutoff frequency, while a high pass filter attenuates frequencies below the cutoff frequency.


A Butterworth filter has a flat response in the passband and a constant 20 dB per decade attenuation for each pole of the circuit (equal to the order). The attenuation is -3 dB at the cutoff frequency.

A Chebyshev filter has a sharper rate of attenuation than a Butterworth filter, at the expense of ripple in the passband. You specify the amount of ripple allowed in the Ripple box, in dB. Chebyshev filters must have an odd order.

Low Pass Filter:

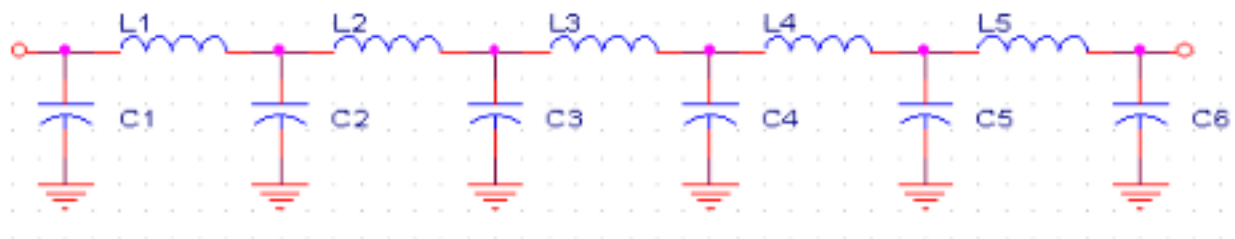

High Pass Filter:

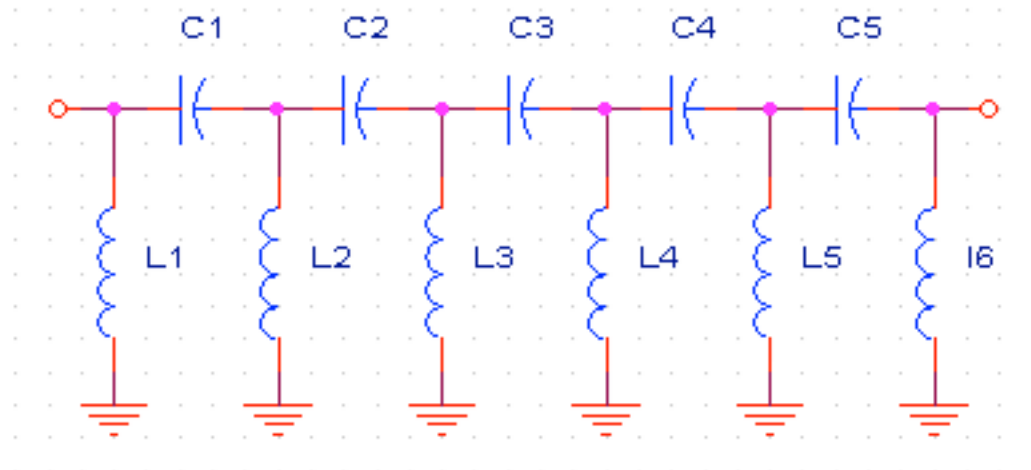

Enter in the cutoff frequency, impedance, and number of components (order) of the filter, select the unit types and filter type, and click on the

Calculate button. The component values will be displayed. You can change the units for inductance and capacitance, and the values will adjust, accordingly.

RF Link Budget Calculator

This window allows you to perform calculations related to an RF link. You can calculate the required transmitter power, gain margin, or maximum distance, based on two of these parameters as well the frequency, transmit and receive antenna gains, cable losses, and receiver sensitivity.

To use the calculator, select the units (miles or km) as well as which parameter you wish to calculate. Then enter in the other parameters, the calculation will update as you each each parameter.

Skin Depth Calculator

Enter in the frequency in MHz, the Resistivity in micro-ohm per cm, and the Relative Permeability. Click Calculate, and the skin depth in both micrometers and microinches will be calculated.

At the bottom of the window is a table of Resistivity and Relative Permeability values for common metals.

Gamma Match Calculator

This allows you to calculate the performance of a gamma match, which is typically used to transform the impedance of a yagi or other antenna to match the impedance of the transmission line connected to it.

The gamma match consists of a short rod which is parallel to the driven element. The length of the rod, as well as the spacing and relative diameters of the rod and driven element determine the impedance transformation. By entering in these dimensions, as well as the input impedance of the antenna, the input impedance of the gamma match can be determined.

The goal is to produce a gamma match input impedance with a real component equal to the characteristic impedance of the transmission line (typically 52 or 75 ohms). There will also be a reactive component, this is cancelled by putting a capacitor in series with the connection to the center conductor of the coax, RF ToolBox converts the impedance to a capacitance for the design frequency.

Long Yagi Design

This window allows you to design long Yagi antennas, up to 99 elements, using the DL6WU formula.

Select whether you would like to use mm or inches for dimensions.

Enter in the frequency in MHz.

Select whether you want to specify the gain in dB, or the length of the antenna from the popup menu, then enter in that value.

Choose one of three boom types:

Metal with bonded (electrically attached) elements

Metal with insulated elements

Non metallic

Enter in the diameter of the boom as well as the driven and parasitic elements.

Click Calculate, and the element information will be generated and displayed. You can print the results, or save them to a MININECPro format file for analysis.

Terms:

If you find RF Toolbox useful, please buy your copy, the price is only \$19.99. This will help encourage the development of future versions of this program.

Please also write me with your comments and suggestions, and any bugs you may find.

Paying for RF Toolbox is fairly simple.

To buy RF Toolbox on the web with a credit card, go to the following URL and select a payment option:

<http://www.blackcatsystems.com/register/rftoolbox.html>

You'll need to enter your name, email address, and mailing address, and select the program(s) you want to buy (in this case RF Toolbox). Then click the continue button to enter your credit card information (you can use a secure version of the form).

If you want to pay by check, money order or cash, you can fill out the Cash/Check/Money Order Form, and mail it directly to us, along with your payment:

Black Cat Systems
4708 Trail Court
Westminster, MD 21158

You can always find the latest version of RF Toolbox at this URL:

<http://www.blackcatsystems.com/software/rftoolbox.html>

If you have any questions, comments, suggestions, or bug reports, please email them to:

info@blackcatsystems.com

Web: <http://www.blackcatsystems.com/software/rftoolbox.html>

Thanks again for giving RF Toolbox a try!

Distribution of this software:

This software may only be distributed under the following conditions:

1. It is distributed as an entire package of all files, including all documentation.
2. It may only be distributed without any charge or fee, with the exception below.
3. If it any form of fee is charged, then the distribution package and any documentation must clearly state that any shareware programs must be registered with the author, if they are used beyond the evaluation period.

Ordering by Check or Money Order Form

To order by check, please fill out and mail the following form, along with your payment. You can pay with a wide variety of cash from different countries but at present if you pay via check, it must be a check or money order drawn in US Dollars. While there is the risk of loss in the mail, currency is also OK, including foreign currency.

Please make sure you include your email address with your payment. That way we can send the registration code to you. If you do not send us a valid email address, we have no way to send you the code.

I would like to order _____ copies of RF Toolbox at \$19.99 US each.

If you'd like a copy of RF Toolbox (as well as demos of all of our other programs) on a CDROM, please order one:

I would like to order _____ Black Cat Systems CDROMS at \$10 US each. (incl shipping)

Maryland residents please add 6% sales tax.

Name: _____

Address: _____

City: _____ State/Province: _____

ZIP/Postal Code: _____ Country: _____

Email Address: _____

Computer Model: _____ Operating System Version: _____

Enclosed, please find my check / money order / cash in the amount of \$_____

Mail this form, along with payment, to:

**Black Cat Systems
4708 Trail Court
Westminster, MD 21158
USA**

Ordering By Credit Card Online

To order online with a credit card, go to the following URL:

<http://www.blackcatsystems.com/register/rftoolox.html>

You will be sent to our order page at PayPal. They handle our credit card payment processing.

Please make sure you include your email address when you order online. That way we can send the registration code to you. If you do not send us a valid email address, we have no way to send you the code.

Revision History

4.0.0:

Added a tool selection window.

Several bug fixes and user interface improvements.

3.9.0:

Added Skin Depth Calculator.

Corrected a bug with the input impedance in the Transmission Line Calc.

3.7.0:

Added Long Yagi Antenna Design.

Added Gamma Match Calculator.

3.6.0:

Added RF Link Budget Calculator.

3.5.0:

Added Thermal Noise Calculator.

Added PI Attenuation Calculator.

Added Tee Attenuation Calculator.

Added Zener Diode Calculator.

Added 555 Timer Oscillator Calculator.

3.4.0:

Added Butterworth and Chebyshev Low and High Pass Filter Design.

Fixed a bug with the wire inductance calculator.

3.3.0:

Added resistor color code calculator.

3.2.0:

Added helical antenna calculations.

3.1.0:

Added Transmission Line calculator.

Added dB calculator.

3.0.0:

Changed name to RF Toolbox

Added impedance calculator.
Added wire inductance calculator.
Added wire resistance calculator.

2.0.1:

Fixed a calculation error in the inductor design tool.
Fixed a calculation error in Yagi antenna design

2.0.0:

Complete re-write, also first OSX and Windows versions.

1.4.0:

Added L and Pi network calculations

1.3.0:

Added transmission line loss calculator

1.2.1:

Fixed bug in Cubic Quad design

1.2.0:

Added Cubic Quad antenna
Fixed bug in Log Periodic display

1.1.0:

Bug fix. Bug caused heap errors on some systems resulting in System Error 33.

1.0.0:

Initial release

Software License Agreement

This is a legal agreement between you and Black Cat Systems, covering your use of RF Toolbox (the "Software"). Be sure to read the following agreement before using the Software. BY USING THE SOFTWARE (REGARDLESS IF YOU HAVE REGISTERED THE SOFTWARE OR NOT), YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE AND DESTROY ALL COPIES IN YOUR POSSESSION.

The Software is owned by Black Cat Systems and is protected by United States copyright laws and international treaty provisions. Therefore, you must treat the Software like any other copyrighted material (e.g., a book or musical recording). Paying the license fee allows you the right to use one copy of the Software on a single computer. You may not network the Software or otherwise use it or make it available for use on more than one computer at the same time. You may not rent or lease the Software, nor may you modify, adapt, translate, reverse engineer, decompile, or disassemble the Software. If you violate any part of this agreement, your right to use this Software terminates automatically and you must then destroy all copies of the Software in your possession.

The Software and its related documentation are provided "AS IS" and without warranty of any kind and Black Cat Systems expressly disclaims all other warranties, expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Under no circumstances shall Black Cat Systems be liable for any incidental, special, or consequential damages that result from the use or inability to use the Software or related documentation, even if Black Cat Systems has been advised of the possibility of such damages. In no event shall Black Cat Systems's liability exceed the license fee paid, if any.

This Agreement shall be governed by the laws of the State of Maryland. If for any reason a court of competent jurisdiction finds any provision of the Agreement, or portion thereof, to be unenforceable, that provision of the Agreement shall be enforced to the maximum extent permissible so as to effect the intent of the parties, and the remainder of this Agreement shall continue in full force and effect.

The Software and documentation is provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software clause as 252.227-7013. Manufacturer is Black Cat Systems., 4708 Trail Court, Westminster, MD 21158, United States of America.

The name "Black Cat Systems", and "Antenna Master" are trademarks of Black Cat Systems.

RF Toolbox is ©2001-2014 by Black Cat Systems. All rights reserved worldwide.