505 Dundas:

Starting from Broadview Station to Dundas West Station;

- West on Erindale to Broadview
- South on Broadview to Dundas NA 4
- West on Dundas to Dundas West Stn NA 377

Dundas cars load on the island or south track

Returning From Dundas West to Broadview Stn.;

- South Dundas to Roncesvalles NA 65
- East on Dundas to Broadview NA 277
- North on Broadview to Broadview Stn

Dundas Short Turns

Parliament Street is a Eastbound short turn;

- East on Dundas to Parliament NA 281
- North on Parliament to Gerrard manual switch.
- Layover on Parliament for time, allow 5 minutes from Parliament to Broadview
- East on Gerrard to Broadview NA 217
- South Broadview as instructed

Church St. is an East or Westbound short turn:

- **Eastbound:** East on Dundas to Church NA 294
- South on Church to Queen manual switch
- West on Queen to Victoria NA 295
- North on Victoria to Dundas manual switch
- West as instructed
- **Westbound:** West on Dundas to Church manual Switch (MUST BE RESET)
- South on Church to Queen manual switch
- West on Queen to Victoria NA 295
- North on Victoria to Dundas manual switch
- East as instructed

Bay St. is an East or West short turn:

- **Eastbound:** East on Dundas to Bay manual switch (MUST BE RESET)
- North on Bay to College manual switch
- East on College/Carlton to Church manual switch (MUST BE RESET)
- South on Church to Dundas manual switch
- West as instructed
- **Westbound:** West on Dundas to Bay manual switch (MUST BE RESET)
- North on Bay to College manual switch
- East on College/Carlton to Church manual switch (MUST BE RESET)
- South on Church to Dundas manual switch
- East as instructed

Bathurst St. is an East or Westbound short turn:

Eastbound: East on Dundas to Bathurst NA 267

- North on Bathurst to Bathurst Stn NA 303
- Layover at Station on NA 272 Sparetrack
- NA 273 South on Bathurst to Dundas manual switch (MUST BE RESET)
- West on Dundas as instructed

Westbound: West on Dundas to Bathurst NA 320

- North on Bathurst to College NA 313
- East on College to McCaul manual switch (MUST BE RESET)
- South on McCaul to Dundas manual switch

Lansdowne Ave is westbound short turn only:

- West on Dundas to Lansdowne NA 293
- North on Lansdowne to College manual switch**
- Layover on Lansdowne for time
- West on College to Dundas NA 166
- East on Dundas as instructed

****Caution watch tail swing turning off of Lansdowne, curb lane is narrow.**

Note: These short turns are the common ones, Supervisors may use other turns at times.

Operator's restrooms are located at:
Broadview Station Dundas West Station

Enlargement of Dundas West Station:

504 King Routing

505 Dundas Routing

306 Carlton Nightcar Routing

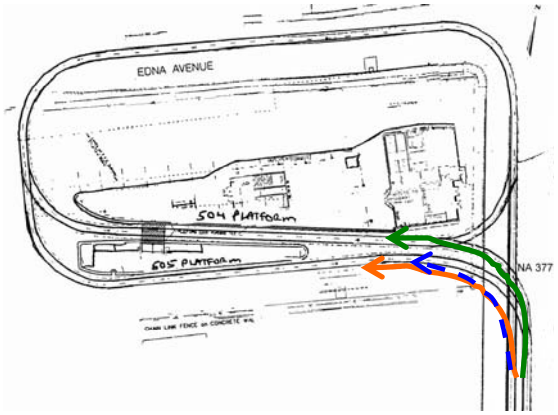

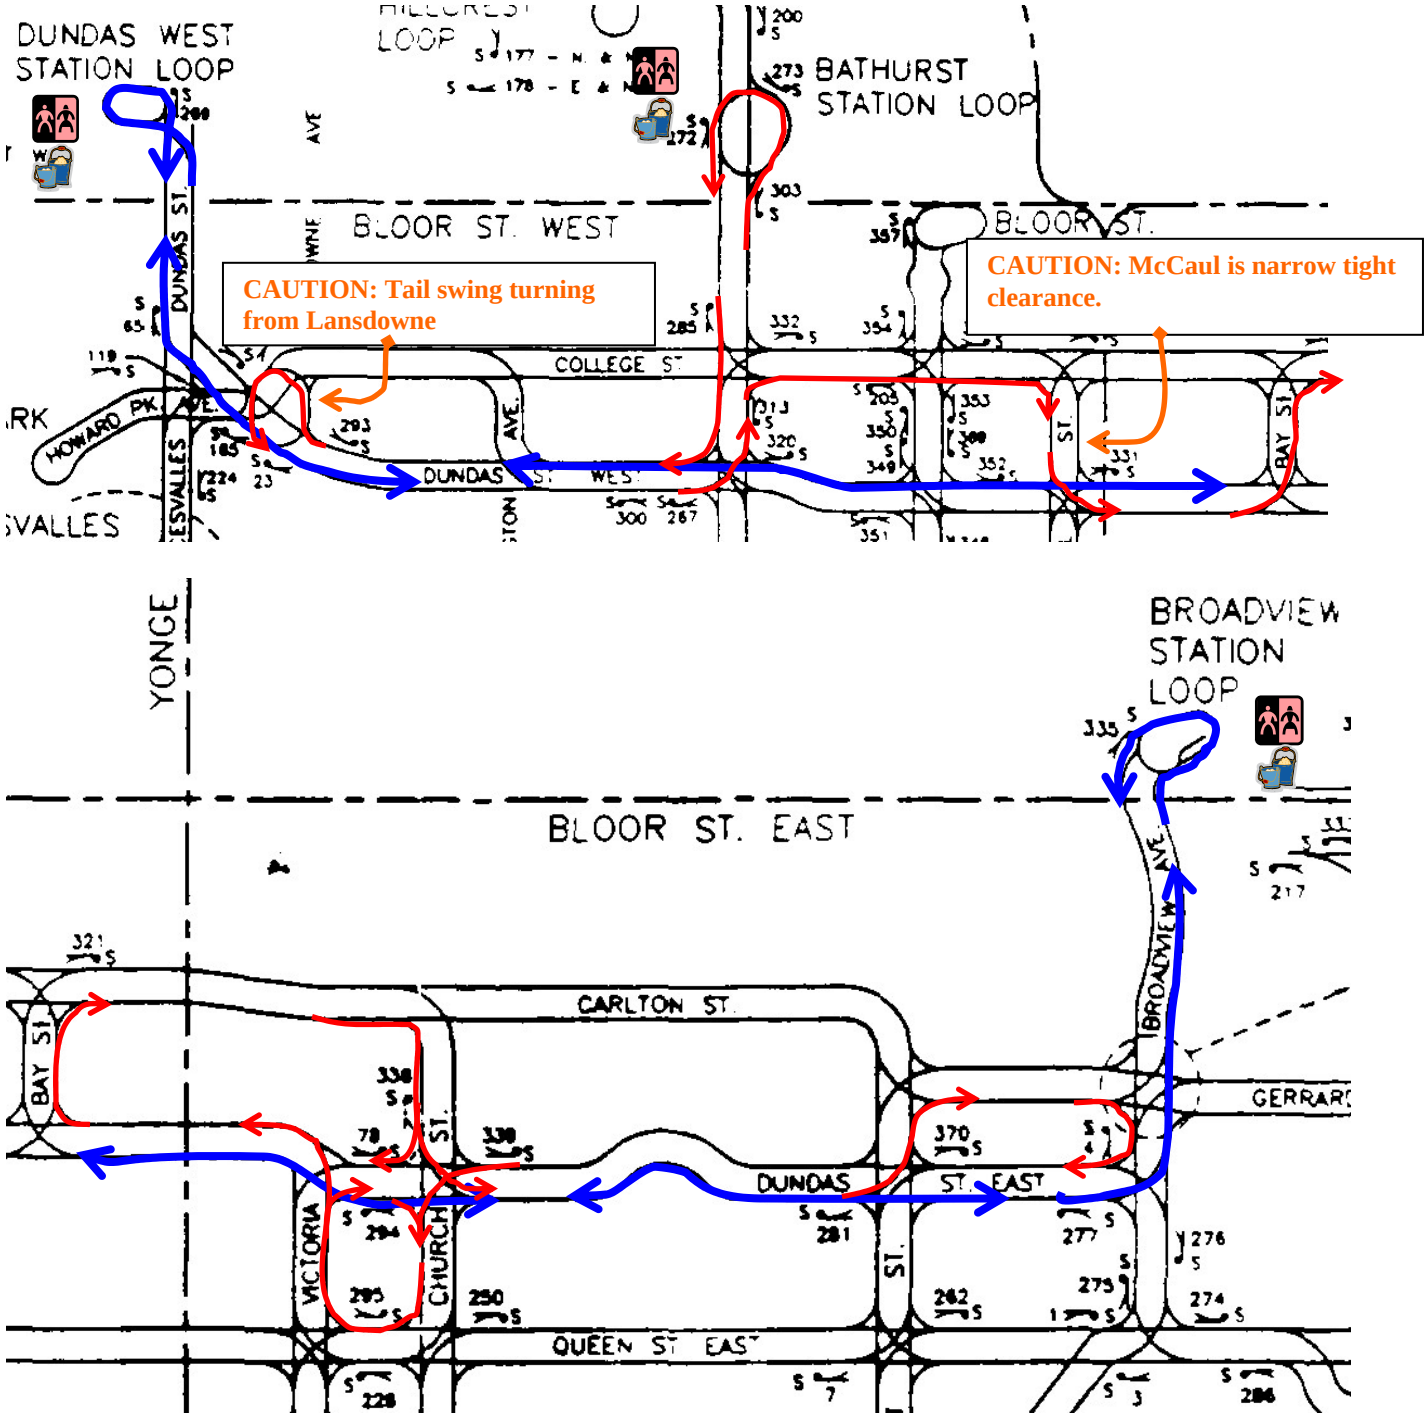
DUNDAS WEST
STATION LOOP
BATHURST
STATION LOOP
BLOOR ST. WEST
BLOOR ST.
CAUTION: Tail swing turning from Lansdowne
CAUTION: McCaul is narrow tight clearance.
COLLEGE ST.
DUNDAS ST. WEST
HOWARD PK. AVE.
BAY ST.
YONGE
BROADVIEW
STATION
LOOP
BLOOR ST. EAST
CARLTON ST.
DUNDAS ST. EAST
QUEEN ST. EAST
BAY ST.
VICTORIA ST.
CHURCH ST.
BROADVIEW AVE.