



EGG CRAFT  
 IN PROGRESS  
 OR TURN IN  
 LATHE.

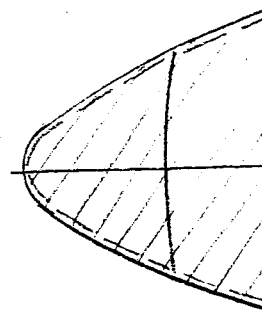


FREE WHEEL  
 RR. PROPELLER

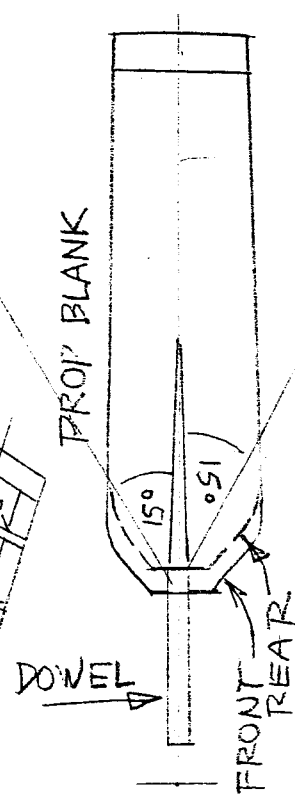

VACUUM  
 SPINNER

2° DOWN  
 THRUST

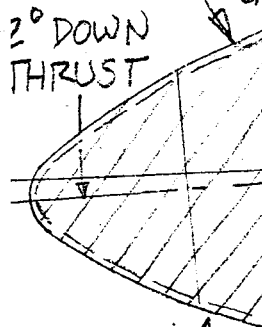

A RED  
 LATE  
 MOD

1/2  
 DIS

REF. AIR  
 1955  
 WORK  
 EST.  
 BY MI



CRATE FOR PLUG  
PROP BLADES  
TURN IN Balsa ON

SCALE →

WHEELING  
PROP ASSEMBLY

FORMED  
PINNAC  
CAP

BLACK NO'S.  
1ST MODEL

RED  
LATER  
MODEL

1/64 PLY  
DISCS

PLUG IN









1/32" Balsa  
WRAP

RED


1/16"  
DOWEL  
OPTIONAL  
LANDING  
GEAR

AIR PROGRESS  
1955-56  
WORLD'S STRANG-  
EST AIRCRAFT  
BY MICHAEL TAYLOR

\*COLOR SCHEME:  
OVERALL SILVER  
OVERALL WHITE  
LATER MODEL

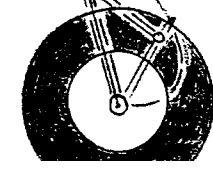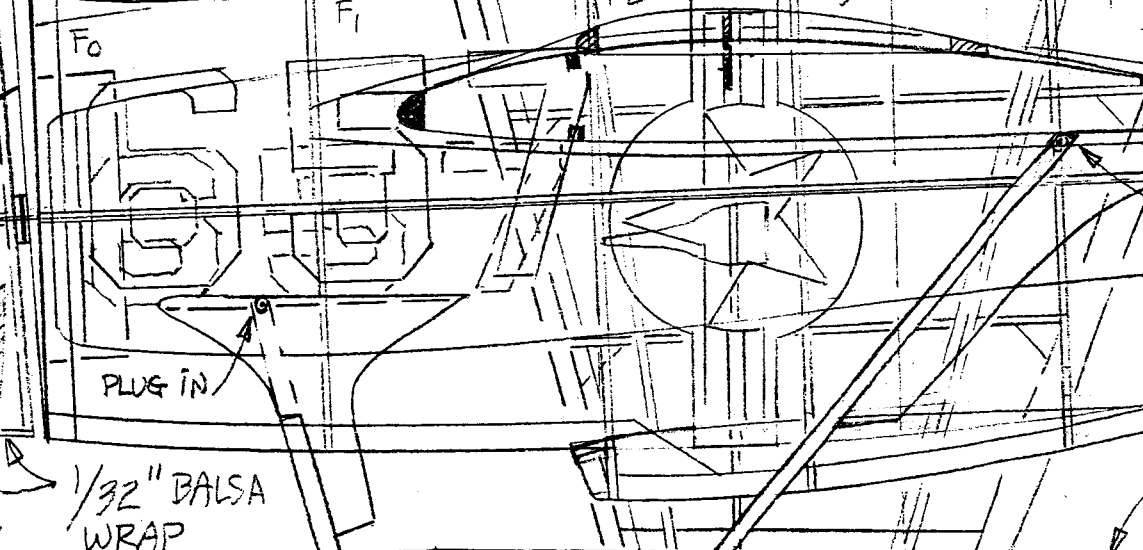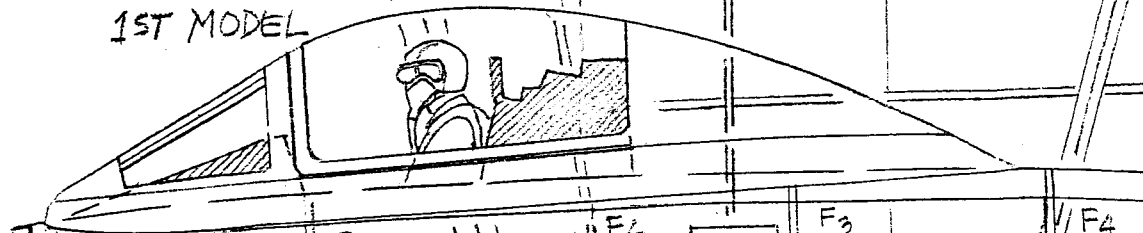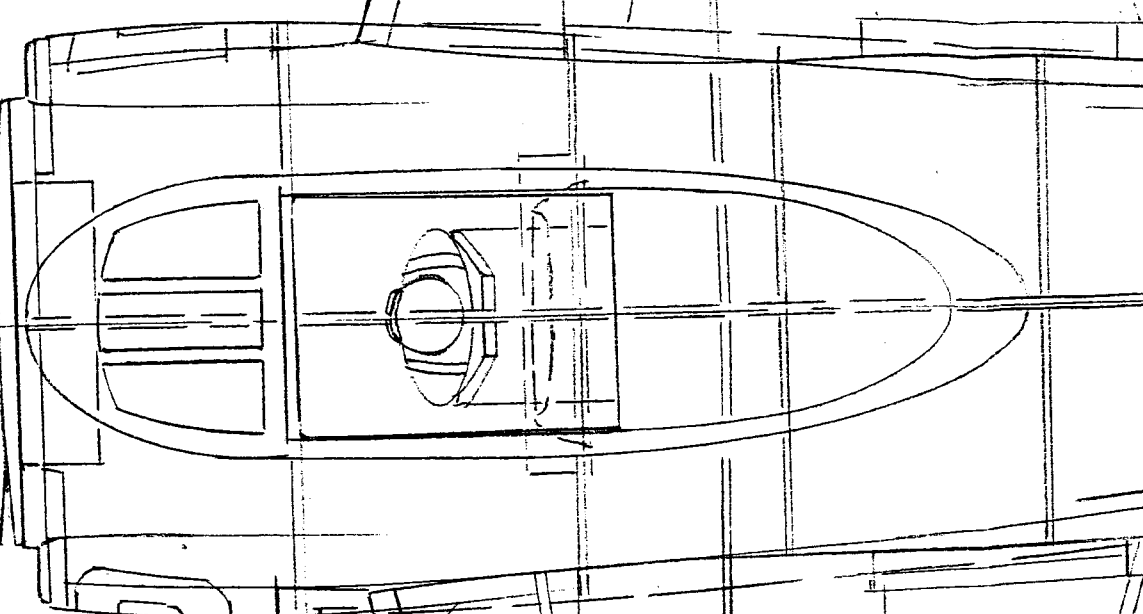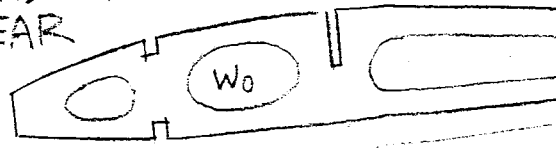

F<sub>0</sub> F<sub>1</sub> F<sub>2</sub> F<sub>3</sub> F<sub>4</sub>

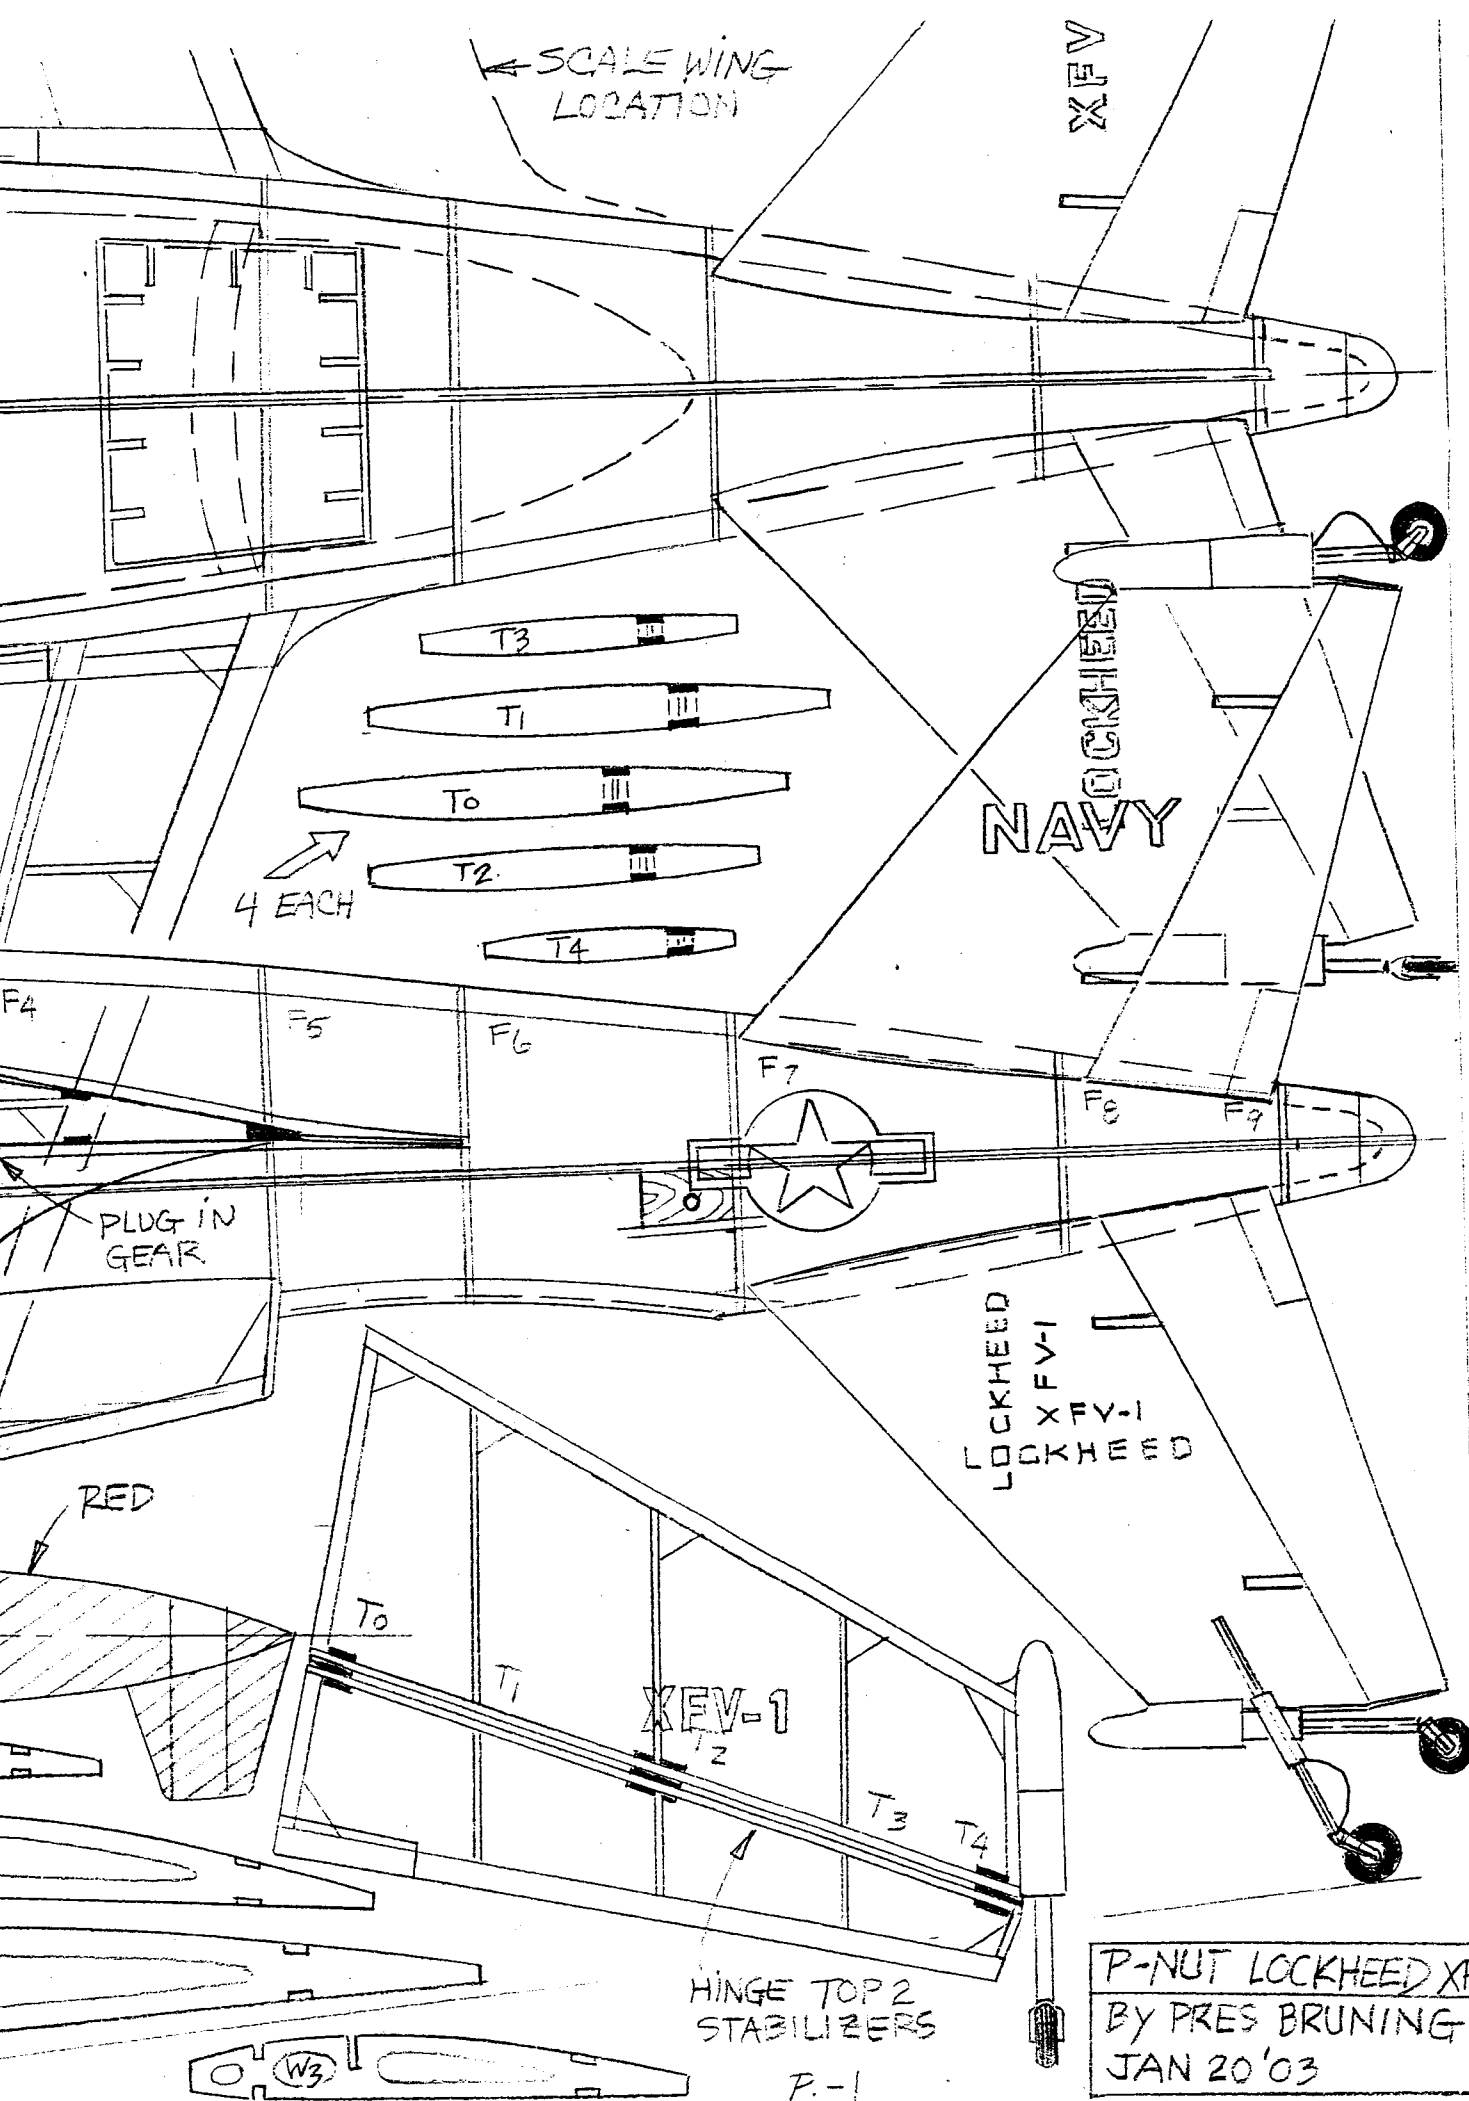

← SCALE WING LOCATION

XEV-1

T3

T1

T0

T2

T4

4 EACH

F4

F5

F6

F7

F8

F9

PLUG IN GEAR

RED

T0

T1

XEV-1  
1/2

T3

T4

HINGE TOP 2 STABILIZERS

W3

P-1

LOCKHEED  
NAVY

LOCKHEED  
XEV-1  
LOCKHEED

P-NUT LOCKHEED XEV-1  
BY PRES BRUNING  
JAN 20 '03