


Carula Hobbies

H0 SCALE WEATHERBOARD
N.S.W. PASSENGER SHELTER

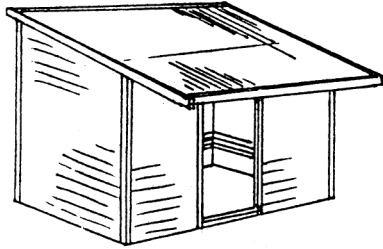

Clean up flash and check pieces for flatness - heat in a drypan and then gently bend flat if necessary. Make joints with a "super-glue". Fit back to floor with back touching the rear of the seat casting. Then fit sides similarly, and finally the front panel containing the door opening. Paint interior before fitting roof. Paint exterior in your favourite prototype era colours. Smooth upper surface flat on a sheet of emery paper and then glue roof to the sides, with the overhang on the two sides and the rear being equal.

