




F1
6.5mm (1/4") ply

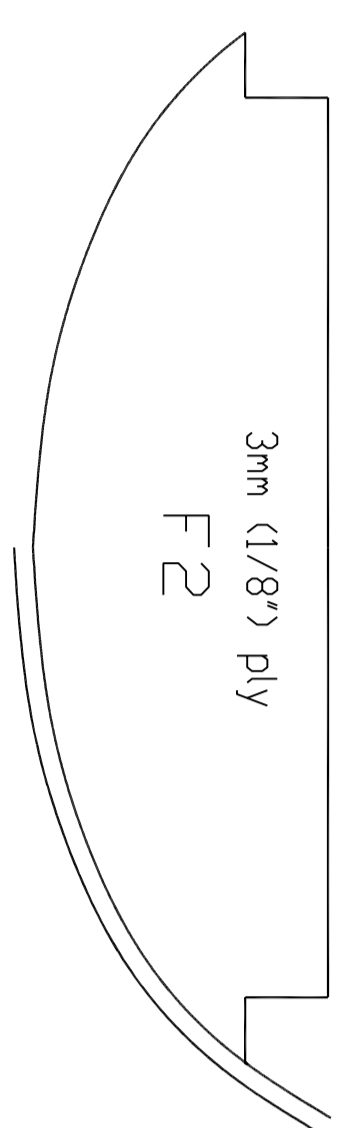


F2
3mm (1/8") ply

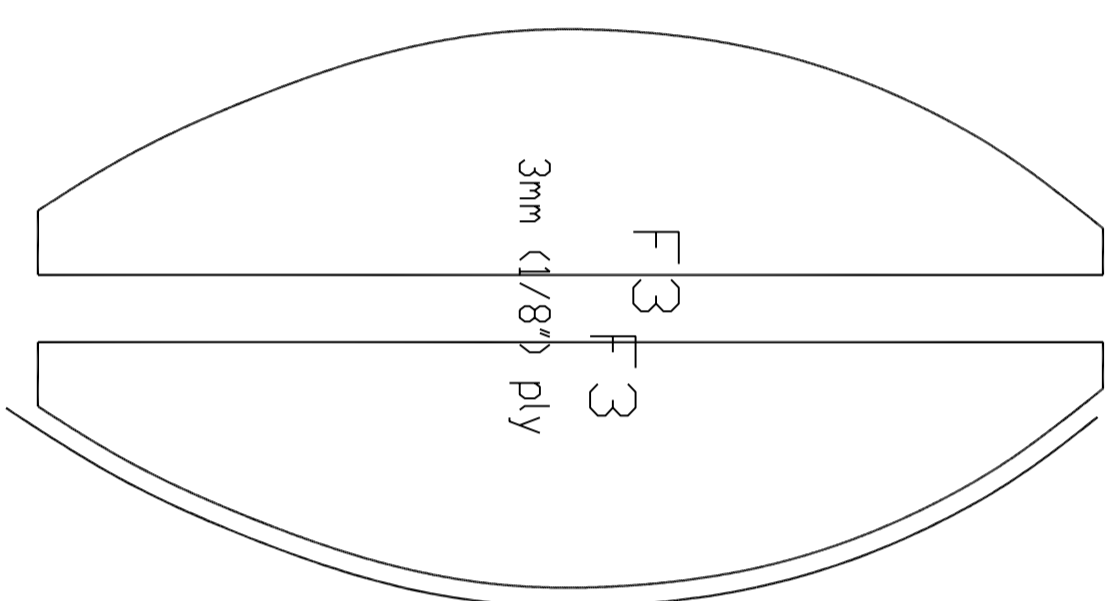

F3
3mm (1/8") ply

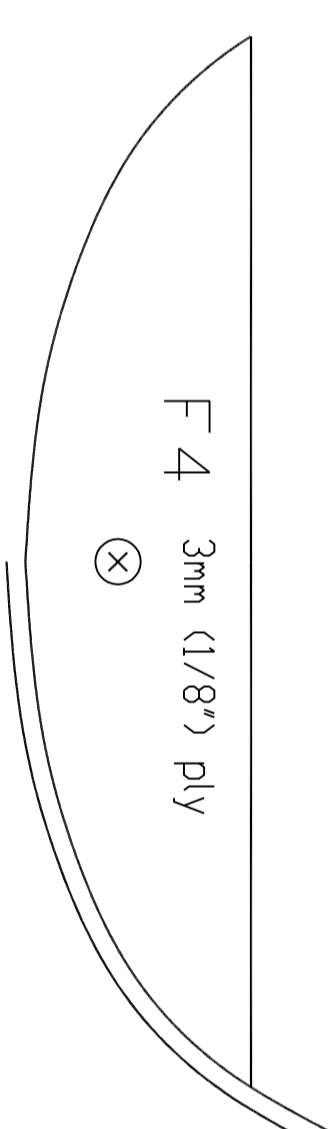


F4
3mm (1/8") ply

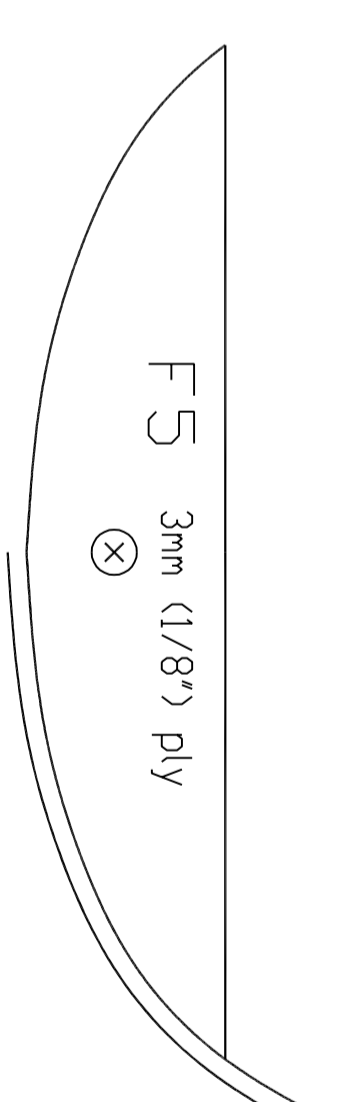

F5
3mm (1/8") ply


Note:
If you are going to cut lightening holes in the formers, take note that former F7B supports and forms part of the wing joiner box and you should take this into account when planning where to cut the holes.

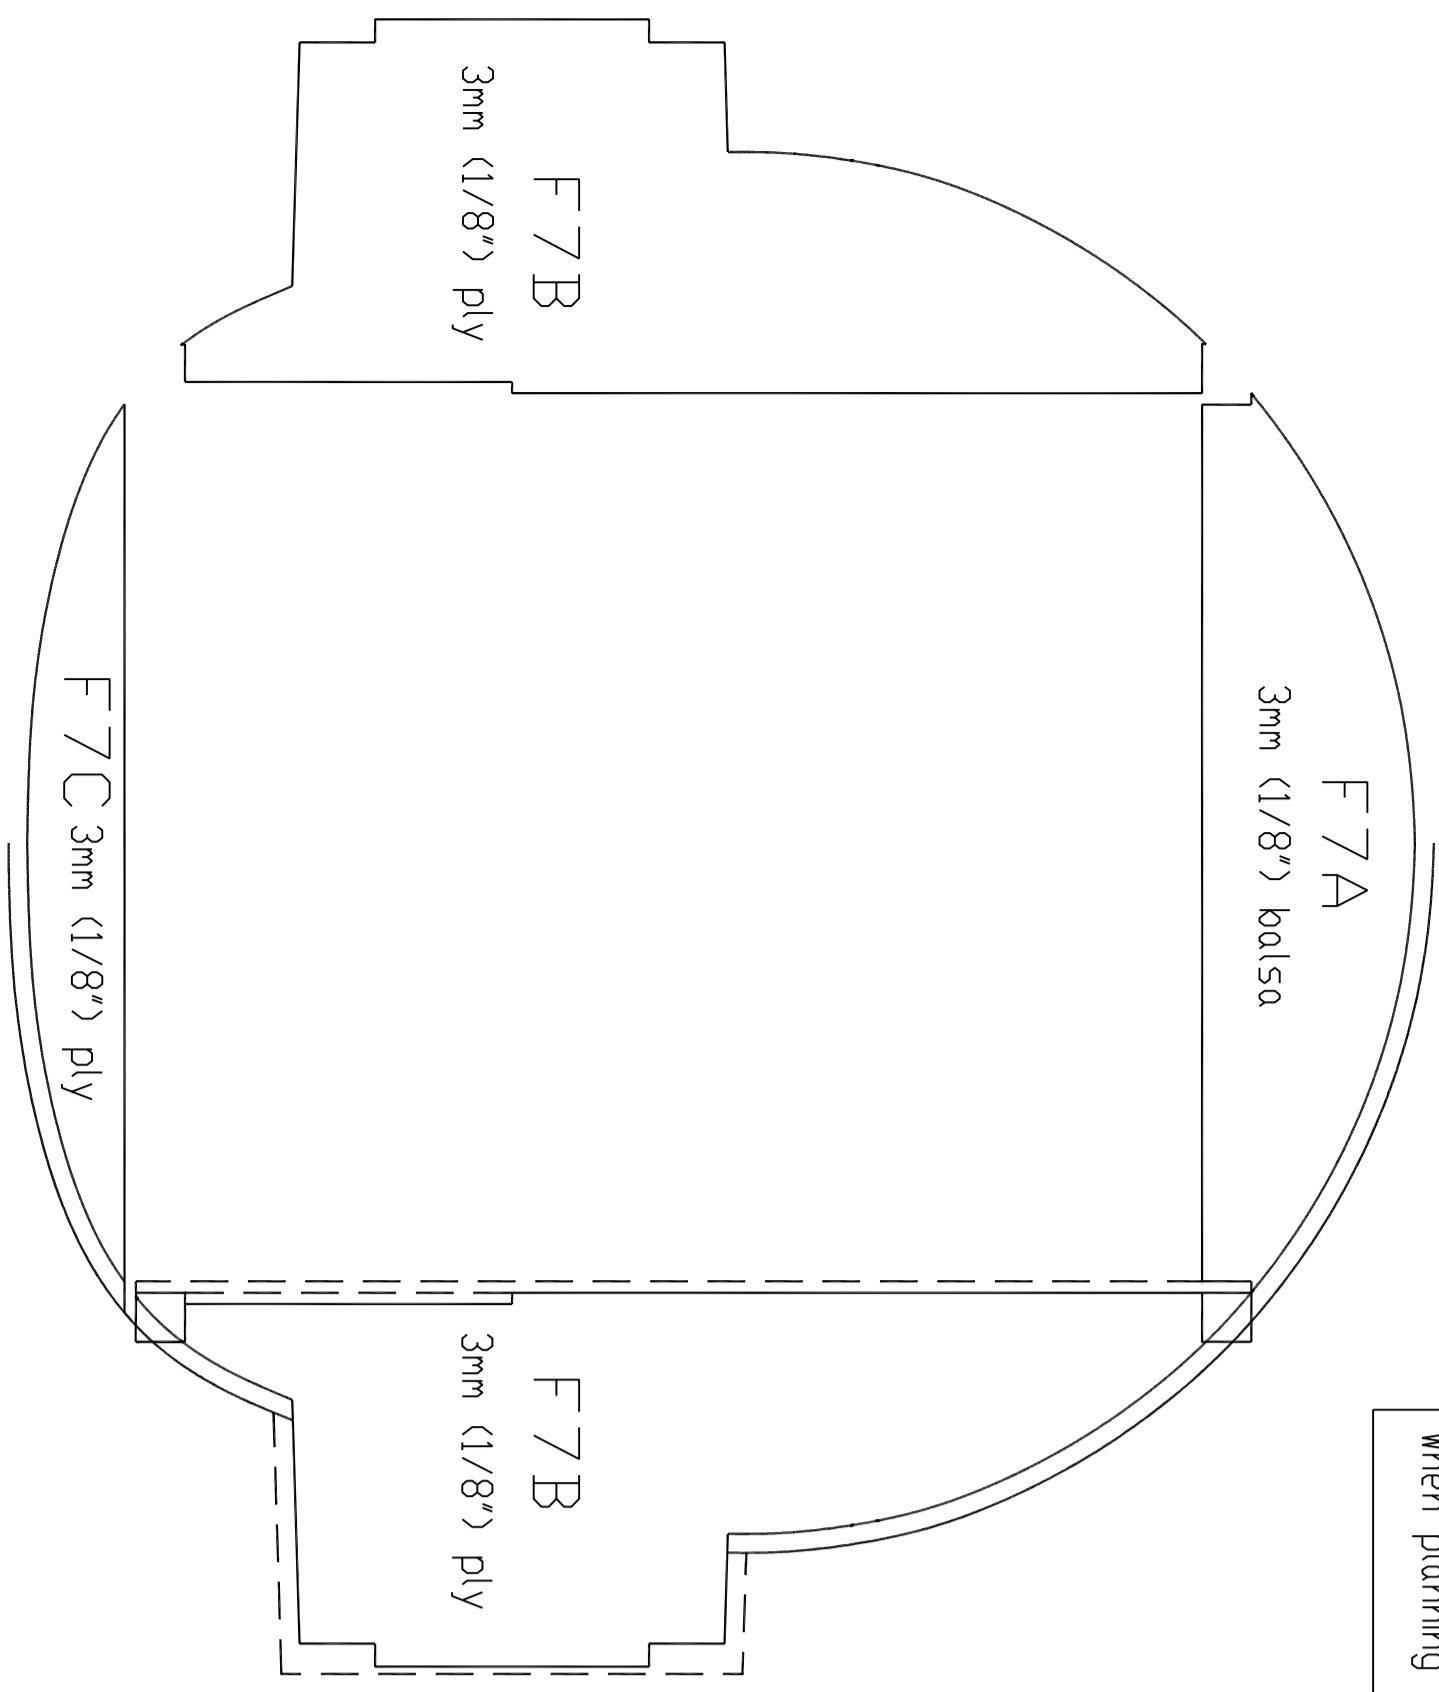

F7A
3mm (1/8") balsa

F7B
3mm (1/8") ply


F7C
3mm (1/8") ply

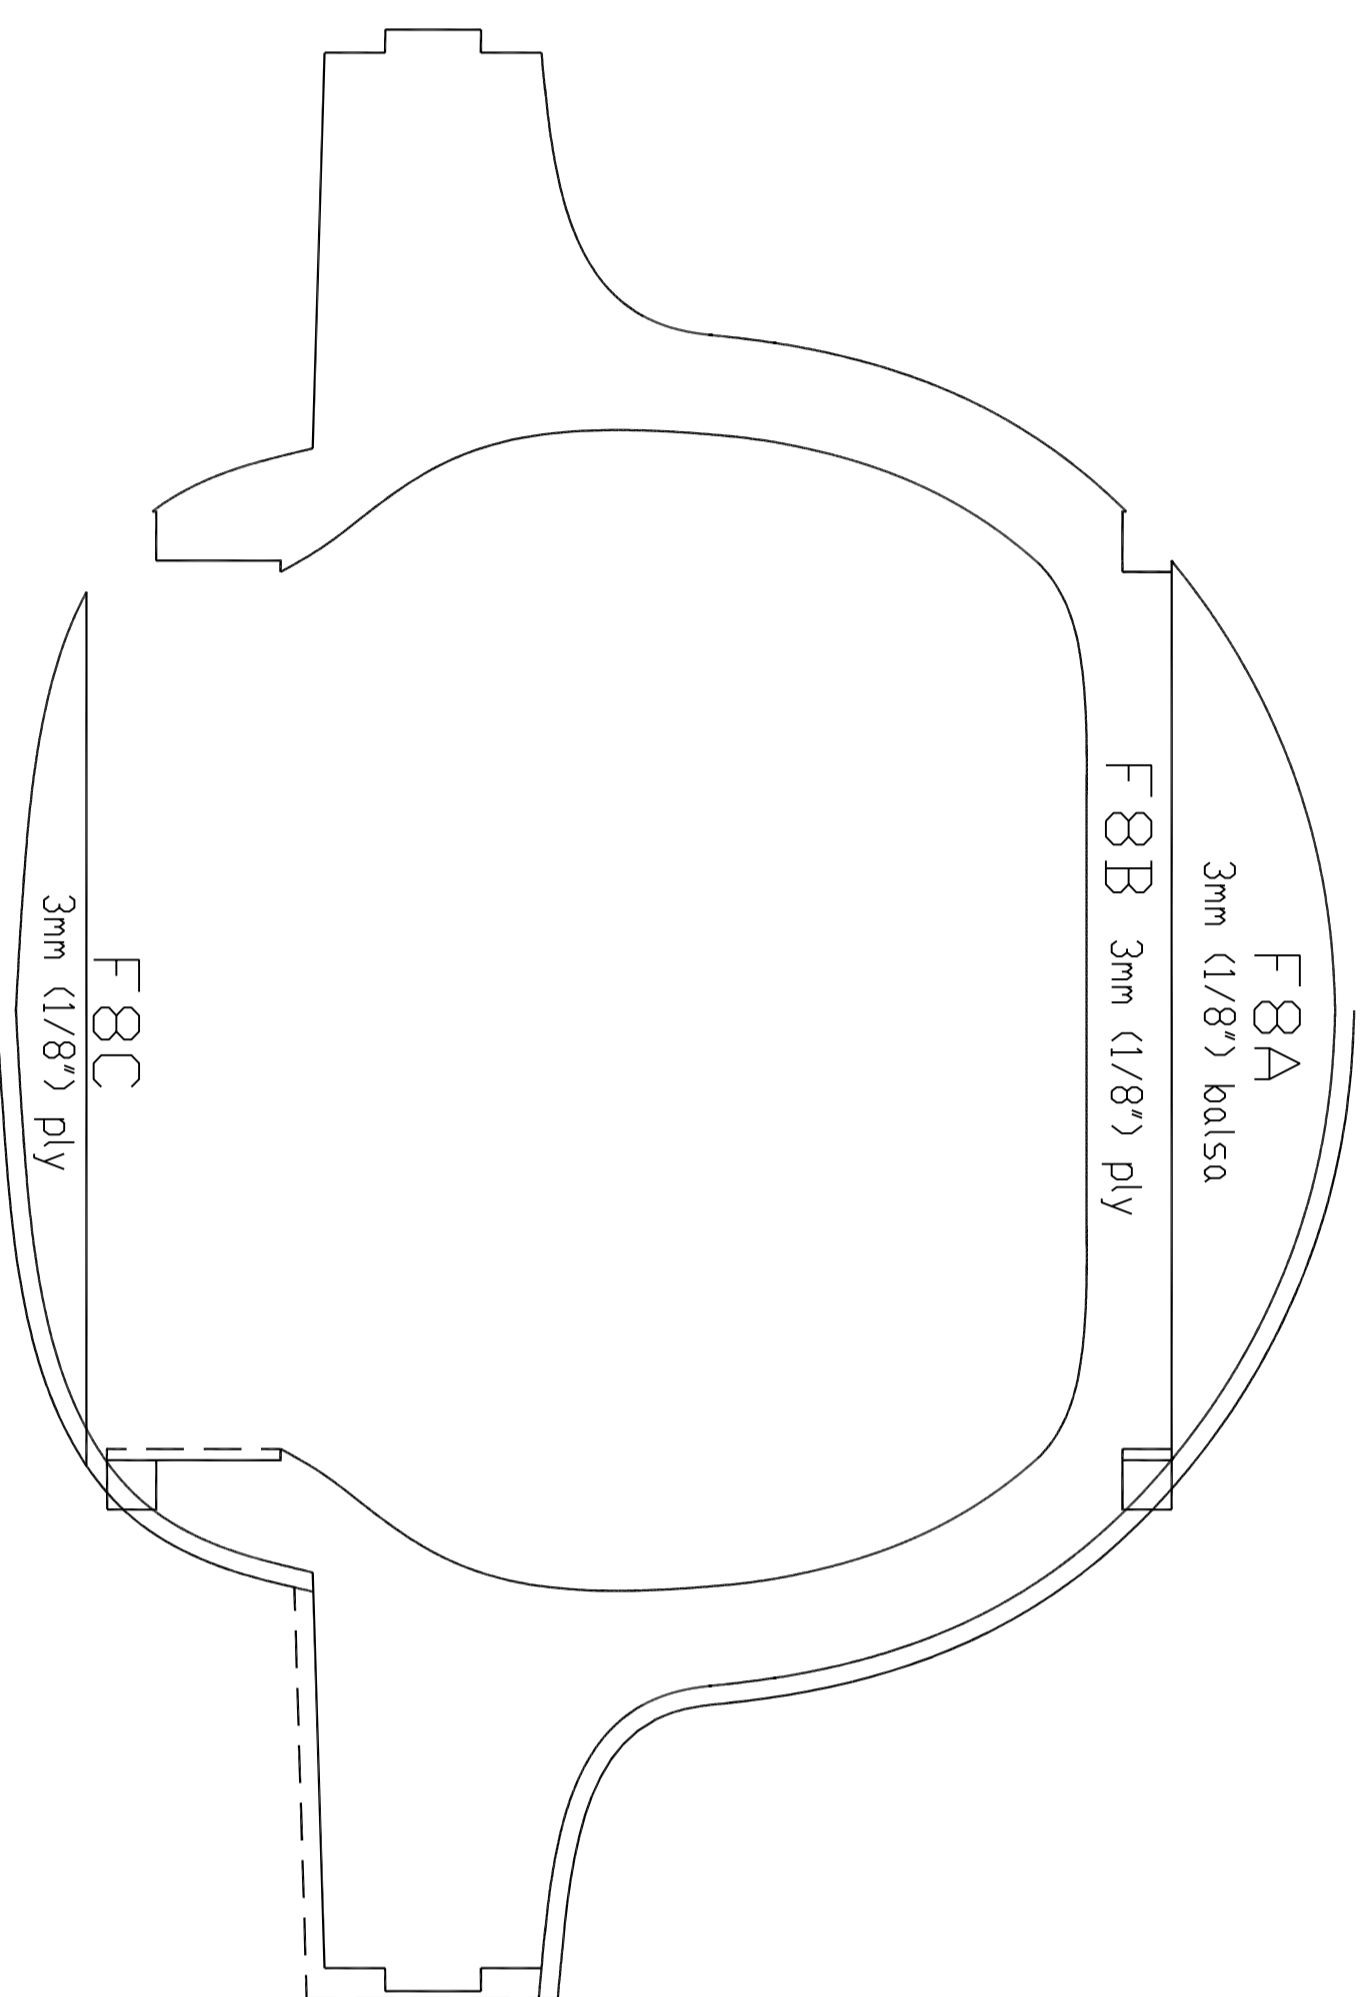

F8A
3mm (1/8") balsa


F8B
3mm (1/8") ply

F8C
3mm (1/8") ply

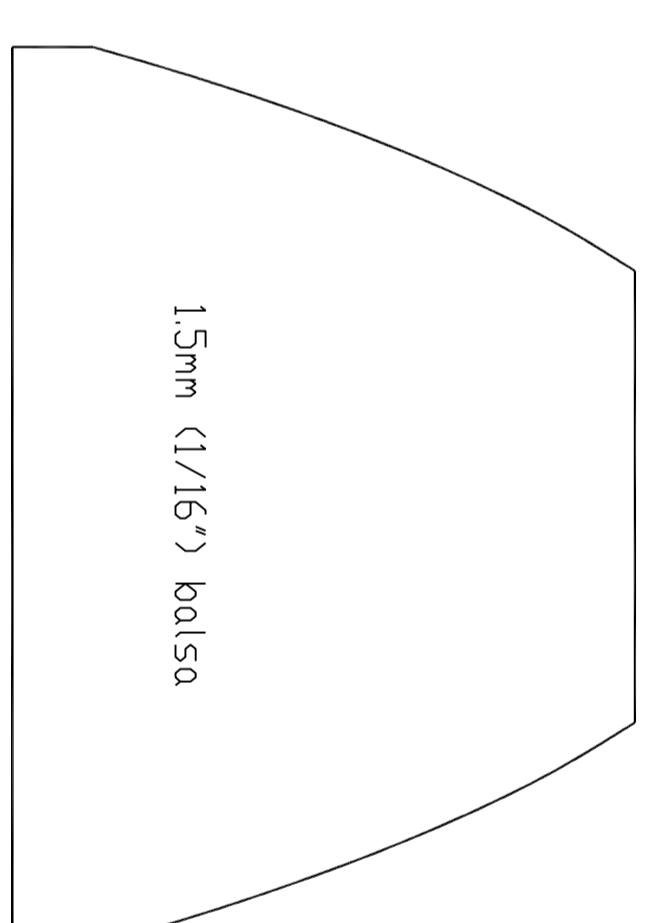


1.5mm (1/16") balsa

Front cockpit floor.

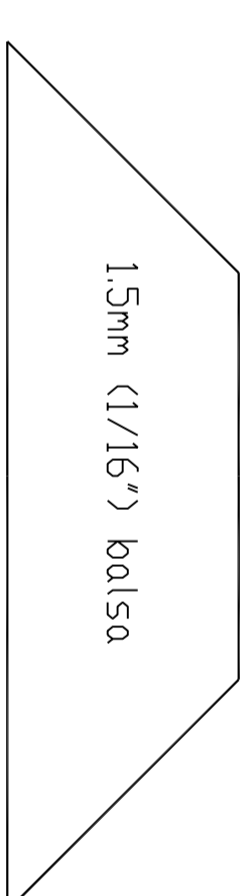


1.5mm (1/16") balsa

Instrument panel

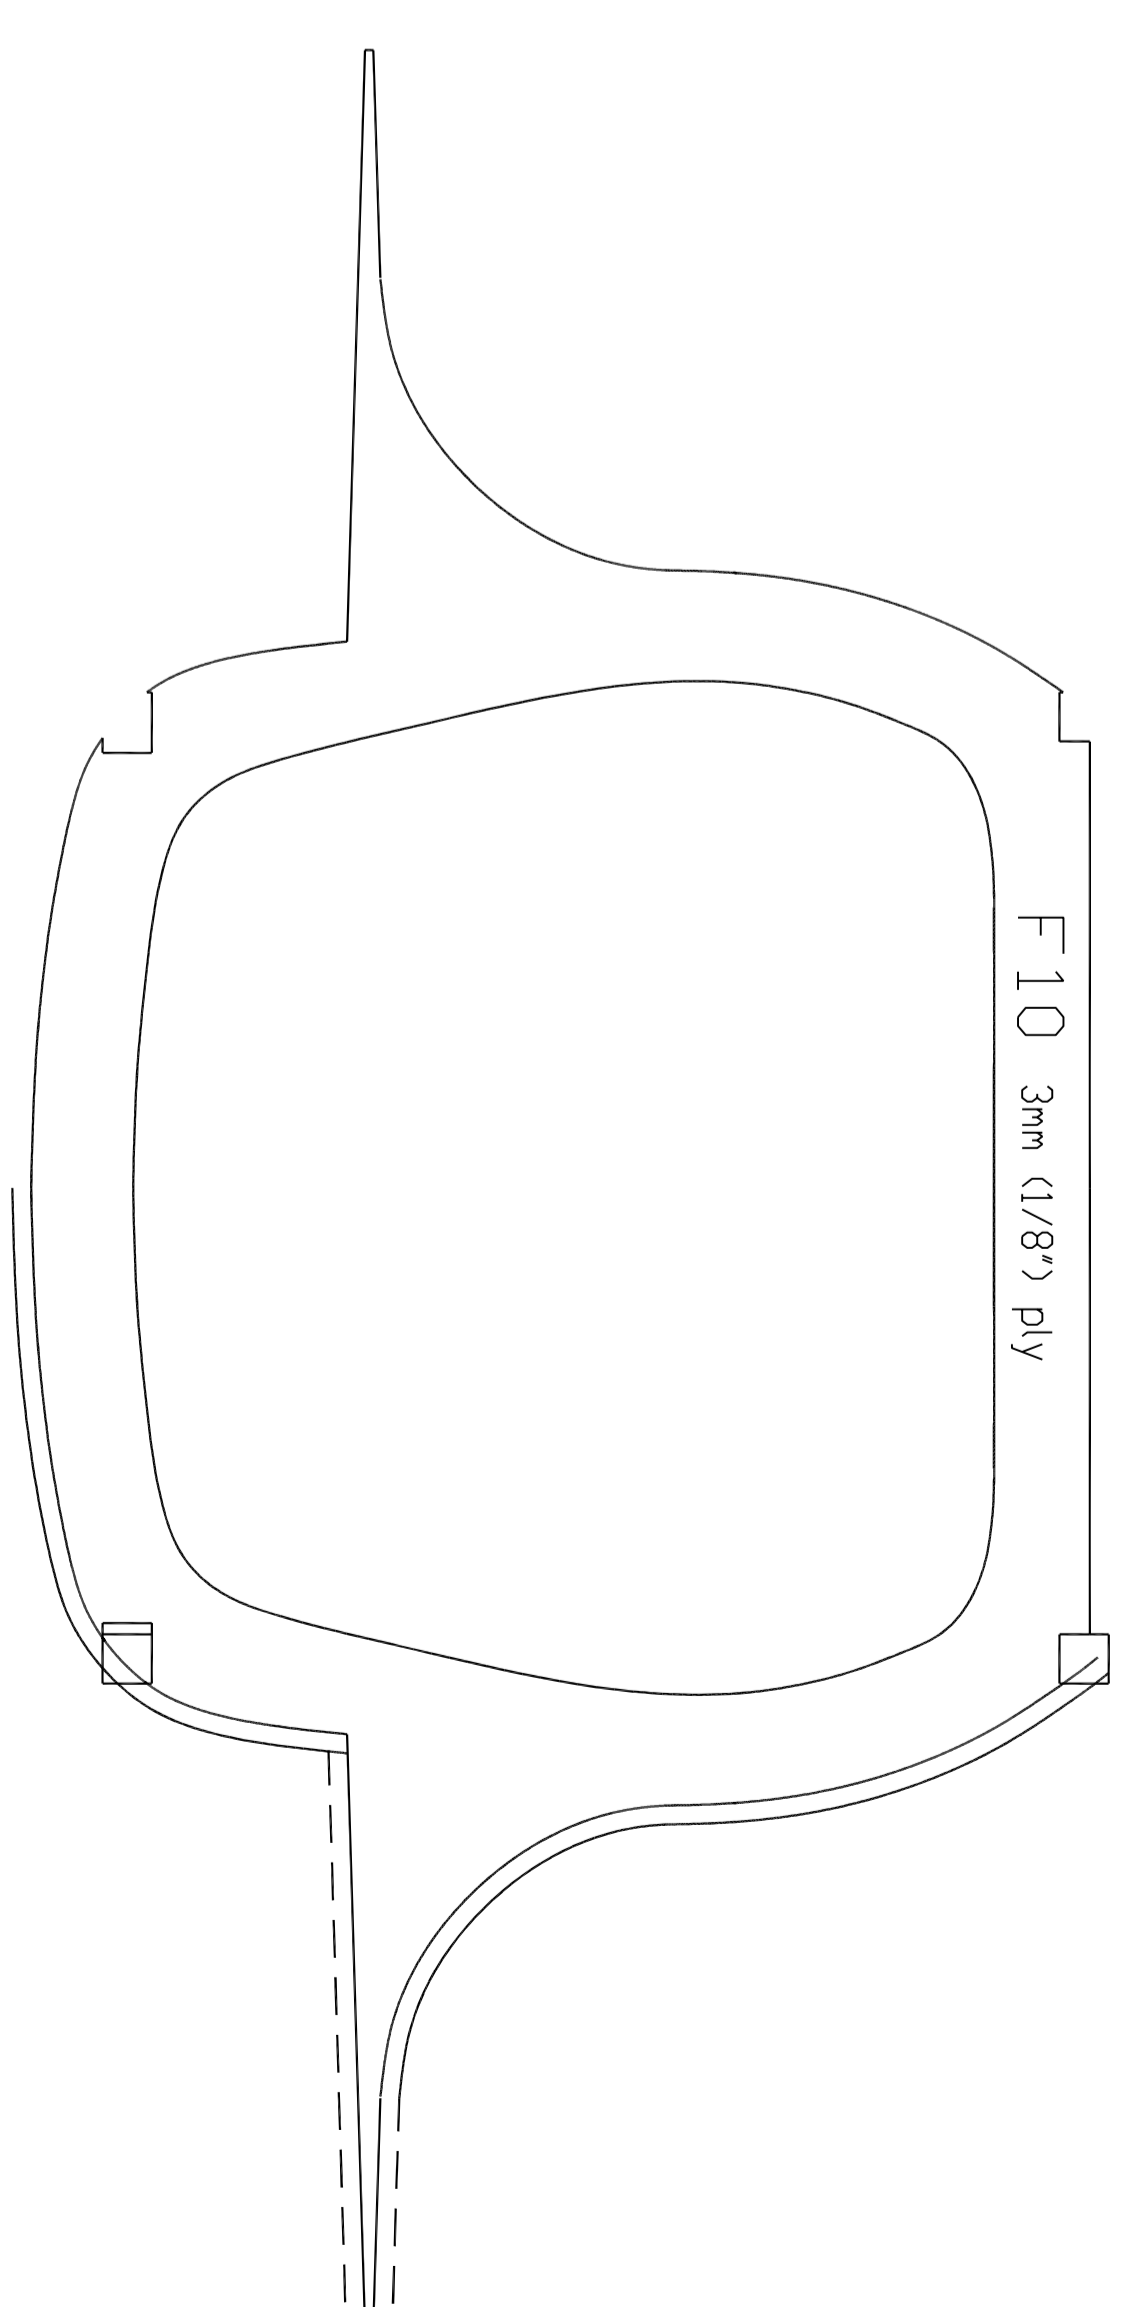


F10
3mm (1/8") ply

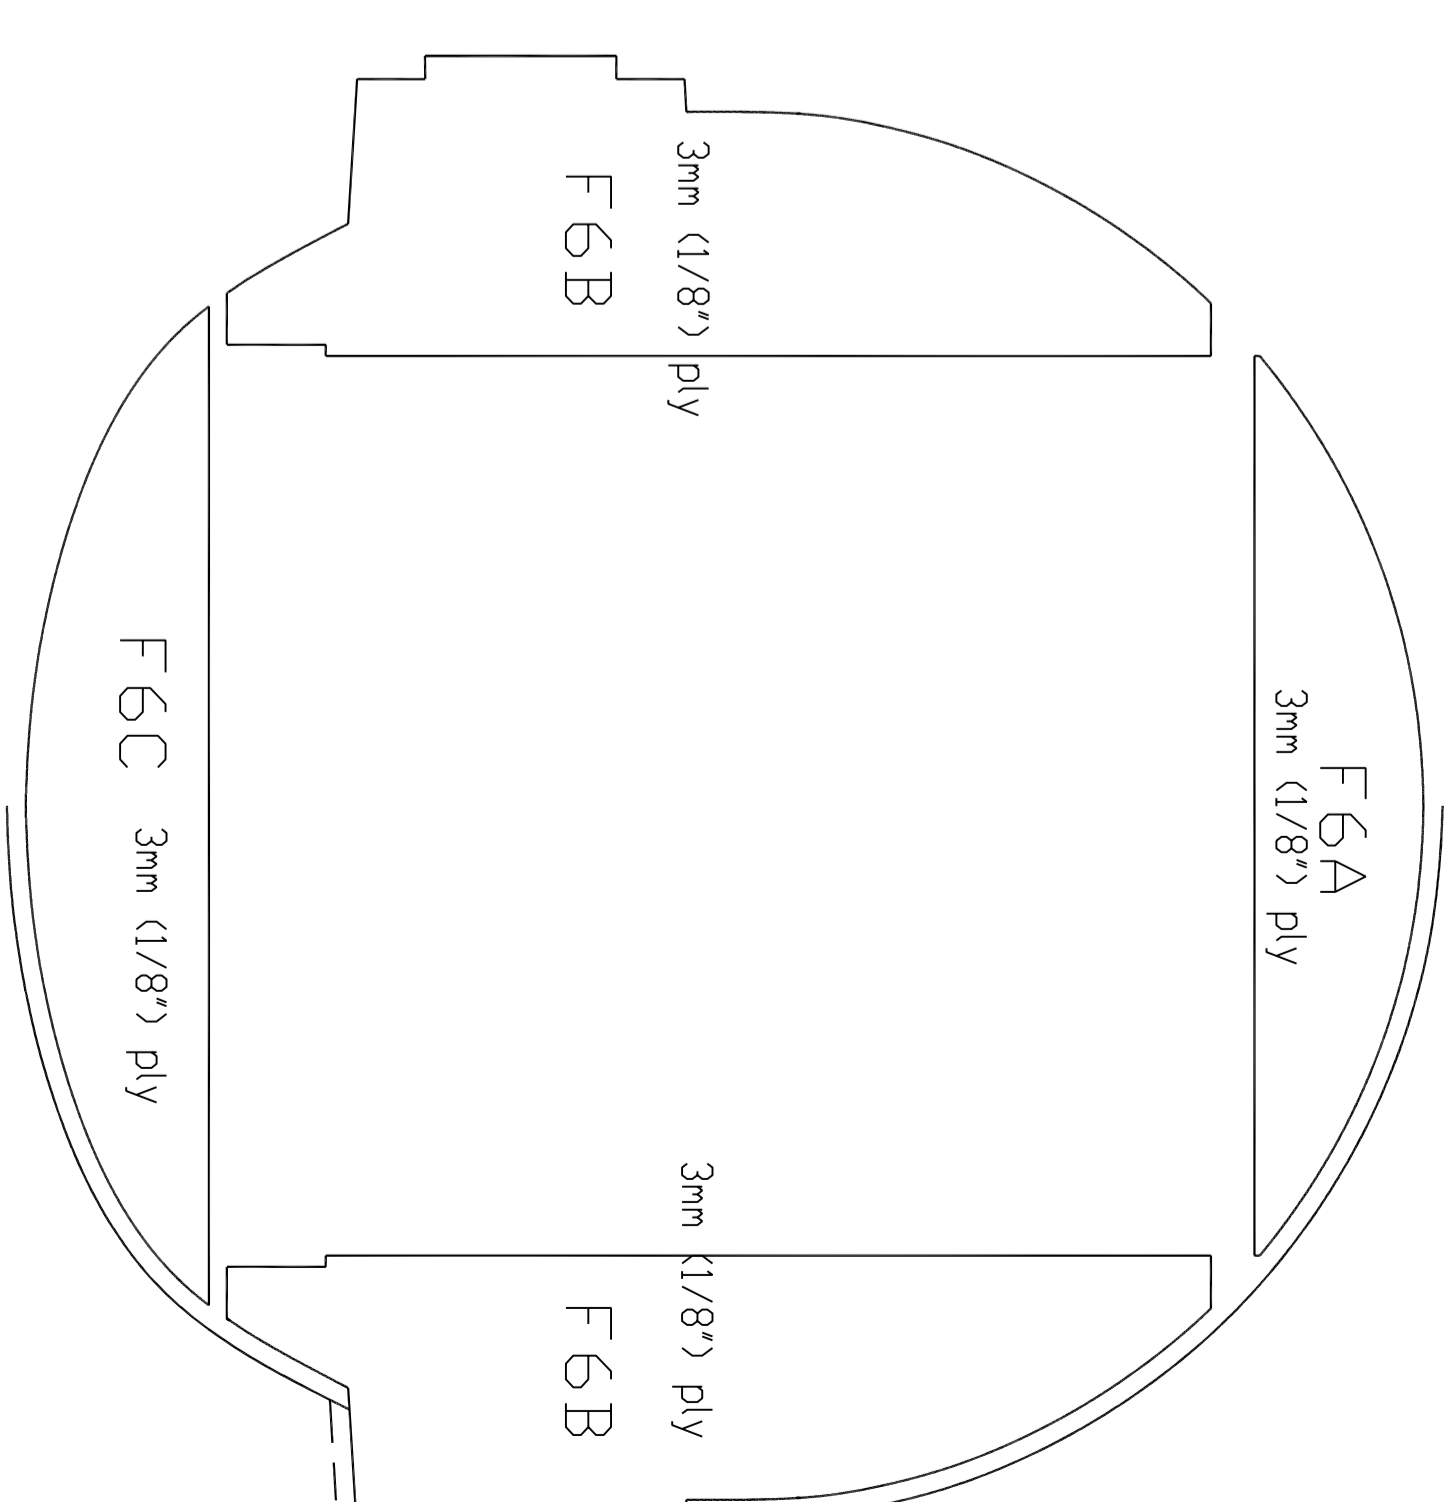

F6A
3mm (1/8") ply

F6B
3mm (1/8") ply


F6C
3mm (1/8") ply

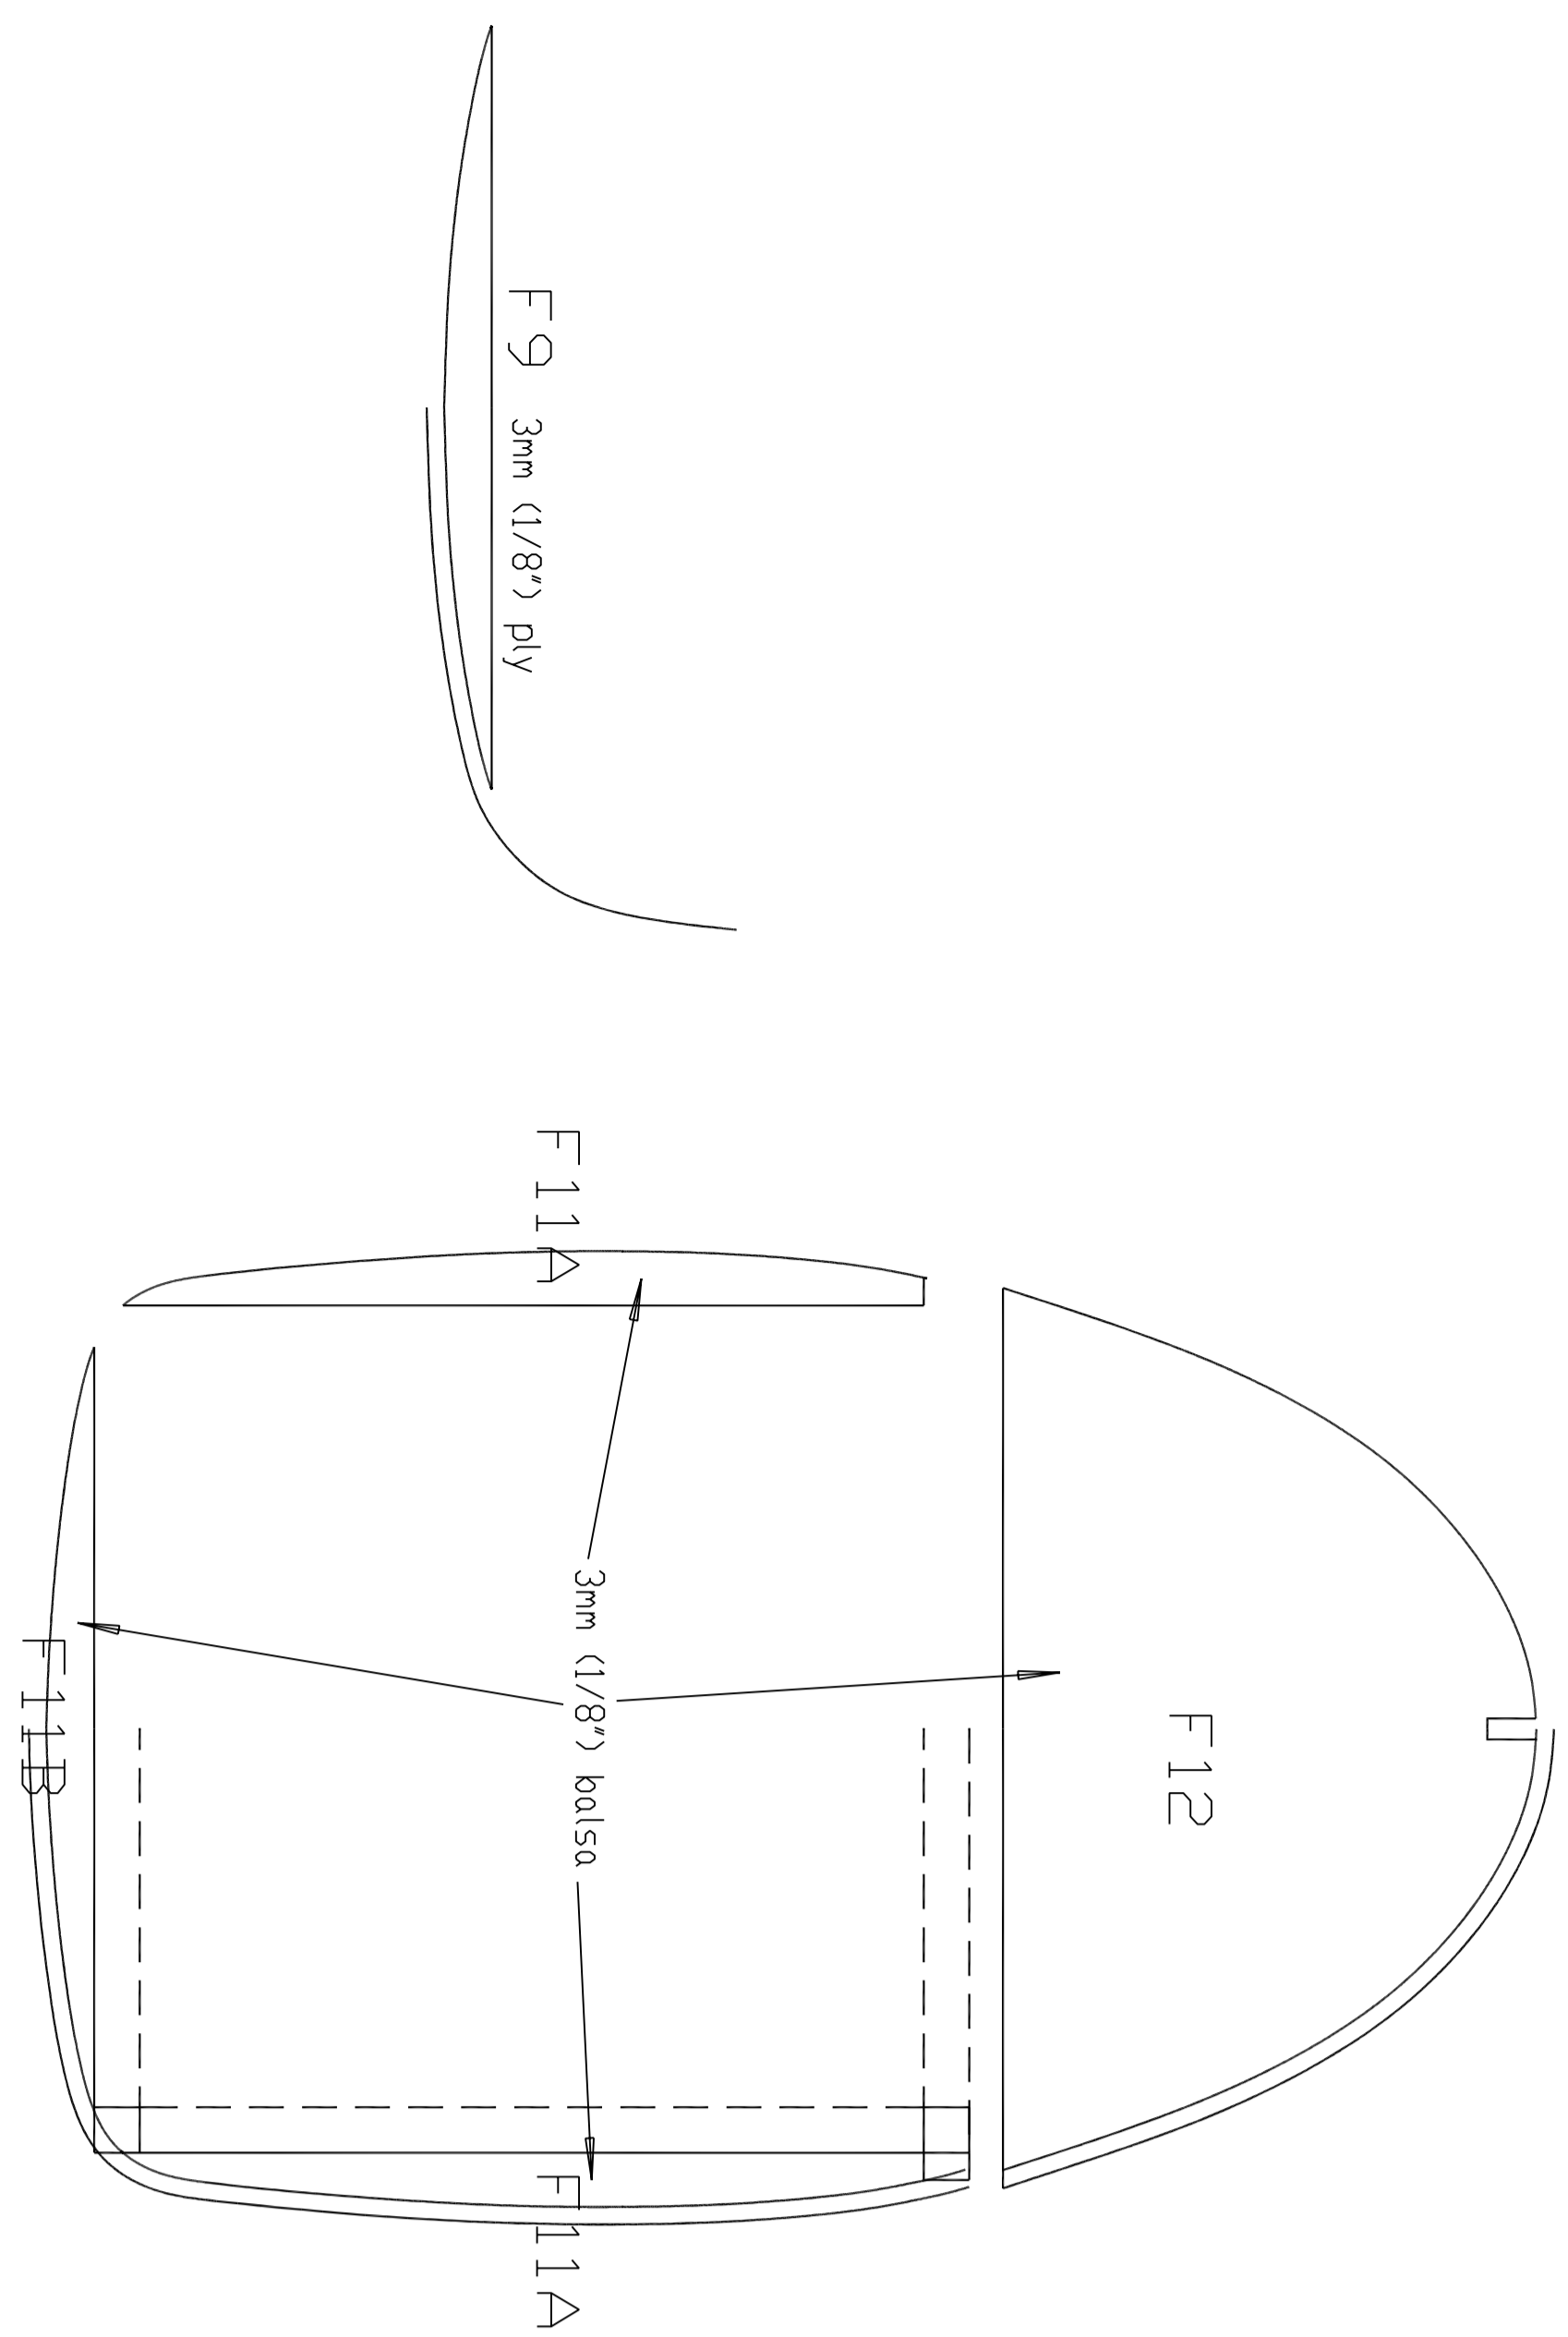

F9
3mm (1/8") ply

F11A
3mm (1/8") balsa


F11B
3mm (1/8") balsa

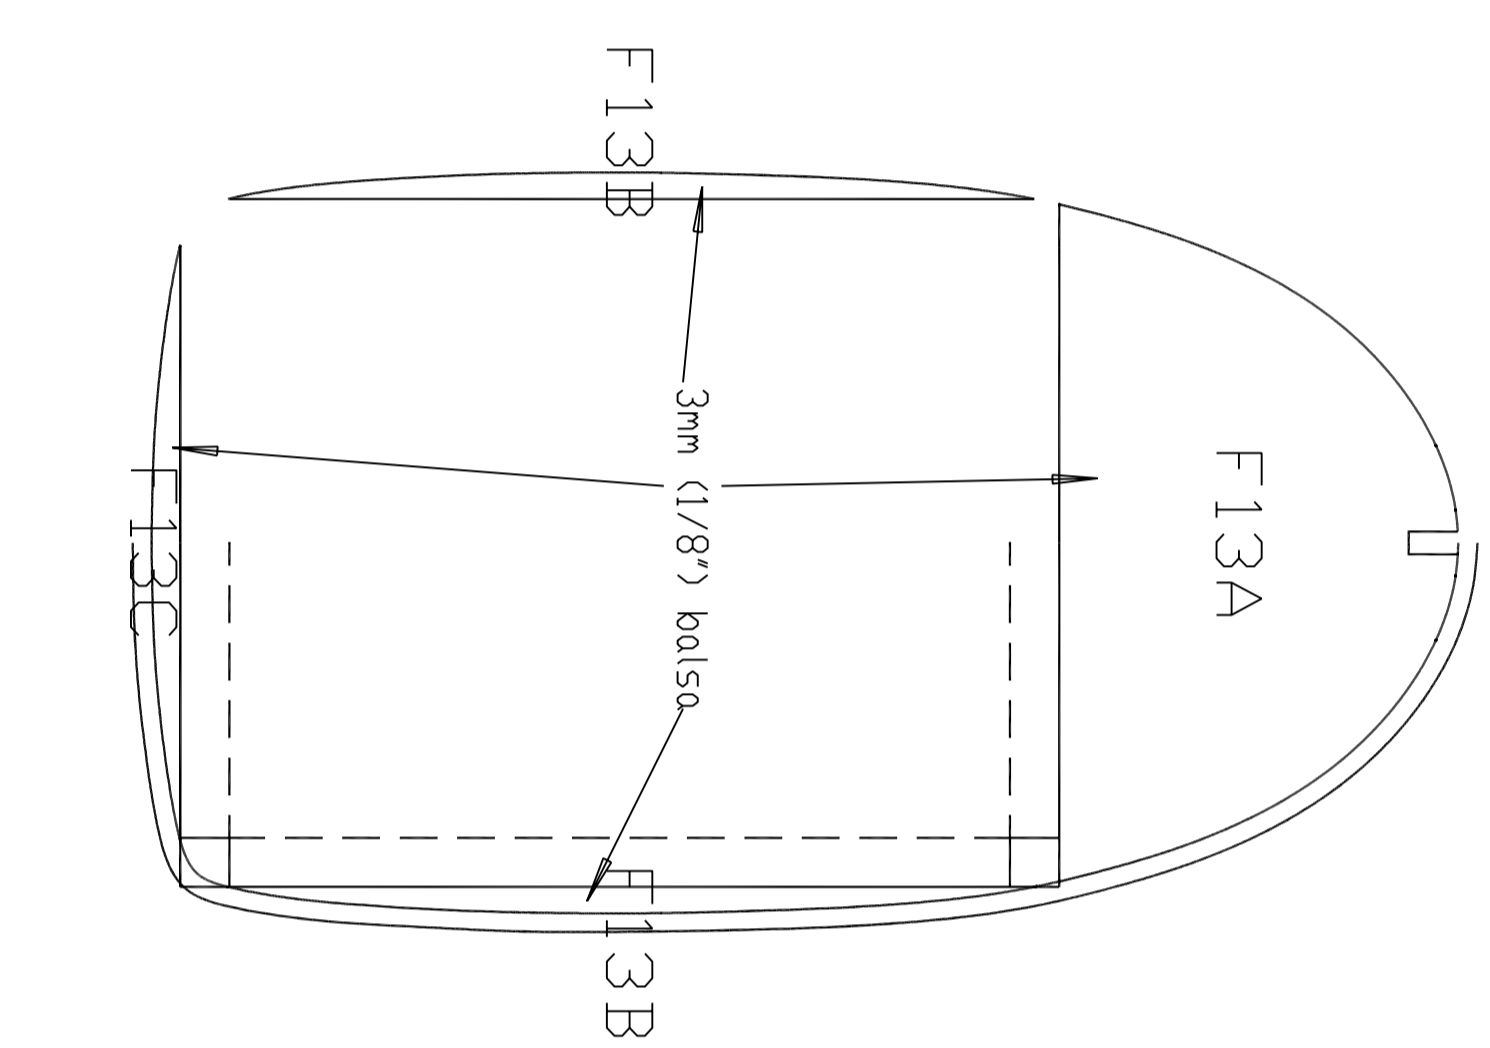

F13B
3mm (1/8") balsa

F13A
3mm (1/8") balsa


F13C
3mm (1/8") balsa

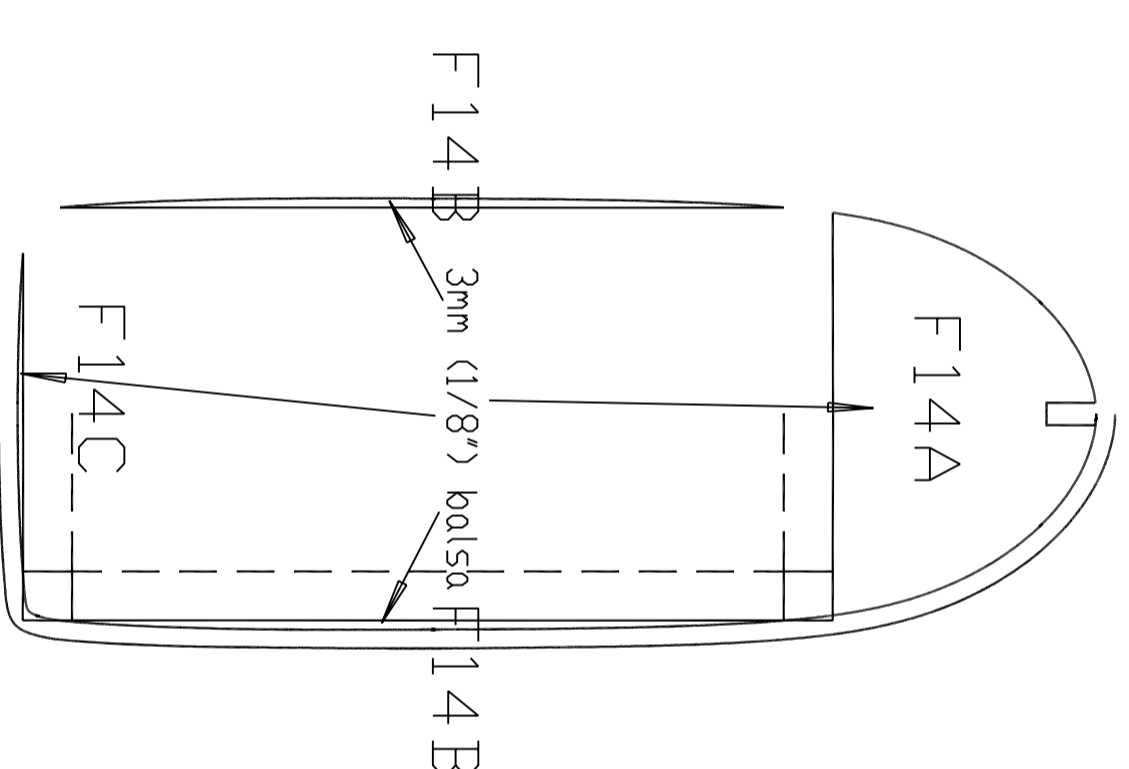


F14A
3mm (1/8") balsa

F14B
3mm (1/8") balsa


F14C
3mm (1/8") balsa

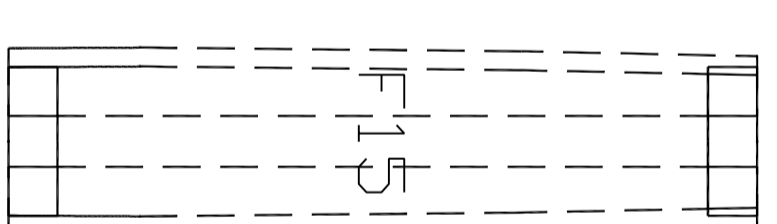


F15
1.5mm (1/16") ply

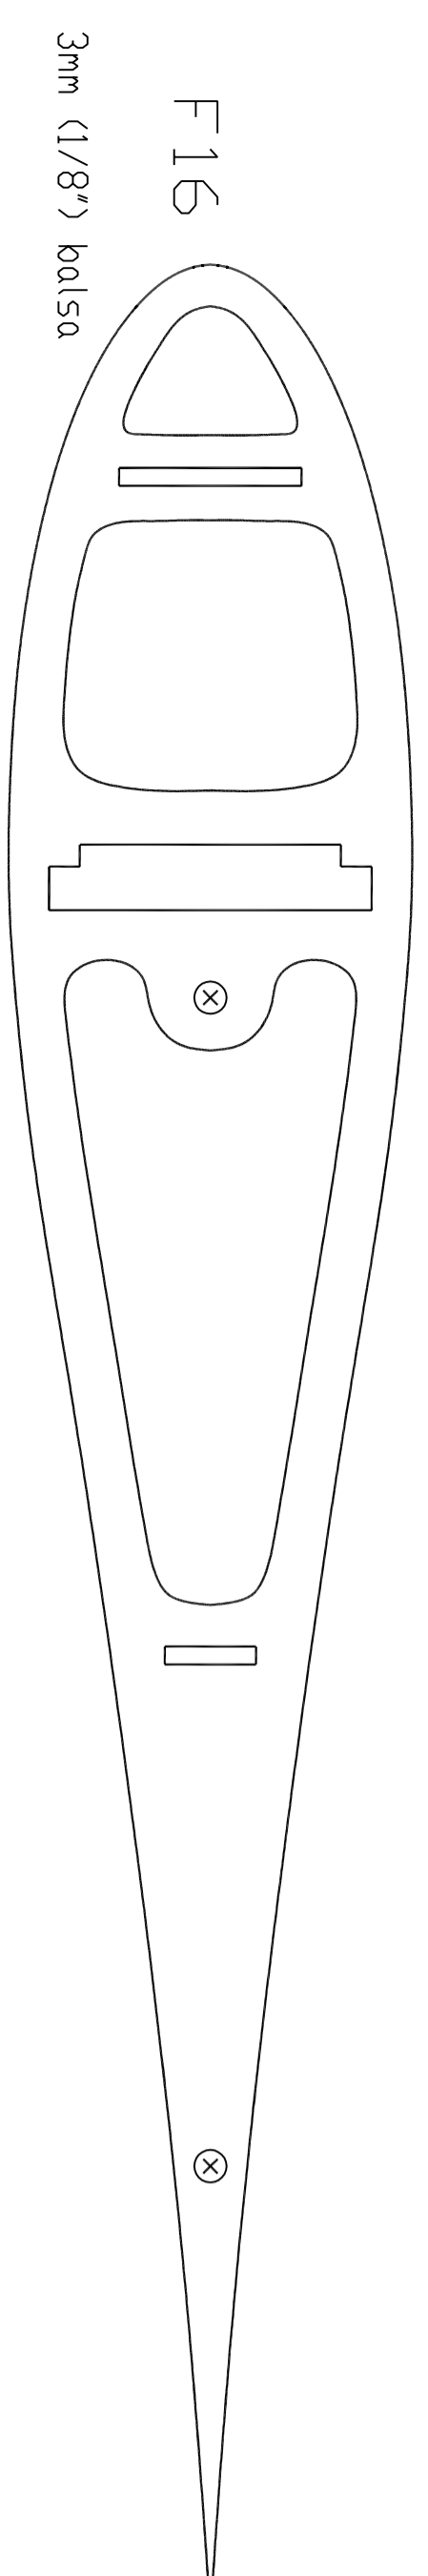


F16
3mm (1/8") balsa

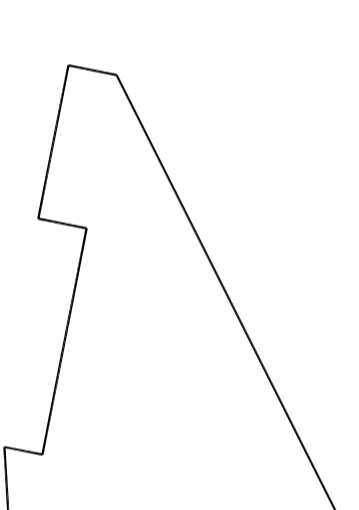

1.5mm (1/16") ply LG reinforcing

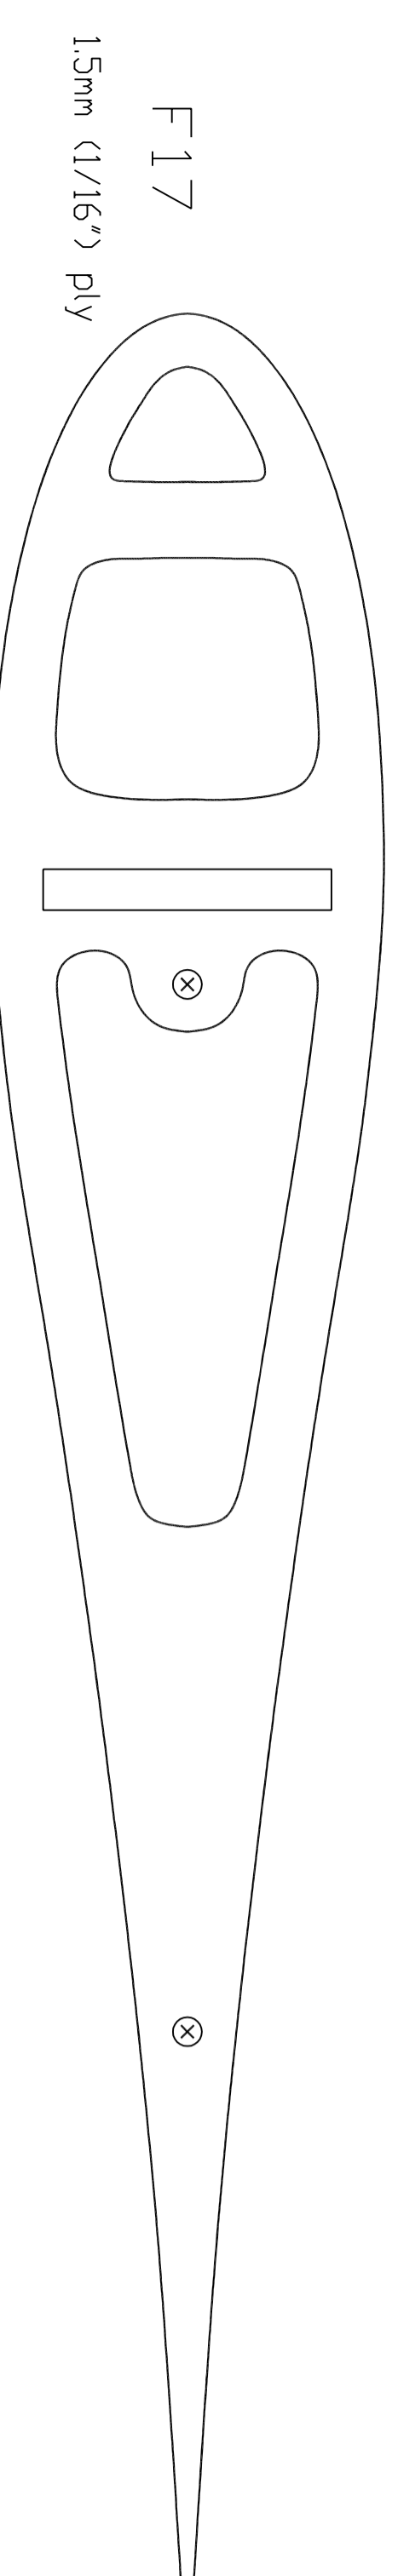


F17
1.5mm (1/16") ply

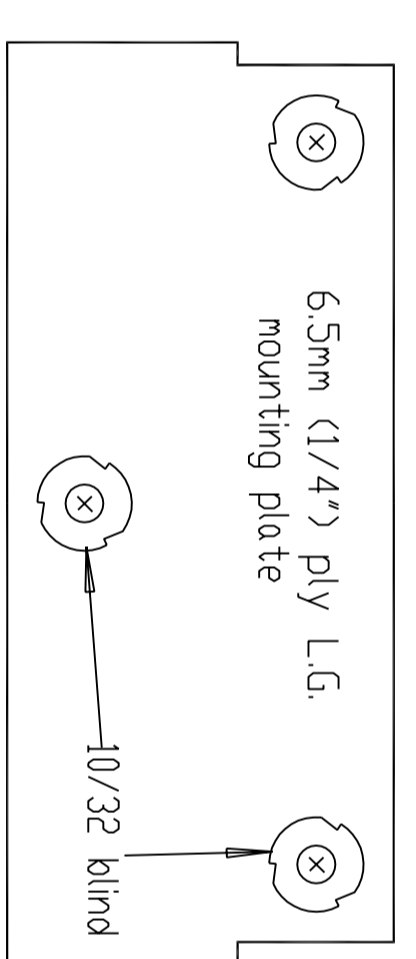


6.5mm (1/4") ply LG mounting plate


10/32 blind nuts

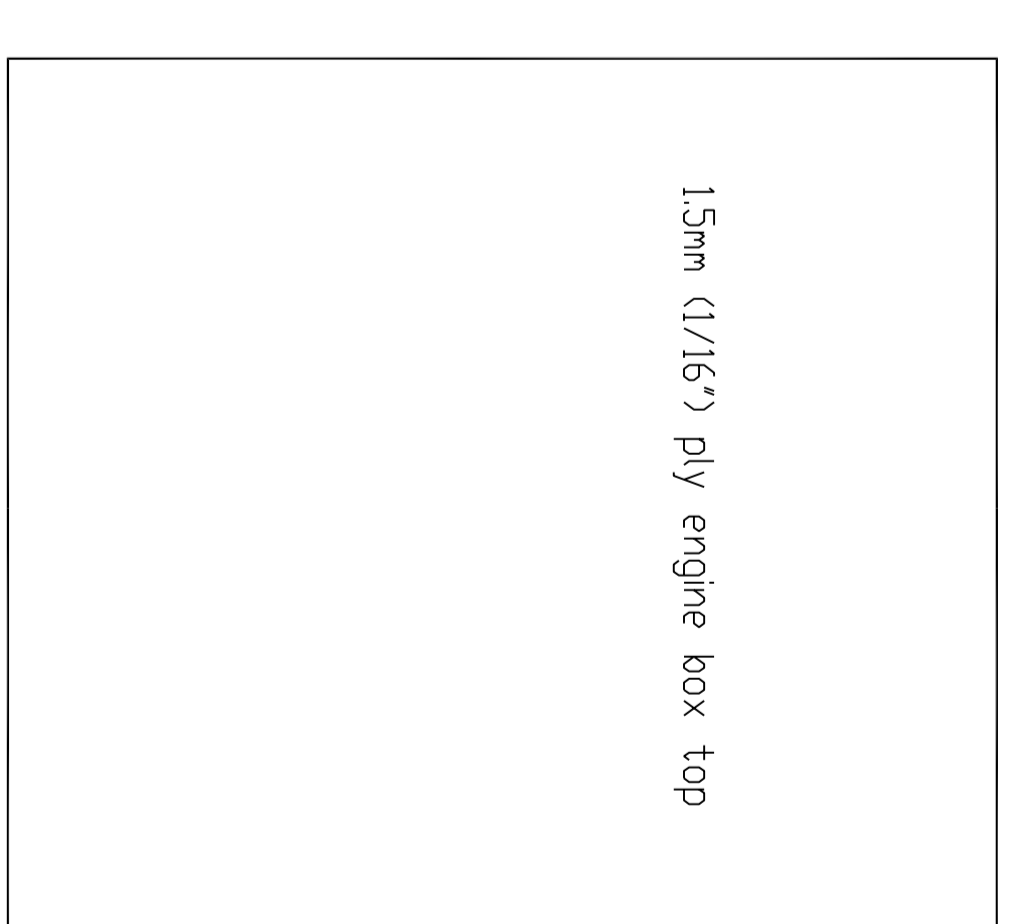

1.5mm (1/16") ply engine box top

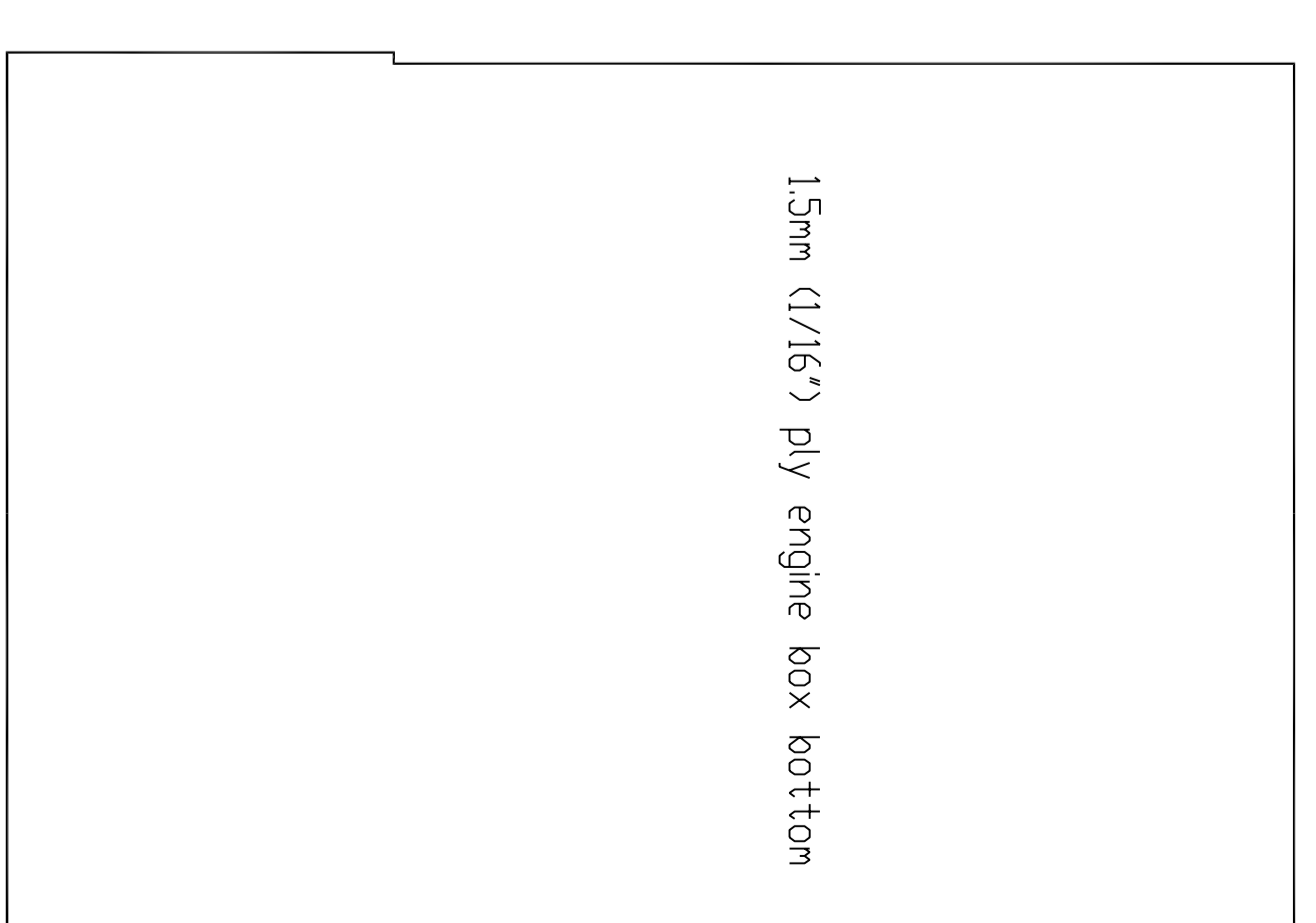

1.5mm (1/16") ply engine box bottom

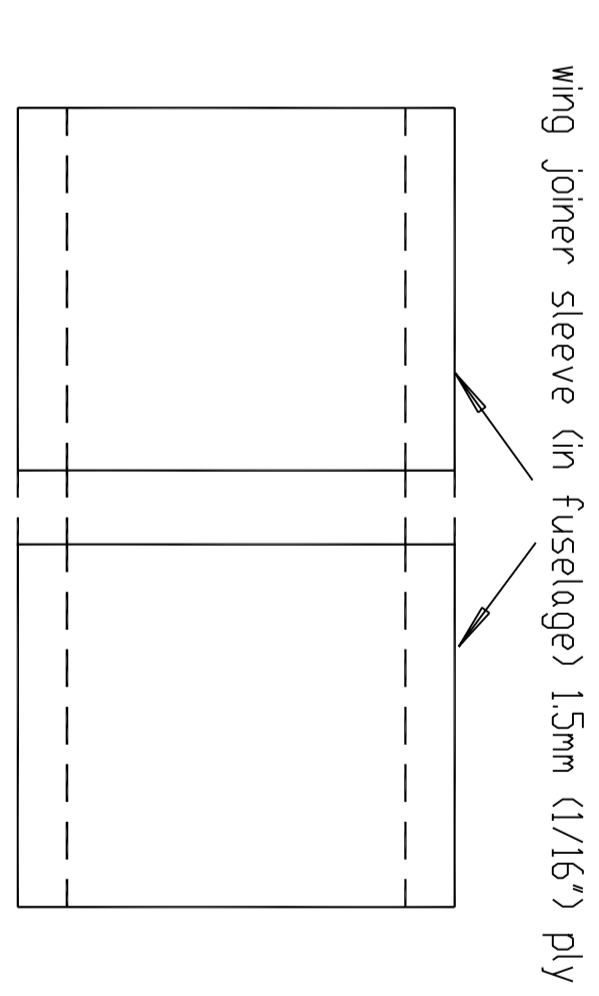

wing joiner sleeve (in fuselage) 1.5mm (1/16") ply