
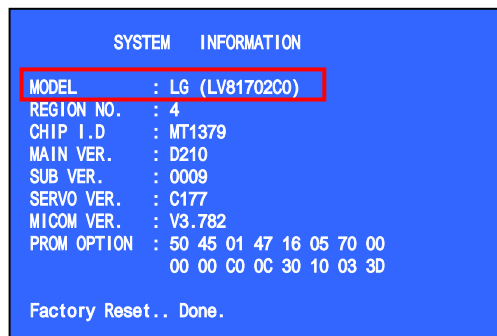


# How to firmware upgrade


## 1. Current system information display

- 1) At the SETUP menu screen, press / to select "TV Aspect" and press .
- 2) Locate the cursor at 16:9 Wide, and press '1 3 9 7 1 3 9 SELECT' in turn on remote control unit.
- 3) Check the 'MODEL'

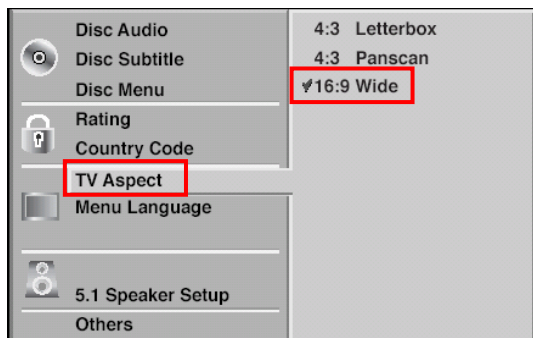

## 2. How to make a disc

- 1) When make a disc, make folder as figure.  
(LG\_DVD/FIRMWARE/UPGRADE/LG)
- 2) Rename the file name same as System information  
Model\_Version.mih Model.mih  
  
e.g.) LV81702C0\_V13632.mih LV81702C0.mih  
**Delete**
- 3) ~~After then, copy the file 'Model.mic' in 'LG' folder~~  
e.g.) ~~Copy 'LV8E0001D0.mic' in 'LG' folder~~

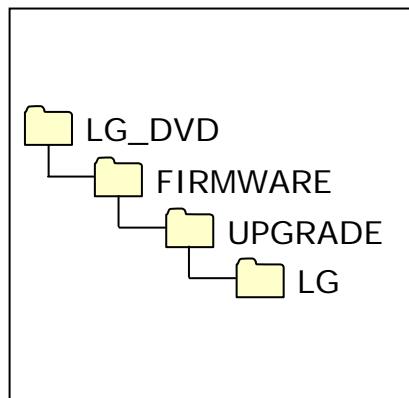


Recommended S/W : CD recording software  
(e.g.: Roxio Easy CD Creator, Nero Burning Rom)

Use file format : ISO9660

## 3. Upgrading

- 1) Insert program update disk, screen as following appears. Do following screen message.

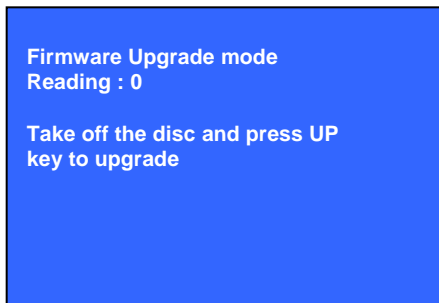

- 2) Disc tray opens automatically, and then you will take off the disc and press 'UP' key.
- 3) About 1 minute takes upgrade.
- 4) When program upgrade ends and disc tray is closed automatically.
- 5) DVD player is reset automatically.

## 4. Check the system information of the updated program

Compare the 'MODEL' with existing  
(Refer to No.1 Current system information display)