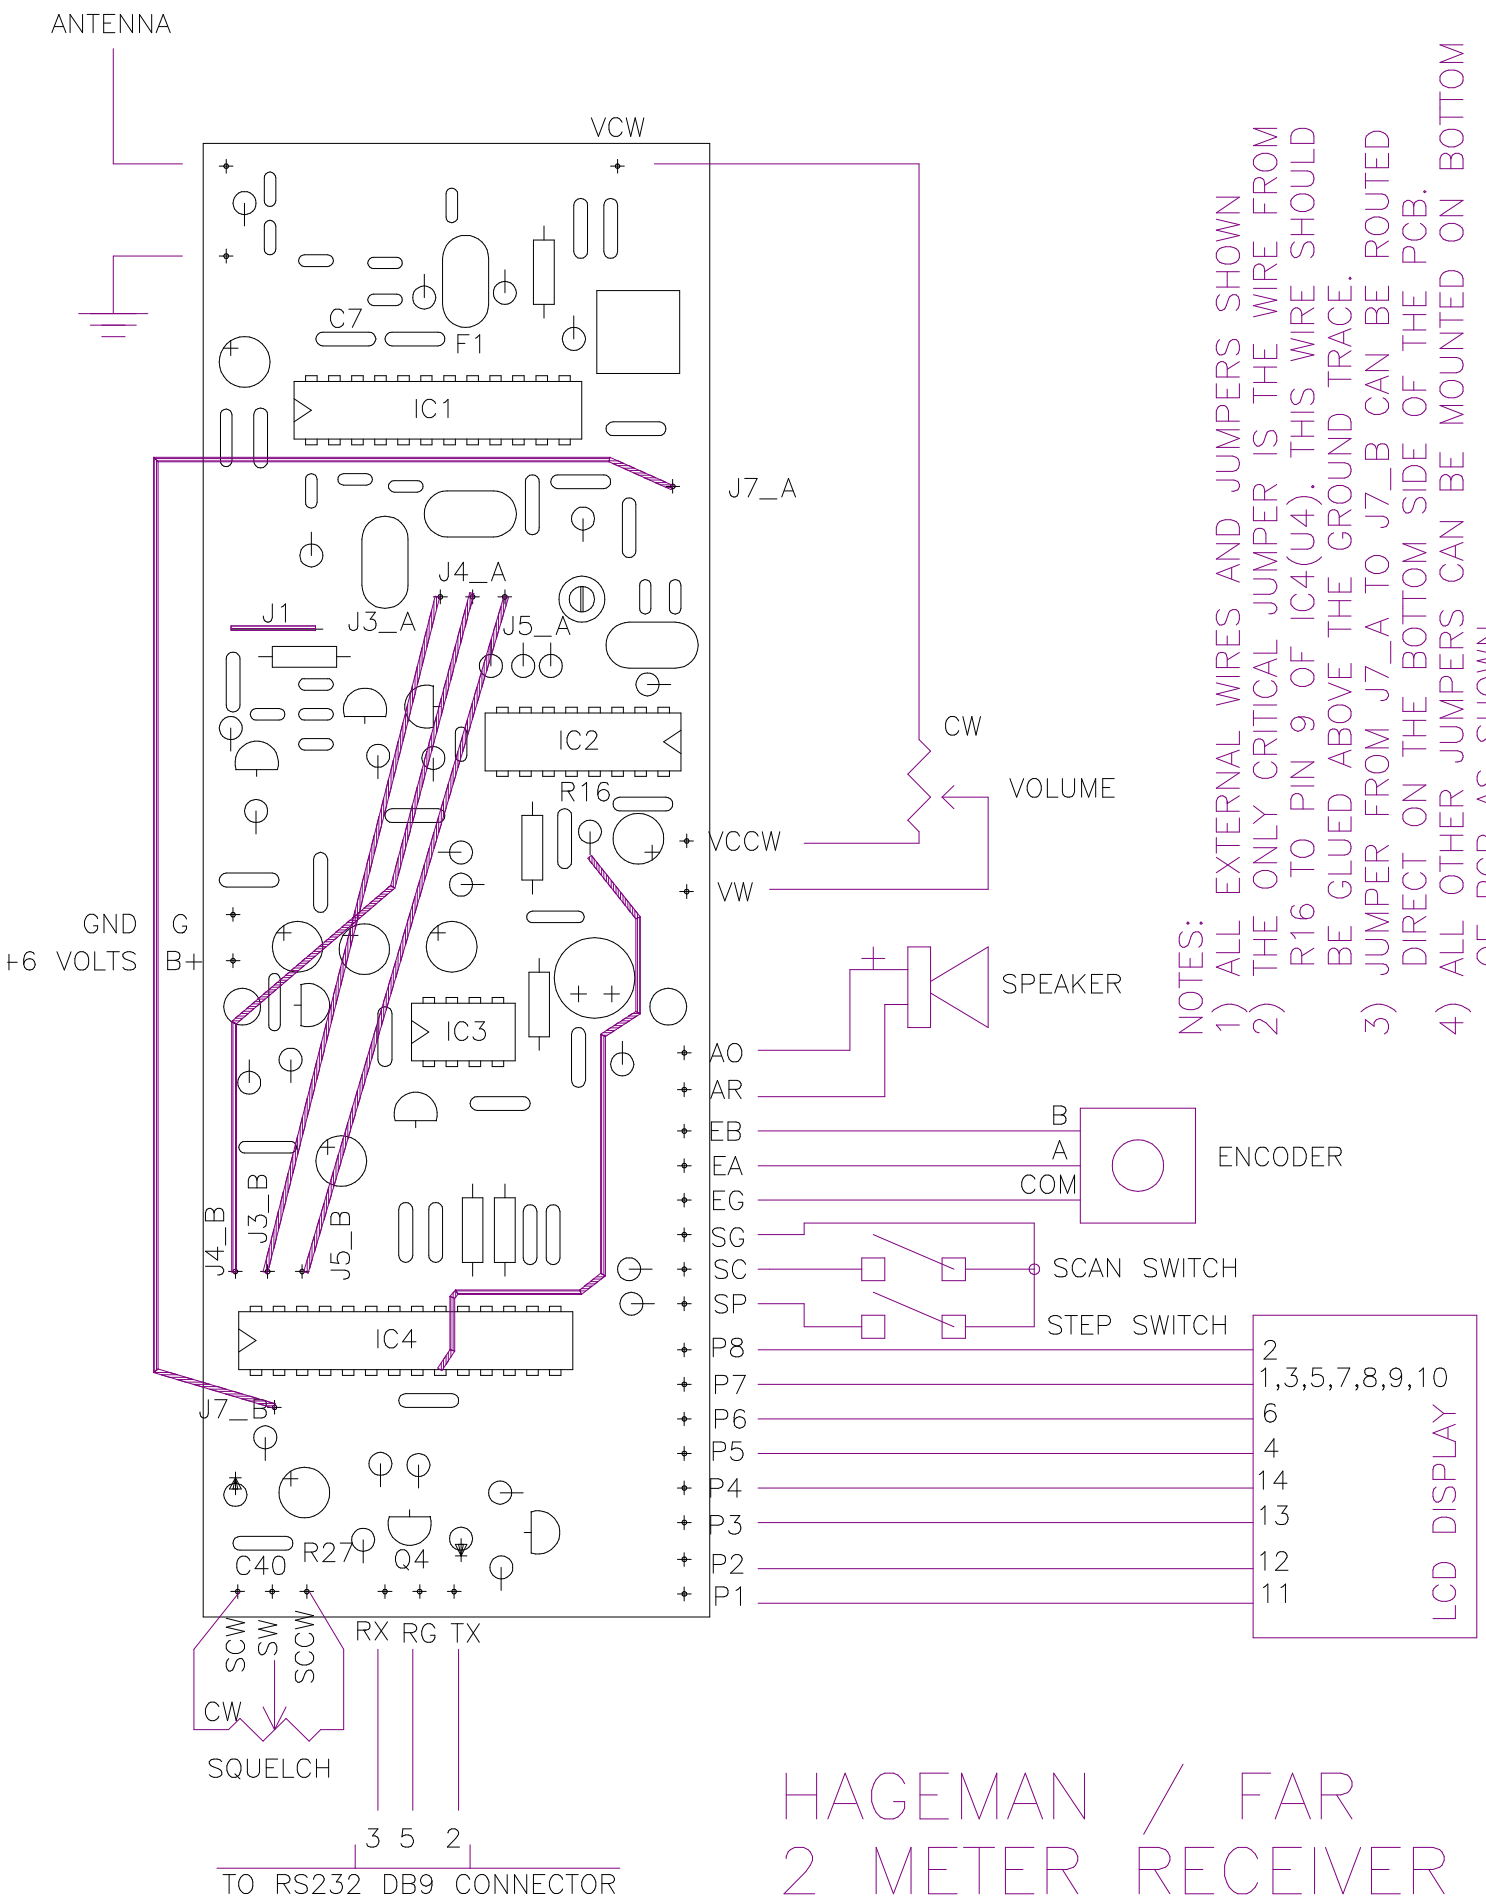

NOTES:
1) ALL EXTERNAL WIRES AND JUMPERS SHOWN
2) THE ONLY CRITICAL JUMPER IS THE WIRE FROM R16 TO PIN 9 OF IC4(U4). THIS WIRE SHOULD BE GLUED ABOVE THE GROUND TRACE.
3) JUMPER FROM J7_A TO J7_B CAN BE ROUTED DIRECT ON THE BOTTOM SIDE OF THE PCB.
4) ALL OTHER JUMPERS CAN BE MOUNTED ON BOTTOM OF PCB AS SHOWN.
5) SEE ARTICLE TEXT FOR CONSTRUCTION OPTIONS.

HAGEMAN / FAR
2 METER RECEIVER
REV: NOV98